

htc

User guide _____



HTC Desire EYE

Contents

Features you'll enjoy

Android 5.0 Lollipop update	9
-----------------------------	---

Unboxing

HTC Desire EYE	10
nano SIM card	11
Storage card	13
Charging the battery	16
Switching the power on or off	16
Want some quick guidance on your phone?	17

Phone setup and transfer

Setting up your new phone for the first time	18
Restoring your backup from your online storage	18
Transferring content from an Android phone	19
Transferring content from an iPhone	20
Transferring contacts from your old phone through Bluetooth	20
Other ways of getting contacts and other content	20
Transferring photos, videos, and music between your phone and computer	21
Home screen	21
Using Quick Settings	22
Getting to know your settings	23
Updating your phone's software	23
Getting apps from Google Play	25
Downloading apps from the web	26
Uninstalling an app	26

Your first week with your new phone

About waterproof protection	27
Basics	30
Motion Launch	38
Notifications	41
Working with text	42
Battery	46
HTC Dot View	49
HTC Guide	51

Personalizing

Making HTC Desire EYE truly yours	52
Ringtones, notification sounds, and alarms	52
Home wallpaper	53

Launch bar	53
Adding Home screen widgets	53
Adding Home screen shortcuts	54
Editing Home screen panels	55
Changing your main Home screen	56
Grouping apps on the widget panel and launch bar	57
Arranging apps	57
Lock screen	58

HTC BlinkFeed

What is HTC BlinkFeed?	60
Turning HTC BlinkFeed on or off	60
Ways of adding content on HTC BlinkFeed	61
Customizing the Highlights feed	62
Saving articles for later	62
Posting to your social networks	63
Removing content from HTC BlinkFeed	63

Camera

Camera basics	64
Selfies and people shots	68
Split Capture and Crop-Me-In	71
Panoramic shots	72
Other camera features	74
Camera settings	75

Gallery

Viewing photos and videos in Gallery	77
Adding photos or videos to an album	79
Copying or moving photos or videos between albums	80
Tagging photos and videos	80
Searching for photos and videos	81
Finding matching photos	82
Editing your photos	82
Using Face Fusion	83
Viewing Pan 360 photos	84
Creating an animated gif	85
Creating an action sequence shot	85
Editing a group shot	86
Removing unwanted objects in a photo	86
Trimming a video	86
Saving a photo from a video	87
Changing the video playback speed	87
Viewing a Zoe in Gallery	88

Video chat and phone calls

Video chat	89
Making a call with Smart dial	90
Dialing an extension number	91
Returning a missed call	91
Speed dial	91

Calling a number in a message, email, or calendar event	92
Making an emergency call	92
Receiving calls	92
What can I do during a call?	93
Setting up a conference call	94
Call History	94
Switching between silent, vibrate, and normal modes	95
Home dialing	95

Messages

Sending a text message (SMS)	96
Sending a multimedia message (MMS)	96
Sending a group message	97
Resuming a draft message	97
Replying to a message	97
Saving a text message as a task	98
Forwarding a message	98
Moving messages to the secure box	98
Blocking unwanted messages	99
Copying a text message to the nano SIM card	99
Deleting messages and conversations	100

Search and web browser

Getting instant information with Google Now	101
Searching HTC Desire EYE and the Web	103
Browsing the Web	104
Bookmarking a webpage	106
Using your browsing history	106
Clearing your browsing history	106

Entertainment

HTC Music	108
YouTube	111
FM Radio	113
Wireless media	113

Storage and files

Phone storage	117
File Manager	119
Google Drive	120

Sync, backup, and reset

Online sync	122
Backup	123
HTC Sync Manager	128
Reset	130

People

Your contacts list	132
--------------------	-----

Setting up your profile	133
Adding a new contact	133
Editing a contact's information	134
Getting in touch with a contact	135
Importing or copying contacts	135
Merging contact information	136
Sending contact information	137
Contact groups	137
Private contacts	138

Email

Mail	140
Gmail	145

Calendar

Viewing the Calendar	147
Scheduling or editing an event	148
Choosing which calendars to show	148
Sharing an event	149
Accepting or declining a meeting invitation	149
Dismissing or snoozing event reminders	150

Travel and maps

Location settings	151
Google Maps	151
HTC Car	153

Other apps

Using Scribble	156
Using the Clock	158
Checking Weather	159
Recording voice clips	159
Keeping track of your tasks	160
Kid Mode	161

Internet connections

Turning the data connection on or off	162
Managing your data usage	162
Wi-Fi connection	164
Connecting to VPN	165
Using HTC Desire EYE as a Wi-Fi hotspot	167
Sharing your phone's Internet connection by USB tethering	168

Wireless sharing

Bluetooth	169
NFC	171

Settings and security

Airplane mode	173
Scheduling when to turn data connection off	173
Automatic screen rotation	174
Setting when to turn off the screen	174
Screen brightness	174
Touch sounds and vibration	174
Changing the display language	175
Installing a digital certificate	175
Pinning the current screen	176
Disabling an app	176
Assigning a PIN to a nano SIM card	176
Setting a screen lock	177
Setting up Smart Lock	177
Hiding sensitive info from the lock screen	178

Trademarks and copyrights

Index

About this guide

In this user guide, we use the following symbols to indicate useful and important information:



This is a note. A note often gives additional information, such as what happens when you choose to do or not to do a certain action. A note also provides information that may only be applicable to some situations.



This is a tip. A tip gives you an alternative way to do a particular step or procedure, or lets you know of an option that you may find helpful.



This indicates important information that you need in order to accomplish a certain task or to get a feature to work properly.



This provides safety precaution information, that is, information that you need to be careful about to prevent potential problems.

Some apps may not be available in all regions or with your mobile operator.

Important note on recoverable data

Files and other data that have been deleted, cleared, removed, or erased from your device may still be recoverable by third-party data recovery software. Even a factory reset may not permanently erase all data from your phone, including personal information.

Features you'll enjoy

Android 5.0 Lollipop update

With the Android™ 5.0 Lollipop update, enjoy enhancements to some of your favorite features.

Here are some of the changes:

Bolder, user-centered design

Google® apps take on a new, colorful, and responsive design that brings a consistent, intuitive experience across Android devices. The design elements extend to the Android user interface. For a start, check out the revamped Recent apps screen or the Notifications panel.

More control over notifications

Choose which apps to get notifications from. This is helpful if you want to limit the notifications that show on the lock screen. See [Choosing what notifications to show on the lock screen](#) on page 59.

Get back to recent apps after a reboot

When you restart your phone in earlier Android versions, all your recently opened apps will be cleared. In Lollipop, they're still be present on the Recent apps screen after a reboot.

Easier sharing with Android Beam

Using Android Beam™ is simpler than ever as it's now an option in the share menu. It makes it convenient to share whenever another NFC-enabled device is nearby. See [Beaming content](#) on page 172.



This feature may not be available on all phones.

Searchable settings


Overwhelmed with the options that you can change in Settings? Use the new search bar in Settings to quickly find the relevant option.

Smart Lock

Set up your phone to unlock the screen just by detecting your face. Or you can use another trusted device, such as your car's Bluetooth® system, to unlock your phone once they're connected. See [Setting up Smart Lock](#) on page 177.

Unboxing

HTC Desire EYE

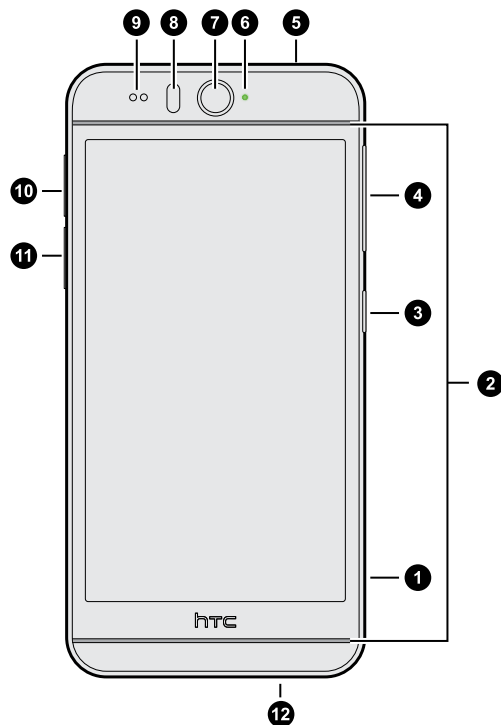

1. CAMERA button
2. Dual speakers
3. POWER button
4. VOLUME buttons
5. 3.5mm headset jack
6. Notification LED
7. Front camera
8. LED flash
9. Proximity sensor
10. nano SIM slot
11. microSD™ slot
12. USB connector



You need a 4G/LTE™ plan to use your operator's 4G/LTE network for voice calls and data services. Check with your operator for details.




- If you want to use a case or screen protector, don't cover and block the proximity sensor. Purchase a case or screen protector designed for HTC Desire EYE.
- Avoid connecting third-party headsets or accessories with metallic charms that dangle near the headset jack. Using these may affect signal reception.
- Some jack accessories such as earphone plugs and charms may be falsely recognized as a headset when inserted into the headset jack. Headset mode may then be turned on, and the earpiece or speaker volume turned off. If this happens, remove the accessory.

nano SIM card

HTC Desire EYE uses a nano SIM card.


Use a standard nano SIM card only. Inserting a modified card that is thicker than the standard nano SIM card may cause the card to not fit properly or damage the card slot.

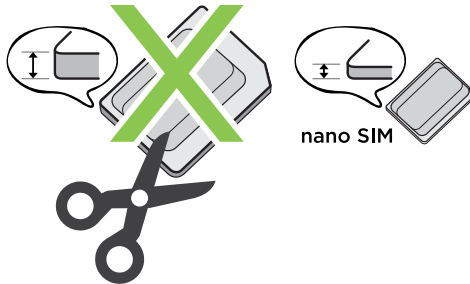


Inserting a nano SIM card

With HTC Desire EYE facing up, the nano SIM slot is on the left side.


1. With the HTC Desire EYE facing down, insert your fingertip in the small nano SIM tray slot opening, and then pull the nano SIM tray out.

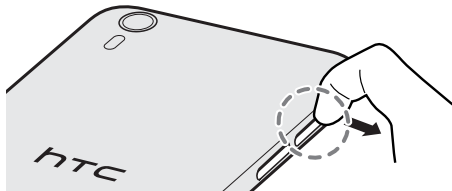


2. Make sure the nano SIM tray is facing up so that the nano SIM doesn't accidentally fall out when you insert the card.
3. Place the nano SIM card into the tray, with the card's gold contacts facing up and cut-off corner facing out.

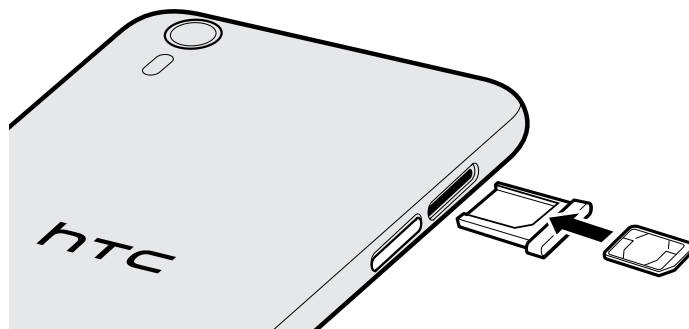


4. To reinsert the nano SIM tray, center it first in the slot, and then slide it all the way in.

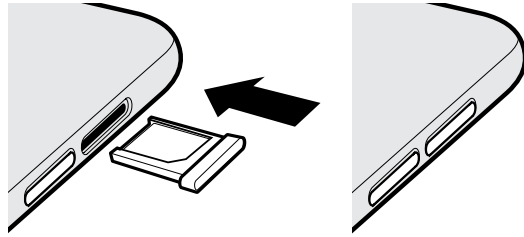

5. Slide your finger several times across the cover that's attached to the nano SIM tray, to ensure that it's closed evenly and firmly.

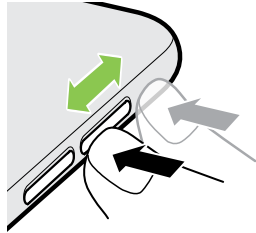


Make sure the cover doesn't protrude from the side.

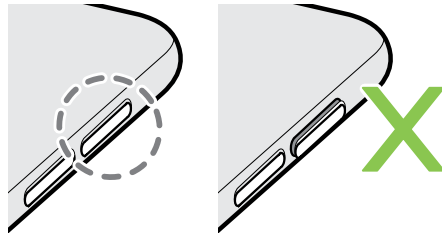


Removing a nano SIM card

1. With the HTC Desire EYE facing down, insert your fingertip in the small nano SIM tray slot opening, and then pull the nano SIM tray out.
2. Remove the nano SIM card from the tray.

3. To reinsert the nano SIM tray, center it first in the slot, and then slide it all the way in.
4. Slide your finger several times across the cover that's attached to the nano SIM tray, to ensure that it's closed evenly and firmly.

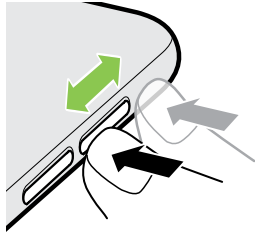

Make sure the cover doesn't protrude from the side.

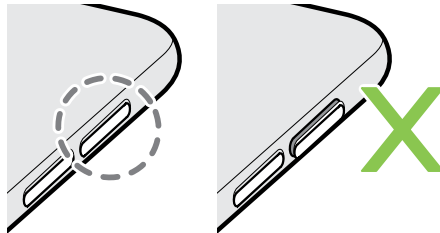

Storage card

Use a storage card to store your photos, videos, and music. When you need to free up phone storage space, you can also move certain apps to the storage card, if the apps support this feature.



The storage card is optional and sold separately.




- Moving apps to the storage card doesn't back up the apps. If you do a factory reset, your phone loses the apps. You'll need to reinstall them.
- When you remove the storage card and insert it in another phone, the apps on the storage card won't be installed automatically to the other phone. You'll need to reinstall them.

Inserting the microSD card


With HTC Desire EYE facing up, the microSD slot is on the left side.

1. With the HTC Desire EYE facing down, insert your fingertip in the small microSD tray slot opening, and then pull the microSD tray out.

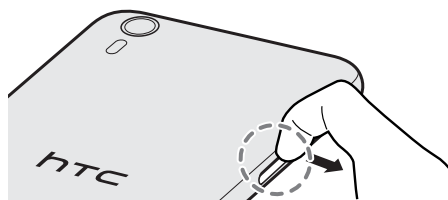


2. Flip HTC Desire EYE over.


3. With both HTC Desire EYE and the microSD tray facing up, place the microSD card into the tray, with the card's gold contacts facing down.

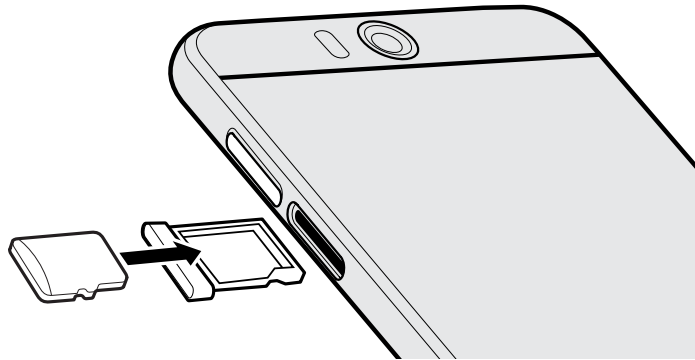


4. To reinsert the microSD tray, center it first in the slot, and then slide it all the way in.

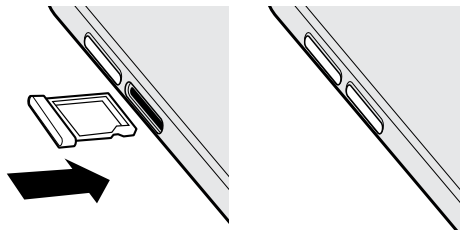

5. Slide your finger several times across the cover that's attached to the microSD tray, to ensure that it's closed evenly and firmly.

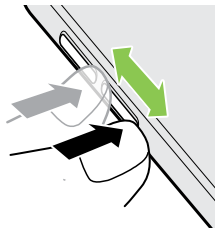

Make sure the cover doesn't protrude from the side.

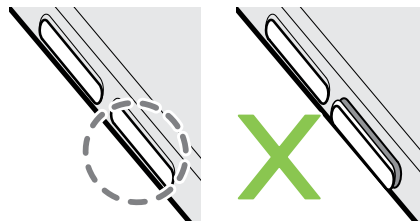

Unmounting the storage card

When you need to remove the storage card while HTC Desire EYE is on, unmount the storage card first to prevent corrupting or damaging the files in the storage card.


1. Go to Settings, and then tap **Storage**.
2. Tap **Unmount SD card**.

Removing the microSD card




Make sure to unmount your microSD card before removing it.

1. With the HTC Desire EYE facing down, insert your fingertip in the small microSD tray slot opening, and then pull the microSD tray out.
2. Remove the microSD card.
3. To reinsert the microSD tray, center it first in the slot, and then slide it all the way in.
4. Slide your finger several times across the cover that's attached to the microSD tray, to ensure that it's closed evenly and firmly.

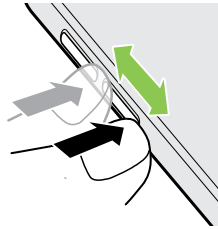

Make sure the cover doesn't protrude from the side.

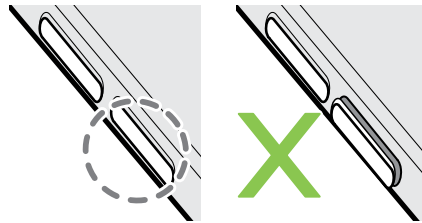


Charging the battery

Before you turn on and start using HTC Desire EYE, it is recommended that you charge the battery.



- If the battery has been discharged for several days, you may need to charge HTC Desire EYE for several minutes before powering it on.
- Use only the adapter and the USB cable that came with HTC Desire EYE to charge the battery. When the battery power is too low, make sure to use the power adapter to charge, not the USB cable connection with your computer.

1. Insert the small end of the USB cable into the USB connector.

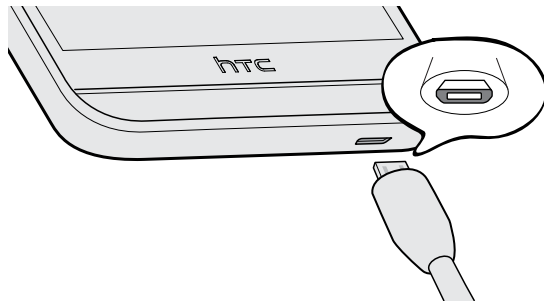

2. Insert the other end of the USB cable into the power adapter.
3. Plug in the power adapter to an electrical outlet to start charging the battery.



- As a safety precaution, the battery may stop charging to avoid overheating.
- Avoid charging the battery in hot environments.
- When you're using the web browser and charging the battery, HTC Desire EYE may become warmer. This is normal.
- To conserve energy, unplug the power adapter from the electrical outlet after you finish charging.

Switching the power on or off

Switching the power on

Press the POWER button until HTC Desire EYE vibrates.




When you turn on HTC Desire EYE for the first time, you'll need to set it up.


Switching the power off

1. If the display is off, press the POWER button to turn it back on.
2. Press and hold the POWER button for a few seconds.
3. Tap **Power off** on the options menu.

Want some quick guidance on your phone?

Check out the friendly walkthroughs and the FAQs in the Tips & Help app to learn how to use your phone.

- When you see a Tips & Help tile in HTC BlinkFeed™, just tap the tile to know more about the tip.
- To open Tips & Help from the Home screen, tap  > **Tips & Help**.

You can then browse by subject matter and topic. Or tap , and then enter what you want to search for.

Phone setup and transfer

Setting up your new phone for the first time

When you switch on your new phone for the first time, you'll be asked to set it up.



You can enable TalkBack to navigate by voice feedback before selecting the language. Press and hold two fingers on the screen until you hear a message saying that accessibility mode is enabled.

Walk through the on-device setup to choose your Internet connection, sign in to your accounts, set up your screen lock, and more.

There are different options you can choose to set up your new phone:

- If you have content from another phone that you want to transfer, whether it's from an Android or other phone, select **Get content from old phone**.
- If you have a previous phone backup that you want to restore from your online storage, select **Restore from HTC Backup**.

To make it easier for you to back up and restore content from HTC Desire EYE to another HTC phone in the future, select **Back up phone daily**.



Some features that need to connect to the Internet such as location-based services and auto-sync of your online accounts may incur extra data fees. To avoid incurring data fees, disable these features under Settings. For more information on location services, see [Turning location services on or off](#) on page 151.

Restoring your backup from your online storage

If you used HTC Backup before, you can restore your backup to HTC Desire EYE when you turn the phone on for the first time or after a factory reset.



Depending on the amount of content, restoring your backup to your phone through your data connection may incur additional data costs and take a long time. Using a Wi-Fi® connection is recommended.

1. When you're asked whether you have a Google Account, sign in to your account.
2. Use your mobile data or Wi-Fi connection to connect your phone to the Internet.
3. If you used your Google login credentials as your HTC Account and your backup is in Google Drive™, tap **Sign in with Google**.

If not, tap **Remind me later**, go to the Transfer or restore screen, and select **Restore from HTC Backup**.

4. Follow the onscreen instructions to restore your backup and to continue setting up your phone.
5. Slide open the Notifications panel to check if there's any notification to finish setting up your phone.

Free apps from Google Play™ will be restored in the background, and you can track the progress via a notification in the status bar. To restore paid apps, you need to download and install them from Google Play.

Your apps will appear on the Apps screen as they are installed. The Apps and Home screen shortcuts will be reorganized as in your backup after all of your apps have been installed. You may continue using HTC Desire EYE while apps are being restored.

Transferring content from an Android phone

On your old Android phone, download the HTC Transfer Tool and use it to transfer your content to your new HTC phone. The types of locally stored content on your old phone that the tool can transfer include contacts, messages, calendar events, web bookmarks, music, photos, and videos. Some settings can also be transferred.



- You need Android version 2.2 or later to use the HTC Transfer Tool on your old phone.
- If your old phone has Android version 2.1 or an earlier version, you need to use Bluetooth transfer. For details, see [Transferring contacts from your old phone through Bluetooth](#) on page 20.

1. If you're setting up your new HTC phone for the first time, select **Get content from old phone**.
Or go to Settings, and then tap **Get content from another phone**.
2. Choose whether to transfer from an old HTC Android phone or other Android phone.
3. Tap **Full transfer**, and then tap **Next**.
4. Follow the steps shown on your new phone to download the HTC Transfer Tool from Google Play to your old phone, install it, and open the tool.
5. When you see a PIN on your old phone, make sure the same PIN also appears on your new phone before you continue.



If the PIN code doesn't appear, this may mean that your old phone is unable to connect to your new phone. If this happens, try another transfer method.

6. On your old phone, choose the types of content you want to transfer, and then tap **Start** or **Transfer**.
7. Wait for the transfer to finish.
8. Tap **Done** on both phones.

Transferring content from an iPhone

If you have an iPhone, it's fast and easy to transfer your contacts, messages, and other content when you use HTC Sync Manager.

To find out how, see [Transferring iPhone content and apps to your HTC phone](#) on page 129.

If you only need to migrate your contacts, you can also use Bluetooth transfer. For details, see [Transferring contacts from your old phone through Bluetooth](#) on page 20.

Transferring contacts from your old phone through Bluetooth

Use Bluetooth to transfer contacts from an iPhone, a phone that has Android version 2.1 (or earlier version), or other types of phones. Depending on the capabilities of your old phone, you may be able to transfer not only contacts but also other data such as calendar events and text messages to your new HTC phone.



Use HTC Sync Manager to transfer more types of content from an iPhone.

1. If you're setting up your new HTC phone for the first time, select **Get content from old phone**.
Or go to Settings, and then tap **Get content from another phone**.
2. Choose whether to transfer from an Android phone, iPhone, or other phone types. If you chose to transfer from an Android phone, tap **Quick transfer**.
3. On your old phone, turn Bluetooth on.
4. Follow the onscreen instructions on your old and new phones to pair them and start the data transfer.

Other ways of getting contacts and other content

There are different ways you can individually add contacts and other content to HTC Desire EYE.

Sync with your computer	<p>Use HTC Sync Manager to sync contacts, documents, playlists, and more between HTC Desire EYE and your computer running a Windows® or Mac OS operating system.</p> <p>You can also use it to transfer your iTunes backup that contains contacts, messages, and other content from an iPhone from your computer to HTC Desire EYE.</p>
Google Account	<p>Google contacts are imported to HTC Desire EYE after you sign in to your Google Account. You can also create more Google contacts right from HTC Desire EYE.</p>

Social network accounts	Log in to your favorite social networks to sync contact information from them.
Microsoft® Exchange ActiveSync®	HTC Desire EYE syncs your work contacts from the Microsoft Exchange ActiveSync Server in your workplace.
Outlook.com account	Sync personal contacts from your Microsoft Outlook.com account.
Phone contacts	You can create contacts locally on HTC Desire EYE, if you don't prefer to store them on your online accounts.
nano SIM card	Copy all your nano SIM contacts to HTC Desire EYE.

Transferring photos, videos, and music between your phone and computer

There are two ways you can transfer your media from or to your computer.

- Connect HTC Desire EYE to your computer. Your computer will recognize it just like any removable USB drive, and you can copy your media between them.
- Download and use the HTC Sync Manager software on your computer. You can set it up to automatically get music, photos, and videos off HTC Desire EYE to your computer. You can also sync playlists from your computer to the phone.

If you have an iPhone, you can even connect it and transfer camera roll photos to your computer. Then reconnect HTC Desire EYE and copy them over.

Home screen

After you've turned on and set up HTC Desire EYE for the first time, you'll see HTC BlinkFeed.

- Customize HTC BlinkFeed to show posts from your social networks, headlines from your favorite news media, and more. For details, see [What is HTC BlinkFeed?](#) on page 60.
- Swipe left and you'll discover widget panels for adding your favorite widgets, apps, and more so they're just a tap away. If you need more room for your stuff, you can add more panels. For details, see [Personalizing](#) on page 52.
- You can change the apps on the launch bar at the bottom of the Home screen. See [Launch bar](#) on page 53.



While you're in another screen or app, press  to return to the last Home screen you visited.

Using Quick Settings

In the Quick Settings panel, easily turn settings such as Wi-Fi and Bluetooth on or off.

1. Do any of the following:
 - With two fingers, swipe down from the status bar.




- Swipe down twice from the status bar.
2. To turn a setting on or off, just tap its tile.
 3. To change the options for a setting, press and hold its tile. Or tap **⋮**.

Customizing Quick Settings

You can remove, replace, or rearrange the tiles in Quick Settings.

1. With two fingers, swipe down from the status bar to open Quick Settings.





2. Tap  and do one of the following:
 - In the Quick Settings list, press and hold **≡** next to the item you want to move and drag it to rearrange the list.
 - Under Hidden items, press and hold **≡** and drag it up to make it available in Quick Settings.



There is a limit to the number of tiles that can be shown in Quick Settings. You may need to remove an existing item to make space for another one. To remove an item, drag it below Hidden items.

Getting to know your settings

Want to change the ringtone, set up a Wi-Fi connection, or add your accounts? Do this and more in Settings.

1. Open Settings either from the Notifications panel or the Apps screen.
 - Swipe down from the status bar, and then tap .
 - From the Home screen, tap  to switch to the Apps screen, and then tap **Settings**.
2. Here are some of the basic settings you can change:
 - Tap the **On/Off** switch next to an item such as Wi-Fi to turn it on or off. Tap the item itself to configure its settings.
 - Tap **Sound & notification** to set a ringtone, choose a sound profile, and configure incoming call sound settings.
 - Tap **Personalize** to change the wallpaper, add apps and widgets to the Home screen, and more.
 - Tap **Accounts & sync** to add and sign in to your different accounts, such as email, social networks, and more.
 - Tap **Security** to help secure HTC Desire EYE, for example with a screen lock.



Tap  in Settings to quickly find options and settings.

Updating your phone's software

HTC Desire EYE can check and notify you if there's a new update available. You can also choose to automatically download updates or manually check if there's an available update.

Checking your system software version

Before installing a system software update, you can check first what Android and HTC Sense™ versions you have on your phone.

1. Go to Settings, and then tap **About**.
2. Tap **Software information**.

Enabling automatic updates


You can choose to automatically download and install software updates for HTC or mobile operator apps.

1. Go to Settings, and then tap **About**.
2. Tap **Software updates**.

3. To save on data usage, you can choose to update through Wi-Fi only.
4. Choose whether to auto-download system updates, app updates, or both.

App updates are installed automatically. You'll still need to confirm when to install system software updates.


Installing a software update

 
When HTC Desire EYE is connected to the Internet and there's a new software update available, the update notification icon  appears in the status bar.

1. Slide the Notifications panel open, and then tap the system update notification.
2. If you don't want to download the update using your data connection, select **Update over Wi-Fi only**.
3. Tap **Download**.
4. When download is complete, select **Install now**, and then tap **OK**.

After updating, HTC Desire EYE will restart.


Installing an application update

When Internet connection is on and there's an available update for your HTC or mobile operator apps, the update notification icon  appears in the status bar.


1. Slide the Notifications panel open, and then tap the update notification.
The Updates screen opens with the list of application updates to be installed.
2. Tap an item to view its details, and then tap .
3. When you're done reviewing the updates, tap **Install**. You'll be asked to restart HTC Desire EYE if needed.

Installing app updates from Google Play

Some HTC apps and third-party apps get updated with improvements and bug fixes through Google Play. You can manually update apps or set your phone to automatically download and install app updates when available.

1. Open the Play Store app.
2. Tap  to open the slideout menu.
3. Tap **My apps**.
You'll see a list of apps installed on your phone.
4. Under Updates, tap an app.
5. Tap **Update**.
6. Tap **Accept**.



In Play Store, tap  > **Settings** > **Auto-update apps** to choose how you want Google Play to update your apps.

Checking for updates manually

1. Go to Settings, and then tap **About**.
2. Tap **Software updates**. HTC Desire EYE checks if updates are available.



If you don't have Internet connection, you'll be prompted to turn on mobile data or connect to a Wi-Fi network. Once connected, tap **Check now** to check for updates.

Getting apps from Google Play

Google Play is the place to go to find new apps for HTC Desire EYE. Choose from a wide variety of free and paid apps ranging from productivity apps, entertainment, to games.



- You need a Google Wallet™ account to buy paid apps or to make in-app purchases. If you already have a Google Account, just add Google Wallet by signing in with your existing username and password at wallet.google.com.
- The name of the Play Store app may differ depending on your region.
- The ability to purchase apps varies by region.

Finding and installing an app

When you install apps and use them on HTC Desire EYE, they may require access to your personal information or access to certain functions or settings. Download and install only apps that you trust.



Be cautious when downloading apps that have access to functions or a significant amount of your data on HTC Desire EYE. You're responsible for the results of using downloaded apps.

1. Open the Play Store app.
2. Browse or search for an app.
3. When you find the app that you like, tap it and read its description and user reviews.
4. To download or purchase the app, tap **Install** (for free apps) or the price button (for paid apps).
5. Tap **Accept**.




Apps sometimes get updated with improvements or bug fixes. To automatically download updates, after installing the app, tap **⋮** > **Auto-update**.

To open the app, go to the Apps screen and tap the app.

Restoring apps from Google Play

Upgraded to a new phone, replaced a lost one, or performed a factory reset? Restore apps that you previously downloaded.

1. Open the Play Store app.
2. Tap  to open the slideout menu.
3. Tap **My apps**, swipe to the All tab, and then tap the app you want to restore.
4. Install the app.

For more details, refer to the Google Play help.

Downloading apps from the web

You can download apps directly from websites.



- Apps downloaded from websites can be from unknown sources. To help protect HTC Desire EYE and your personal data, we strongly recommend that you only download from websites you trust.
- Before you can install the downloaded app, make sure that you've set HTC Desire EYE to allow installation of third-party apps in **Settings > Security > Unknown sources**.

1. Open the browser, and then go to the website where you can download the app you want.
2. Follow the website's download instructions for the app.



After installing the app, make sure to go back to **Settings > Security** and clear the **Unknown sources** option.

Uninstalling an app

If you no longer need an app that you've downloaded and installed, you can uninstall it.



Most of the preloaded apps cannot be uninstalled.

From the Apps screen, press and hold the app you want to remove, and then drag it to **Uninstall**.



If you purchased an app in Play Store, you can uninstall it for a refund within a limited time. To know more about the refund policy for paid apps, refer to the Google Play help.

Your first week with your new phone

About waterproof protection

What does it mean by waterproof in HTC Desire EYE?

HTC Desire EYE has an IP Code of IPX7. The phone meets this standard under the condition that the nano SIM and microSD covers are closed tightly.

That means:

- The phone can continue to operate after it has been gently immersed in plain tap water at room temperature, within 1 meter deep for no more than 30 minutes.
- You can make and receive calls, even with wet hands and without an umbrella, under moderate rain.
- If the phone accidentally gets in contact with sea water, soapy water, or other liquids, you can rinse it with a low flow of plain tap water.

HTC Desire EYE must not be exposed to non-fresh water, high water pressure, or sand since these may cause overheating, electric shock, or damage to the phone. For usage precautions and tips on care and maintenance, see [Important: Do's and don'ts](#) on page 27 and [Care and maintenance tips](#) on page 28. Also make sure to read the Safety guide that comes with your phone.

Important: Do's and don'ts

Before use

Make sure the nano SIM and microSD trays are inserted into the slots securely and their covers are closed tightly. For instructions, see [Inserting a nano SIM card](#) on page 11 and [Inserting the microSD card](#) on page 13.

- Never attempt to insert or remove the nano SIM and microSD trays with gloves, wet hands, or when the phone is wet.
- Before closing the covers, wipe off every drop of water or dirt with a clean, dry cloth.
- When closing the covers, make sure that no hairs, fibers, or small particles are caught between the covers and the slot openings to prevent water from seeping through the gaps and entering the phone.

While using

Don't immerse HTC Desire EYE in or let the USB port and headset jack come in contact with the following:



- Water containing soap, detergent, or shower gel
- Sea water, swimming pools, spas, and hot springs
- Any liquid besides tap water such as alcohol, juices, and condiments

Don't operate HTC Desire EYE underwater.

While the phone is immersed in water, don't press the POWER and VOLUME buttons.

Under moderate rain, you can make or receive calls with wet hands and without an umbrella. To be specific, the rainfall's precipitation rate must be within 20 mm/hour.

You can make or receive calls while holding the phone with wet hands, such as when you're in the bathroom or kitchen. Be reminded about the following:

- Don't hold the phone directly under the shower spray since it is not designed to withstand high water pressure.
- Don't immerse the phone in a hot tub.
- Avoid leaving the phone in humid places such as the bathroom or kitchen for too long since it is not moisture-proof.



Keep the phone away from sand. Sound volume may decrease if sand gets into the earpiece, microphone, or speakers. If sand gets inside the phone, this may cause overheating or a fault.

Don't plug in your headset when the headset jack has been exposed to water, dust, or other particles.

Don't charge the battery while the phone is wet. Also, the power adapter and accessories are not water resistant. Never use them in wet areas such as in the bathroom or kitchen since contact with water may cause malfunction, electric shock, or other hazards.

Care and maintenance tips

Cleaning

If the USB port and headset jack have had contact with salt water, liquid chemicals, dust, or other contaminants, immediately rinse using fresh water. These contaminants may damage the connector pins.


- Before rinsing, make sure the nano SIM and microSD covers are properly closed. See [Inserting a nano SIM card](#) on page 11 and [Inserting the microSD card](#) on page 13.
- While rinsing, don't press on the covers to avoid having gaps around the covers which may allow water to seep through the gaps.
- Hold the phone at a distance of about 10 cm under a faucet or showerhead and rinse using a low flow of water. To be specific, the water flow must be less than 6 liter/minute at a room temperature of 5°C to 35°C.
- Rinse the phone by hand only. Don't use a brush or sponge.

From time to time, clean the USB port and headset jack with dry cotton swabs to avoid having soiled connectors which may affect the cable connection. Wipe gently with care to prevent deforming the connectors.

Drying

After HTC Desire EYE gets wet, drain the water off the phone to avoid getting your clothes or bag wet. Also, the sound volume of the earpiece, speakers, and microphone may be less audible if these parts are not dried well.

1. Wipe off the water from the phone with a clean, dry cloth.
2. The display may not respond accurately to touch gestures when it's wet. For the touch screen and lenses, wipe with a soft dry cloth such as a microfiber cloth that will not scratch the surface.
3. To drain water off the USB port and headset jack, hold the phone firmly and shake off the water from each port.

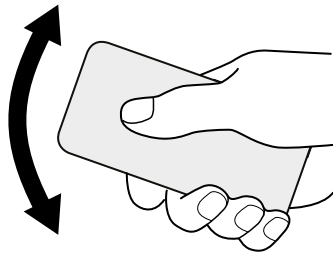

4. Also make sure to shake off the water if it gets into the gaps around the POWER and VOLUME buttons or into the earpiece, speakers, or microphone. Don't use cotton swabs to wipe the earpiece, speakers, and microphone.
5. After shaking off the water, leave the phone at room temperature for 3 hours or so to let it dry completely.

Moisture may remain even after shaking off the water. This does not affect usage, but it's best to keep the phone away from humid places to let the phone dry.

If condensation forms inside the display such as when there's a drastic change in temperature, place the phone at room temperature until condensation disappears.

Other tips




- Avoid storing the phone while it's wet. Water drops may turn to frost in cold climates.
- Avoid leaving the phone inside your bag or pocket for a long time since moisture may accumulate on the phone.
- Don't use the phone near hot splashing water or near hot air such as a hair dryer.
- Don't place the phone where it gets extremely hot or cold such as near a stove or inside a refrigerator.

- Don't leave the phone in places subject to direct sunlight such as in a car and in places that are extremely hot, cold, humid, or dusty to avoid possible overheating, deformation, or fault.
- Parts that maintain waterproof protection such as the nano SIM and microSD covers may degrade over time. If these parts degrade or get damaged, the phone will no longer be waterproof. If this happens, contact your retail store or mobile operator. You may be charged for parts replacement.

Basics

Onscreen navigation buttons

HTC Desire EYE has onscreen navigation buttons at the bottom of the screen which rotate when you change the orientation.

	Goes to the previous screen.
	Goes to the home screen.
	Shows thumbnails of the most recently used apps.

Swipe up from any of the navigation buttons to access Google search.

Sleep mode

Sleep mode saves battery power by putting HTC Desire EYE into a low power state while the display is off. It also stops accidental button presses when HTC Desire EYE is in your bag.

Switching to Sleep mode

To turn off the display and switch to Sleep mode, you can:

- Briefly press the POWER button.
- Double-tap the lock screen.

HTC Desire EYE also automatically goes into Sleep mode when it's left idle for a while. You can change the time before HTC Desire EYE sleeps by setting the screen timeout. For details, see [Setting when to turn off the screen](#) on page 174.

Waking up from Sleep mode

- Press the POWER button.
- Use Motion Launch™ to wake up and unlock your phone directly to an app or screen. See [Waking up the phone with Motion Launch](#) on page 38.

Unlocking the screen

Swipe up to unlock the screen.

If you've set up a screen lock, you'll be asked to provide your credentials before HTC Desire EYE unlocks.



If you've set an event reminder or an alarm, you can snooze or dismiss the event or alarm right from the lock screen. Just drag ⌚ or ✖ up.

Motion gestures


Use motion gestures to mute HTC Desire EYE, lower the ring volume, and more.

Lift phone to auto answer a call

To automatically answer an incoming call, lift the phone and look at the screen first to see who's calling before you hold it to your ear.

You can turn this feature on or off. Go to Settings, tap **Call**, and then select or clear **Auto answer calls**.

Flip to mute

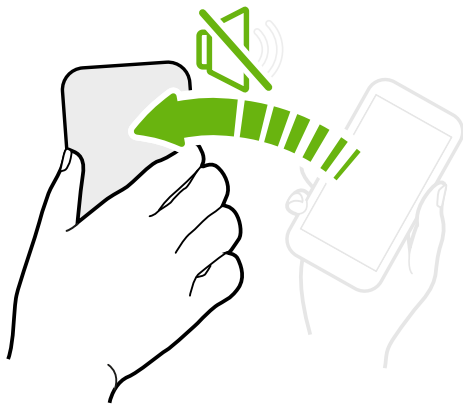

If your phone is facing up when a call comes in, turn the phone over to mute it.

If you go to Settings and then tap **Sound & notification** > **Flip to mute**, you can set your phone to:

Mute once	Mute only once after flipping the phone. While the phone is still facing down, it will ring again when there are other incoming calls.
Mute always	After flipping the phone to mute a call, keep it always muted while it's still facing down when there are other incoming calls.

Pick up to lower volume



In a business meeting or restaurant, pick HTC Desire EYE up when a call comes in to lower the ring volume automatically.

You can turn this feature on or off. Go to Settings, tap **Sound & notification**, and then select or clear **Quiet ring on pickup**.


Increase ring volume automatically while phone is in your pocket or bag



Pocket mode makes HTC Desire EYE recognize when your phone is in your bag or pocket and raise the ring volume so that you can hear it in noisy environments.

You can turn this feature on or off. Go to Settings, tap **Sound & notification**, and then select or clear **Pocket mode**.

Rotate HTC Desire EYE for a better view

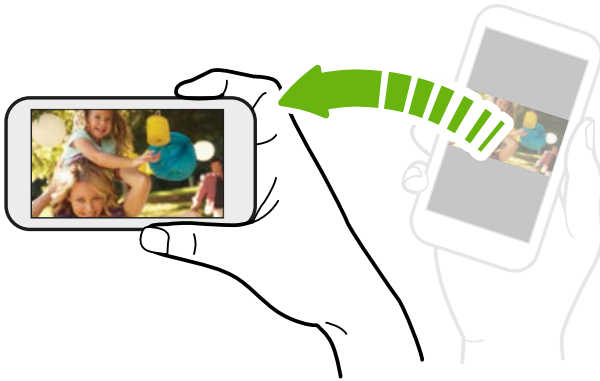


For many screens, you can automatically change the screen orientation from portrait to landscape by turning HTC Desire EYE sideways.

When entering text, you can turn HTC Desire EYE sideways to bring up a bigger keyboard.

Touch gestures


Use touch gestures to get around the Home screen, open apps, scroll through lists, and more.

Tap

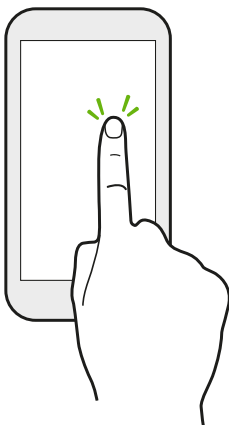


- Tap the screen with your finger when you want to select onscreen items such as application and settings icons, or press onscreen buttons.
- After you've scrolled down a long list or screen (in apps such as Mail and People), tap the status bar to jump straight to the top of your screen.

Press and hold

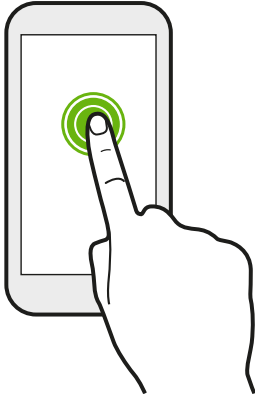


To open the available options for an item (for example, a contact or link in a webpage), just press and hold the item.

Swipe or slide

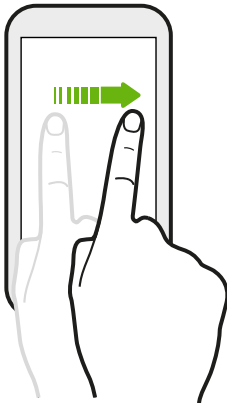

Quickly swipe your finger horizontally across the screen to go to other Home screen panels. Swipe vertically to scroll through a list, document, and more.

Drag

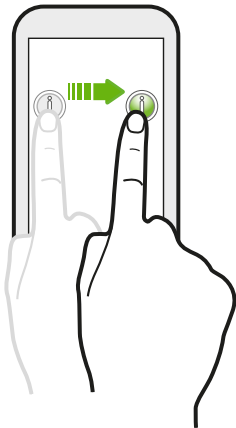


Press and hold your finger with some pressure before you start to drag. While dragging, don't release your finger until you have reached the target position.

Flick



Flicking the screen is similar to swiping, except that you need to swipe your finger in light, quicker strokes, such as when moving right and left on the Home screen, or flicking through a contacts or message list.


Press and flick

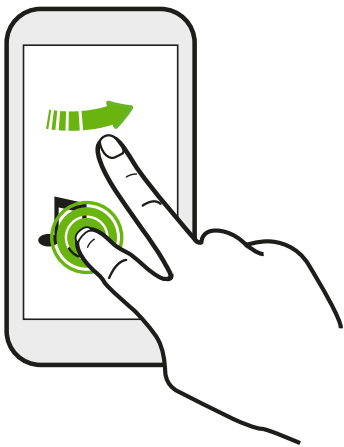

On the Home screen, you can easily move a widget or icon from one screen to another.

Press and hold the widget or icon with one finger, and flick the screen to the new location with another finger.

Slide with two fingers

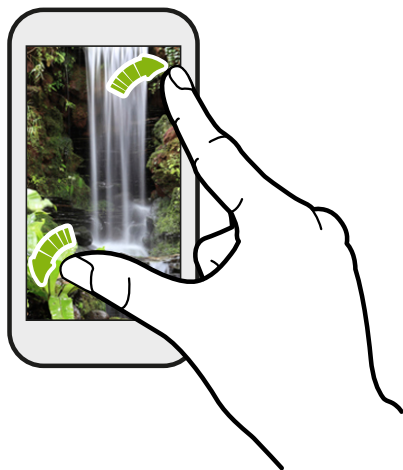


In some apps, like Gallery, Messages, Mail, or the web browser, slide two fingers apart to zoom in when viewing a picture or text.




Slide two fingers together to zoom out of the picture or text.

Two-finger swipe

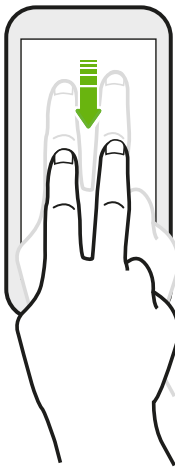

Swipe down from the status bar using two fingers to access Quick Settings.

Three-finger swipe

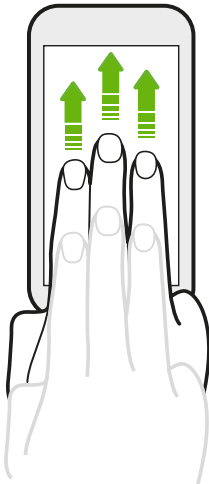

- Swipe up using three fingers to choose a device where to share content such as photos, videos, and music from HTC Desire EYE. You can also share streaming media from apps such as YouTube®.
- Swipe down to disconnect from the device.



Media gesture is turned on in Settings by default, which makes the three-finger gesture work only when sharing content or using HTC apps.

Three-finger tap



While using the HTC Car app, tap the screen with three fingers to activate the voice command mode.



This feature may not be available in all languages.

Opening an app

- Tap an app on the launch bar at the bottom of the Home screen.
- Tap to go to the Apps screen, and then tap the app you want to use.
- On the Apps screen, tap , and then enter the name of the app you're looking for.

Opening an app or folder from the lock screen

On the lock screen, drag an app or folder icon up to unlock the screen and directly go to the app or folder.



The shortcuts on the lock screen are the same ones on your Home screen's launch bar. To change the lock screen shortcuts, replace the apps or folders on the launch bar.

If you've set up another security layer like a screen lock pattern or PIN, you'll be asked to provide your credentials first before HTC Desire EYE opens the app or folder.


Sharing content


Have something to share, such as a photo or video?


- In an app, just tap the share icon: or .
- If you don't see the icon, tap > **Share**.

Switching between recently opened apps


When you're multitasking and using different apps on HTC Desire EYE, you can easily switch between the apps you've recently opened.

Press  to see recently-opened apps.

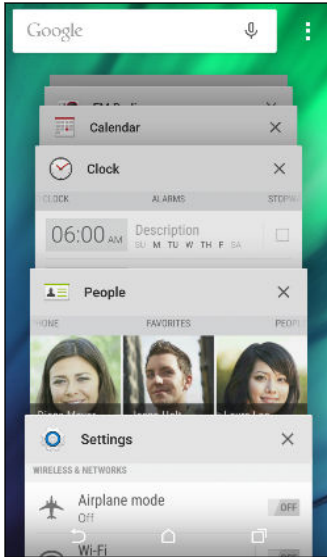

- To switch back to an app, just tap it.
- To remove an app from the list, tap  or drag it left or right.



Prefer a different way to view your recent apps? Tap  > **Settings** > **Layout**, and then choose between card or grid view.

Refreshing content

In some apps, you can easily refresh content that's synced or downloaded from the Web with a simple finger gesture.

1. While viewing content such as weather or Mail inbox, scroll to the top of the screen.
2. Pull down with your finger, and then release to refresh.




Capturing your phone's screen

Want to show off your high game score or write a blog post about HTC Desire EYE features? It's easy to take a picture of the screen and share it from Gallery.

Press and hold POWER and VOLUME DOWN at the same time.

The image is saved in the Screenshots album in Gallery.



You can also share the image when you see  in the status bar. Open the Notifications panel and tap  under the screenshot notification. If you don't see , slide two fingers apart on the screenshot notification.

Motion Launch


Waking up the phone with Motion Launch

When the screen is off and HTC Desire EYE is in sleep mode, use Motion Launch to wake up your phone with simple gestures. Motion Launch is a combination of a motion gesture, which is to lift the phone, followed by a finger gesture.



If you've set up a screen lock with credentials, you'll be asked to provide your credentials first before HTC Desire EYE unlocks.


Wake up the phone

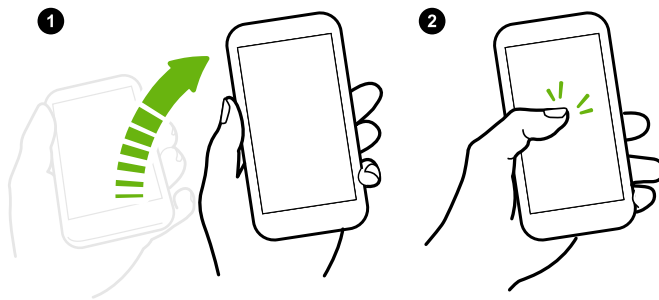

1. Lift the phone in portrait orientation.
2. Immediately double-tap the screen.

Make sure you're not touching the screen when the phone vibrates.


Wake up and unlock the screen

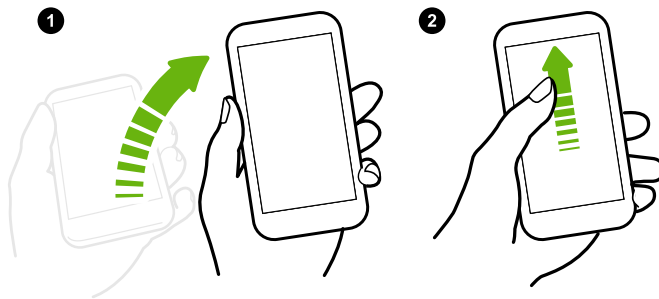

1. Lift the phone in portrait orientation.
2. Swipe up the screen right away. You need to start swiping from the bottom half of the screen.

Make sure you're not touching the screen when the phone vibrates.


Wake up the phone directly to HTC BlinkFeed

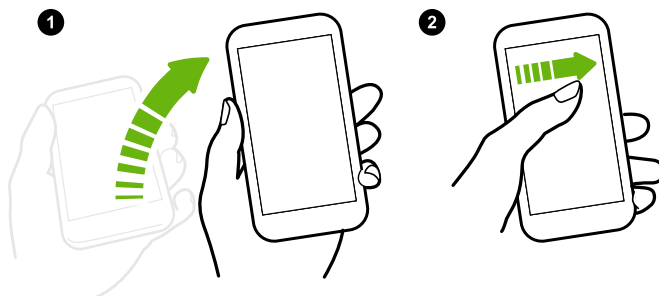

1. Lift the phone in portrait orientation.
2. Swipe right across the screen right away.

Make sure you're not touching the screen when the phone vibrates.

Wake up the phone directly to the Home widget panel

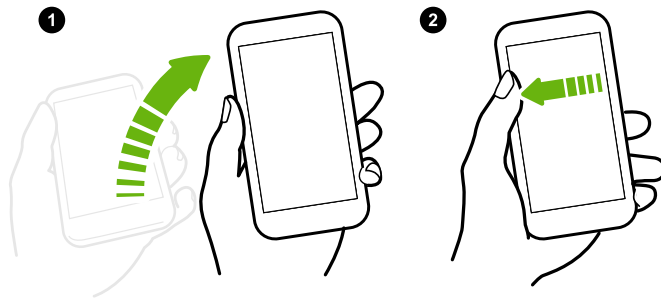

1. Lift the phone in portrait orientation.
2. Swipe left across the screen right away.

Make sure you're not touching the screen when the phone vibrates.


Making a call with Quick call

When the screen is off and HTC Desire EYE is in sleep mode, easily make a call by just swiping and using voice commands.



- This feature may not be available in all languages.
- Make sure **Motion Launch gestures** and **Quick call** are turned on in **Settings > Display & gestures > Motion Launch gestures**.
- If you've set a screen lock with credentials, you'll be asked to provide your credentials first before you can make the call.

1. Lift the phone in portrait orientation.
2. Swipe down the screen right away. You need to start swiping from the upper half of the screen.

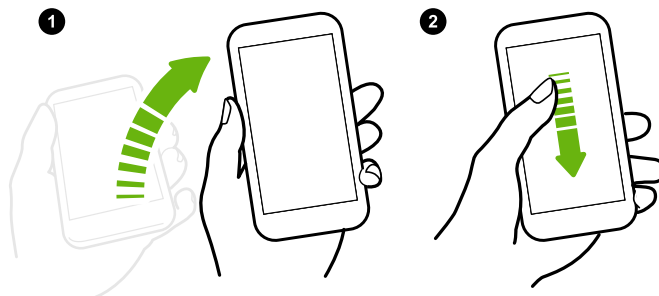

3. When you see the microphone icon on the screen, hold the phone close to your mouth, and then say "Call" and the contact name. For example, say "Call Jennifer".
4. You can then do one of the following:

- If there are several contacts with the same first name, say the full name of the contact you want to call.
- If a contact has several phone numbers, you'll see the following:

1. [full name] Home
2. [full name] Mobile
3. [full name] Work

Just say the item number of the one you want to call. For example, say "2" to call the second one.

Or say the full name and type of phone number as shown on the screen. For example, say "Jennifer Singer Mobile".

- If you're asked to confirm, say "Yes" or "No".
- To cancel the call, say "Cancel".

Bypassing the screen lock for Quick call

If you've set a screen lock with credentials, you can set HTC Desire EYE to skip the security screen so you can immediately place calls with Quick call.

1. Go to Settings, and then tap **Display & gestures** or **Display, gestures & buttons**.
2. Tap **Motion Launch gestures**.
3. Select the **Bypass Security screen** option.

Turning Motion Launch on or off

Motion Launch is on by default. You can turn it off in Settings.

1. Go to Settings, and then tap **Display & gestures** or **Display, gestures & buttons**.
2. Tap **Motion Launch gestures**.
3. Clear the **Motion Launch gestures** option to turn it off, or select it to turn it back on.

Notifications


Notifications panel


Notification icons inform you of new messages, calendar events, alarms, and activities in progress such as files downloading.



When you see notification icons, open the Notifications panel to check out details of the notifications that you've received.

To open the Notifications panel, slide down from the top of the screen.

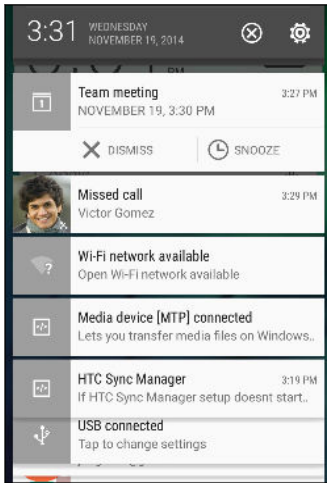

- Some notifications allow you to take immediate action. For example, tap a missed call notification to return the call or reply with a text message.
- Tap the notification icon on the left to open the corresponding app.
- To dismiss just one notification in the list, drag it left or right. To dismiss all notifications and close the Notifications panel, tap .


If you have several notifications, scroll through the list screen to see them all.



You can change which notifications you want to receive in Security settings. See [Choosing what notifications to show on the lock screen](#) on page 59.

Notification LED

The notification LED shows a:

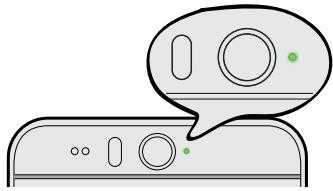

- Solid green light when HTC Desire EYE is connected to the power adapter or a computer and the battery is fully charged.
- Flashing green light when you have a pending notification.
- Solid orange light when the battery is being charged.
- Flashing orange light when the battery level reaches very low.

Choosing when to flash the notification LED

You can change when to flash and which apps will flash the LED when there are new notifications.

1. Go to Settings, and then tap **Sound & notification**.
2. Under Notification, tap **Flash notifications**. Choose whether to always flash the LED or flash it only when the screen is off.
3. Tap **App light notifications**. Choose which app notifications you want the LED to flash for.




In other apps, check their settings to find out if they have an option for flashing the LED.


Working with text

Selecting, copying, and pasting text


In HTC apps such as Mail and Messages, you can select and copy text, and then paste or share it.

1. Press and hold on a word.
2. Drag the start and end anchors to highlight the surrounding text you want to select.

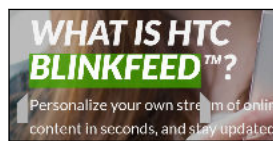


3. After you have selected the text you want to copy, tap .

The selected text is then copied to the clipboard.

4. In a text entry field (for example while composing an email), press and hold at the point where you want to paste the text.
5. Tap  or **Paste**.

Sharing text

1. After you have selected the text you want to share, tap .
2. Choose where to paste and share the selected text, such as in an email message or social network status update.

The HTC Sense keyboard

Typing is fast and accurate with the HTC Sense keyboard.

- Word prediction also saves typing time. As you type, you'll see word suggestions that you can choose from. You can even add words, phrases, and shortcuts to the word prediction dictionary. See [Entering text with word prediction](#) on page 44.
- You can type words by just speaking. See [Entering text by speaking](#) on page 46.
- Turn on the Trace keyboard so you can type words by just sliding your finger from one letter to another. See [Using the Trace keyboard](#) on page 45.
- Just swipe right to access the numeric and symbol keyboard. Or swipe left to switch between languages.
- The keys have secondary numbers, punctuation symbols, or other characters that you can insert without having to switch to the numeric and symbol keyboard.



For example, just press and hold a key on the first row to insert a number.

- Choose from a wide selection of emoji.
- Show or hide navigational arrow keys on the keyboard. If you enable the arrow keys in Settings, they'll only appear on the portrait keyboard.


Entering text

The onscreen keyboard becomes available when you tap a text field in an app.

Tap the keys on the onscreen keyboard to enter letters and numbers, as well as punctuation marks and symbols.

- Tap  to enter an uppercase letter. Tap twice to turn on caps lock.
- Press and hold keys with gray characters at the top to enter numbers, symbols, or accented letters. Some keys have multiple characters or accents associated with them.
- Swipe right to show number and symbol keys. To return to the main keyboard, swipe left.
- Press  to close the onscreen keyboard.



To open the keyboard settings, press and hold the comma key if you see  above the key. Or go to **Settings > Language & keyboard > HTC Sense Input**.

Selecting a keyboard layout

Choose a keyboard layout that suits your typing style.

1. Go to Settings, and then tap **Language & keyboard > HTC Sense Input**.
2. Tap **Keyboard selection > Keyboard types**.
3. Select the keyboard layout that you want to use.

Choosing and switching between keyboard languages

If multiple keyboard languages are available on HTC Desire EYE, you can choose which languages to enable in the onscreen keyboard.

1. Go to Settings, and then tap **Language & keyboard > HTC Sense Input**.
2. Tap **Keyboard selection**, and then choose the languages you want.

To change the keyboard language, do any of the following:

- Swipe left on the onscreen keyboard (not available if you're using trace keyboard).
- Tap the language key, for example, **EN**, until you see the keyboard language you want to use.
- Press and hold the language key, and then drag your finger to the keyboard language you want to use.

Entering text with word prediction

Ever started typing something you weren't sure how to spell? With word prediction, you'll see suggested words displayed just above the keyboard.



Word prediction and next word prediction are enabled by default.

To enter text in word prediction mode, do any of the following:

- Tap the space bar to insert a highlighted word in the suggestion list.
- Tap a word from the suggestion list.
- Tap the arrow next to the suggestion list to see more choices.



In some keyboard languages such as English and Spanish, if you've accidentally chosen a wrong word from the suggestion list, you can go back and change it by tapping the word and selecting another suggestion.

Setting a second language for word prediction

You can set the word prediction to be bilingual. As you type, you'll get word suggestions in the languages that you've selected.



This feature is available only for Latin-based languages.

1. Go to Settings, and then tap **Language & keyboard > HTC Sense Input**.
2. Tap **Keyboard selection > Bilingual prediction**, and then choose the language you want.

Adding words and phrases to the dictionary

For certain keyboard languages such as English and Spanish, you can add frequently-used names, acronyms, and even phrases to the word prediction dictionary to easily find them in the suggestion list.

Type even faster when you create text shortcuts to words and phrases. For example, instead of typing the English phrase "Talk to you later", save a few keystrokes by adding the `ttyl` shortcut. In your message or email, just type "ttyl", and then tap the spacebar to enter the complete phrase.



This feature is available only for Latin-based languages.

1. Go to Settings, and then tap **Language & keyboard > HTC Sense Input**.
2. Tap **Personal dictionary > +**.
3. Enter a word or phrase, and then enter its text shortcut. Be sure to remember this shortcut, including the uppercase and lowercase letters you've typed.
4. Tap **OK**.



While you're entering text using the Standard keyboard layout, tapping a suggested word that's not in the dictionary (usually the first word shown in the suggestion list) automatically stores it.

Editing or deleting words and phrases in the dictionary

1. Go to Settings, and then tap **Language & keyboard > HTC Sense Input**.
2. Tap **Personal dictionary**.
 - To edit a word, phrase, or shortcut, tap the item in the list.
 - To delete items from the dictionary, tap **⋮ > Delete**. Select the words you want to remove, and then tap **Delete**.

Using the Trace keyboard

Instead of tapping the keys on the onscreen keyboard, you can "trace" to type words.



This feature is available only for Latin-based languages.

1. Turn on the Trace keyboard in **Settings > Language & keyboard > HTC Sense Input**.
2. On the onscreen keyboard, slide your finger from one letter to the next to enter a word.

3. Lift your finger when the word is completed.
4. If you want to continue entering text, slide your finger over the letters again to enter the next word.




If the word that appears after you traced isn't the one you want, you can:

- Tap a word from the suggestion list.
- Tap the arrow next to the suggestion list to see more choices.

Entering text by speaking

No time to type? Try speaking the words to enter them.

1. Tap an area where you want to enter text.
2. On the onscreen keyboard, press and hold .
3. When you see the animated microphone button and the words "Speak now", say the words you want to enter.



To set the voice input language, tap the language bar above the microphone button. You can choose one or more languages. Available languages may vary.

4. If a word doesn't match what you've spoken and it's underlined, tap the underlined word to delete it or to see more choices.
5. Enter punctuation marks by saying the name (for example, say "comma").

Battery

Displaying the battery percentage

You can check the percentage of remaining battery power right from the status bar.

1. Go to Settings, and then tap **Power**.
2. Select **Show battery level**.

Checking battery usage

See a ranking list of apps that are using the battery. You can also see how much and how long the battery has been used for each app.

1. Go to Settings, and then tap **Power**.
2. Tap **Battery usage**, and then tap an app to check how it's using the battery. You'll see how much battery power is used by resources such as the CPU for the app and other use details.



If you see buttons while viewing an app's battery use details, you can tap them to adjust settings that affect battery usage, stop the app, and more.

Checking battery history

Check how long you've been using HTC Desire EYE since the last charge. You can also see a chart that shows how long the screen has been on, and how long you've been using connections like the mobile network or Wi-Fi.

1. Go to Settings, and then tap **Power**.
2. Tap **History** to view battery usage over time.

Using power saver mode

Power saver mode helps to increase battery life. It reduces the usage of phone features that drain the battery such as the display and data connection.

1. Go to Settings, and then tap **Power**.
2. Tap the Power saver **On/Off** switch to turn power saver mode on or off.

If you want to choose which phone features to conserve power for, tap **Power saver**.



If power saver mode's **Data connection** option is selected, HTC Desire EYE automatically disconnects from the mobile network after 15 minutes when the screen is off and the data connection is idle (no download activity, streaming, or data usage). It reconnects and then disconnects periodically when the data connection is idle to save battery power.

Keep in mind though that the **Sleep mode** option for the data connection in **Settings > Power**, when enabled, overrides power saver mode.

Extreme power saving mode

In times when you don't need to use much of your phone, turn Extreme power saving mode on to extend battery life longer. In this mode, standby time can last longer than usual, and you can only use the most basic functions such as phone calls, text messaging, and email.

1. Go to Settings, and then tap **Power**.
2. Tap the Extreme power saving mode **On/Off** switch to turn extreme power saving mode on or off.

If you want to set when to automatically switch this mode on, tap **Extreme power saving mode** and select a battery level.

Tips for extending battery life

How long the battery can last before it needs recharging depends on how you use HTC Desire EYE. HTC Desire EYE power management helps to increase battery life.

If you like more control by tweaking settings on your own, try out some of these battery saving tips.

Check your battery usage

Monitoring your battery usage helps you identify what's using the most power so you can choose what to do about it. For details, see [Checking battery usage](#) on page 46.

Manage your connections

- Turn off wireless connections such as mobile data, Wi-Fi, or Bluetooth when not in use.
- Turn GPS on only when a precise location is needed, such as while using navigation or location-based apps. See [Turning location services on or off](#) on page 151.
- If the **Sleep mode** option in **Settings > Power** is enabled, at low peak times, your phone will turn off the data connection after the screen has been off for 15 minutes and there's no network activity (no downloads, streaming, or data usage). The data connection resumes when you switch the screen back on.
- Turn on Airplane mode when you don't need any wireless connections and you don't want to receive calls or messages.

Manage your display

Lowering the brightness, letting the display sleep when not in use, and keeping it simple helps save battery power.

- Use automatic brightness (the default), or manually lower the brightness.
- Set the screen timeout to a shorter time.
- Don't use a live wallpaper for your Home screen. Animation effects are nice to show off to other people but they drain your battery.

Changing your wallpaper to a plain, black background can also help a little. The less color is displayed, the less battery is used.

For more details, see [Settings and security](#) on page 173 and [Personalizing](#) on page 52.

Manage your apps

- Install the latest software and application updates. Updates sometimes include battery performance improvements.
- Uninstall or disable apps that you never use.

Many apps run processes or sync data in the background even when you're not using them. If there are apps that you don't need anymore, uninstall them.


If an app came preloaded and can't be uninstalled, disabling the app can still prevent it from continuously running or syncing data. See [Disabling an app](#) on page 176.

Limit background data and sync


Background data and sync can use a lot of battery power if you have many apps syncing data in the background. It's recommended not to let apps sync data too often. Determine which apps can be set with longer sync times, or sync manually.

- In Settings, tap **Accounts & sync** and check what types of data are being synced in your online accounts. When the battery is starting to run low, temporarily disable syncing some data.
- If you have many email accounts, consider prolonging the sync time of some accounts.

In the Mail app, select an account, tap  > **Settings** > **Sync, Send & Receive**, and then adjust the settings under Sync schedule.

- When you're not traveling from one place to another, sync weather updates of only your current location, rather than in all of your named cities. Open the Weather app, and then tap  to edit and remove unneeded cities.
- Choose widgets wisely.

Some widgets constantly sync data. Consider removing the ones that are not important from your Home screen.

- In Play Store, tap  > **Settings**, and then clear **Add icon to Home screen** to avoid automatically adding Home screen app shortcuts whenever you've installed new apps. Also tap **Auto-update apps** > **Do not auto-update apps** if you're fine with updating apps from Play Store manually.

Other tips

To squeeze in a little bit more battery power, try these tips:

- Tone down the ringtone and media volume.
- Minimize the use of vibration or sound feedback. In Settings, tap **Sound & notification** and choose which ones you don't need and can disable.
- Check your apps' settings as you may find more options to optimize the battery.

HTC Dot View

Personalizing HTC Dot View

If you bought the HTC Dot View™ case designed for HTC Desire EYE, use its app to personalize what's seen through the case.

To use the app, tap  > **HTC Dot View**.




The HTC Dot View app is available in Google Play. Make sure to install the latest app update.

Wallpaper



Choose a preset wallpaper, or create your own dotted wallpaper from a photo.

1. In the HTC Dot View app, tap **Themes**.
2. Choose a preset pattern as your wallpaper.

To create your own wallpaper, tap , and then choose whether to use an existing photo from Gallery or take a new photo.

3. If you selected or taken a photo, crop the photo, and then tap **Done**.
4. Tap **Apply**.

For best results when creating your own wallpaper, use a simple image with distinct colors between the subject and background. For example, use an image that shows a high-contrast subject on a simple background.

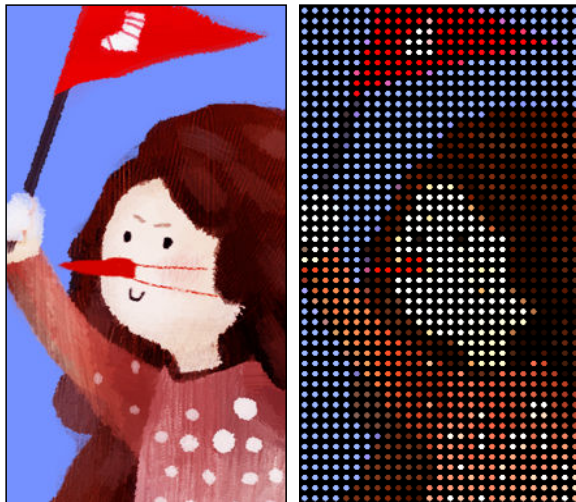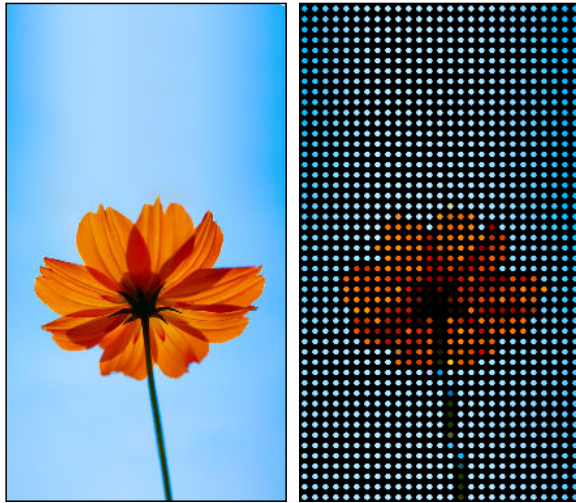

Types of notifications to display

Alerts for clock alarms, timers, and calendar events will automatically display through the HTC Dot View case. You can choose whether to display or hide notifications for apps—which include Mail, Messages, Phone, and more.

1. In the HTC Dot View app, tap **Notification settings**.
2. Choose which app notifications you want to show or hide.

Not seeing recent calls on HTC Dot View?

By default, up to 3 received or dialed numbers will be displayed on HTC Dot View.

- If you're not seeing them, open the HTC Dot View app, and then select **Show call history**.
- If you've set a screen lock with credentials, you need to select **Bypass security screen** to display the recent calls.

Music controls or app notifications not appearing on HTC Dot View?

Check if HTC Dot View Music Controls and Notifications are enabled in Settings.

1. Go to **Settings**, and then tap **Sound & notification** > **Notification access**.
2. Tap the **HTC Dot View Music Controls** and **HTC Dot View Notifications** options if they're not selected.


Need more details?

For more details, see the HTC Dot View Get started guide that comes with the case.

HTC Guide

Having hardware or connection problems?

Before calling for support, you can first use the HTC Guide app to troubleshoot or perform diagnostics on your phone. This helps you in finding the problem cause, and in determining whether you can resolve the problem or you need to call for support.

To use the app, tap  > **HTC Guide**.



If HTC Guide is not preinstalled on your phone, you can download it from Google Play.

Personalizing

Making HTC Desire EYE truly yours

Make HTC Desire EYE look and sound just the way you want it.

- Choose a ringtone and other sounds that you like to use. See [Ringtones, notification sounds, and alarms](#) on page 52.
- Personalize your Home screen with a different wallpaper. See [Home wallpaper](#) on page 53.
- For the lock screen, you can use the same wallpaper as your Home screen or choose a different wallpaper. See [Changing the lock screen wallpaper](#) on page 58.
- Change the apps on the launch bar. See [Launch bar](#) on page 53.
- Populate your Home screen with widgets and shortcuts. See [Adding Home screen widgets](#) on page 53 and [Adding Home screen shortcuts](#) on page 54.
- Need another widget panel? See [Adding or removing a widget panel](#) on page 55.
- Set HTC BlinkFeed or a widget panel as your main Home screen. See [Changing your main Home screen](#) on page 56.
- Organize your apps. See [Arranging apps](#) on page 57.

Ringtones, notification sounds, and alarms

1. Go to Settings, and then tap **Personalize**.
2. Under Sound, choose different sounds for your ringtone, system notification, and alarm.
Go to the Messages, Mail, and Calendar apps to choose sounds for new messages, email, and event reminders respectively.



Want alarms to ring louder but notifications to be more discreet? In Settings, tap **Sound & notification** > **Volumes** and set the volume levels for each sound type.

Home wallpaper


Choose from the available wallpapers, or use any photo you've taken with the camera.


1. Press and hold an empty space on a widget panel.
2. In the pop-up menu, tap **Home screen wallpaper**.
3. Choose from where you want to select a wallpaper.


To use a photo you captured with the camera, tap **Gallery**, choose and crop a photo, and then tap **Done**.

Launch bar

The launch bar gives you one-touch access to commonly used apps (and other shortcuts). You can replace the apps on the launch bar with the ones you often use.

1. Press and hold the app you want to replace, and then drag it out to .

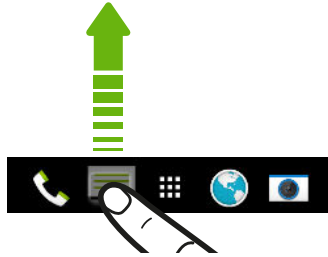


2. Tap  to go to the Apps screen.
3. Press and hold an app, and then drag it to the empty slot on the launch bar.




- You can also group apps on the launch bar into a folder. See [Grouping apps on the widget panel and launch bar](#) on page 57.
- The apps (or other shortcuts) on the lock screen are the same as the ones on the launch bar.

Adding Home screen widgets

Widgets make at-a-glance important information and media content easily available. Choose from a selection of widgets and add the most useful ones to your Home screen.

1. Press and hold an empty space on a widget panel.
2. In the pop-menu, tap **Add apps and widgets**.
3. Tap  > **Widgets**.

4. Scroll through the widgets, or tap  to search for a specific widget.

Some widgets are available in different styles and sizes.


5. Press and hold and then drag the widget to a widget panel you want to add it to.

You can also add widgets that allow you to quickly switch on or off certain settings such as Wi-Fi and Bluetooth.

Changing the settings of a widget

You can modify basic settings of some widgets (for example, the People widget).

1. Press and hold a widget on your Home screen, and then drag it to .

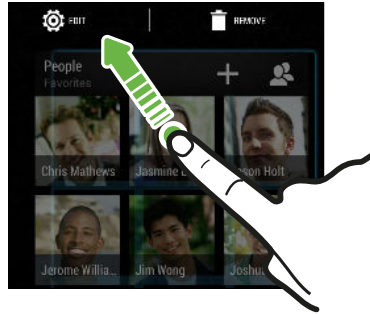

2. Customize the widget settings.



Resizing a widget

Some widgets can be resized after you've added them to your Home screen.

1. Press and hold a widget on the Home screen, and then release your finger. If a border appears, that means the widget is resizable.
2. Drag the sides of the border to enlarge or shrink the widget size.

Adding Home screen shortcuts

Place apps you often use on any widget panel of your Home screen. You can also add shortcuts to frequently used settings, bookmarked webpages, and more.

1. Press and hold an empty space on a widget panel.
2. In the pop-up menu, tap **Add apps and widgets**.
3. Tap  > **Apps** or **Shortcuts**.
4. Scroll through the apps or shortcuts, or tap  to search for one.
5. Press and hold and then drag an app or a shortcut to a widget panel you want to add it to.



To add an app from the Apps screen, press and hold the app, and then drag it to a widget panel.

Editing Home screen panels

Adding or removing a widget panel



- You won't be able to add a new widget panel if you've already reached the maximum limit.
- HTC BlinkFeed always appears as the first panel (if it's not removed). A widget panel cannot be added before HTC BlinkFeed.

1. Press and hold an empty space on a widget panel.
2. In the pop-up menu, tap **Manage home screen pages**.
3. To add a new widget panel, swipe left until you see the **+** icon, and then tap it.
4. To remove a widget panel, swipe left or right until you see the panel, and then tap **Remove**.
5. When done, press **↶**.

Arranging widget panels




A widget panel cannot be moved and inserted before HTC BlinkFeed.

1. On HTC BlinkFeed or any widget panel, slide two fingers together to customize the Home screen.
2. Press and hold a widget panel thumbnail, and then drag it left or right to the position that you want.
3. When you're done arranging widget panels, press **↶**.

Moving a widget or icon


You can easily move a widget or icon from one widget panel to another.

1. Press and hold the widget or icon with one finger.
2. With another finger, flick left or right to rotate the screen to another widget panel.

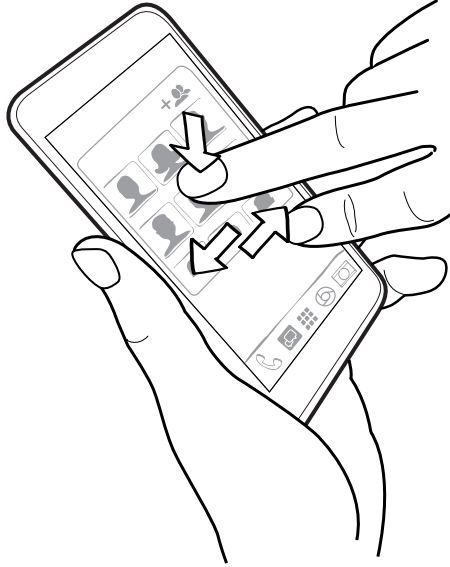


3. Release the widget or icon.

Removing a widget or icon



1. Press and hold the widget or icon you want to remove, and then drag it to .
2. When the widget or icon turns red, lift your finger.

Changing your main Home screen

Set HTC BlinkFeed or a widget panel as your main Home screen.


1. Press and hold an empty space on a widget panel.
2. In the pop-up menu, tap **Manage home screen pages**.
3. Swipe left or right until you see the panel that you want to use as your main Home screen.
4. Tap **Set as home**.
5. Press .



Pressing  from an app will first return you to the last panel you were in. Just press  again to go to your main Home screen.

Grouping apps on the widget panel and launch bar


1. Press and hold an app, and then drag it over to another app to automatically create a folder.

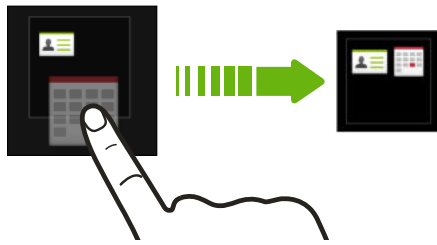

2. Tap the folder to open it.
3. Tap the folder window's title bar, and then enter a new folder name.
4. Add more apps into the folder. Tap **+**, select your apps, and then tap **Done**.




You can also add shortcuts to settings or information to a folder. Add a shortcut first to a widget panel, and then drag it over to the folder.

Removing items from a folder




 

1. On the launch bar or widget panel, tap a folder to open it.
2. Press and hold an app or shortcut in the folder, and then drag it out to .

Arranging apps

On the Apps screen, you can rearrange the apps and change the layout.

1. From HTC BlinkFeed or any widget panel, tap .
2. Tap , and then choose how to arrange apps, such as alphabetically.
If you want to group apps into folders or rearrange them, select **Custom**.
3. Tap  > **Grid size** to choose whether to display more or fewer apps per page.

Moving apps and folders

1. On the Apps screen, tap  > **Custom**.
2. Tap  > **Rearrange apps**.
3. Press and hold an app or folder, and then do one of the following:
 - Drag the app or folder to another position on the same page. Wait until you see the occupying icon move away before releasing your finger.
 - Drag the app or folder to the  or  arrow to move it to another page.
4. When you're done moving apps and folders, tap .

Grouping apps into a folder

1. On the Apps screen, tap ▼ > **Custom**.
2. Tap ■ > **Rearrange apps**.
3. Press and hold an app, and then drag it over to another app to automatically create a folder.
4. To add more apps, drag each app over to the folder.
5. To name the folder, open the folder, tap its title bar, and then enter a folder name.
6. When done, tap ✓.

Removing apps from a folder

1. On the Apps screen, tap ▼ > **Custom**.
2. Tap ■ > **Rearrange apps**.
3. Tap the folder to open it.
4. Press and hold an app, and then drag it out to the Apps screen. Wait until you see the occupying icon move away before releasing your finger.
5. When you're done removing apps, tap ✓.

Hiding or unhiding apps

1. On the Apps screen, tap ■ > **Hide/Unhide apps**.
2. Select the apps you want to hide, or clear their check boxes to unhide them.
3. Tap **Done**.

Lock screen

Changing the lock screen wallpaper

Use the home wallpaper, or use any photo you've taken with the camera as the lock screen wallpaper.

1. Go to Settings, and then tap **Personalize**.
2. Tap **Lock screen wallpaper**
3. In the pop-up menu, tap **Use home screen wallpaper** or tap **Use custom wallpaper** to select a photo from Gallery.

Changing lock screen shortcuts

To change apps (or other shortcuts) on the lock screen, change the ones on the launch bar. To find out how, see [Launch bar](#) on page 53.

Choosing what notifications to show on the lock screen

Choose the types of notifications to show or hide on the lock screen. You can also prioritize notifications from your favorite apps.



The app notifications you allow or block will be applied for both the lock screen and Notifications panel.

1. Go to Settings, and then tap **Sound & notification**.
2. Under Notification, tap **App notifications**.
3. Tap an app, and then choose whether to block or prioritize its notifications.



If you don't want any notifications to show on your lock screen, tap **Sound & notification > When device is locked > Don't show notifications at all**.

Turning the lock screen off

Rather not have to unlock your phone every time you wake it up? You can turn the lock screen off in Settings.


1. Go to Settings, and then tap **Security**.
2. Tap **Screen lock > No lock screen**.



To turn the lock screen on again, in Security settings, tap **Screen lock > Lock screen**.

HTC BlinkFeed

What is HTC BlinkFeed?

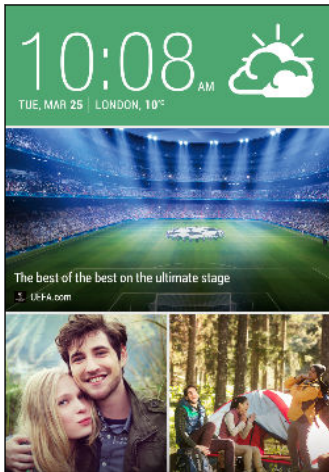Get the latest about your interests or stay in touch with friends right on HTC BlinkFeed. Set up which social networks, news sources, and more will appear.





- Swipe up or down to browse stories on HTC BlinkFeed.
- Tap a tile to view the content or to comment on a post or status update.
- While viewing a news article, swipe left or right to see more stories.
- While in HTC BlinkFeed, you can press  or  or tap the status bar to scroll to the top.
- Scroll to the top and pull down on the screen to manually refresh the stream.
- Swipe right on HTC BlinkFeed to open the slideout menu where you can choose the type of feeds or add your custom topics to display.



You'll see the clock widget on HTC BlinkFeed if you've set HTC BlinkFeed as the main Home screen.

Turning HTC BlinkFeed on or off


1. On HTC BlinkFeed, slide two fingers together, and then tap .
2. While HTC BlinkFeed is selected, tap **Remove**.
3. To add it back, swipe right, and then tap the  button that has the word **BlinkFeed**.


Ways of adding content on HTC BlinkFeed

Personalize HTC BlinkFeed to show articles and status updates from your favorite news sources, categories, editions, and apps.

Selecting feeds

Discover stories and articles on HTC BlinkFeed based on your interests, favorite categories, and popular news channels or websites.

1. On HTC BlinkFeed, swipe right to open the slideout menu.
2. Tap  > **Add content**.
3. Choose a category. Or, if it's your first time to add content on HTC BlinkFeed, tap the tile that says **Get automatic recommendations from BlinkFeed**. Sign in to get recommendations.
4. Select one or more feed sources.

You can tap a name first to check out a particular feed, and then tap  to add it to HTC BlinkFeed.


While browsing the Highlights feed, you may get recommendations for new stories or sources that may be of interest to you. Tap  in a tile that says **New** to subscribe to its website or channel's feed.

Showing content from your apps and social networks

See your friends' posts in social networks or show content from your HTC apps right on HTC BlinkFeed.




You need to sign in to your social networks to see their feeds on HTC BlinkFeed.

1. On HTC BlinkFeed, swipe right to open the slideout menu.
2. Tap  > **Services & Apps**, and then select the apps and social networks you like.



Searching and adding a topic of interest

Looking for a more specific topic? Search for and select topics of interest to display them on HTC BlinkFeed.

1. On HTC BlinkFeed, swipe right to open the slideout menu.
2. Tap **Search for content**, and then enter the topic you're looking for.
3. Tap a result, and then tap  to add it under Custom topics.

Subscribing to multiple regional editions

Want to keep up to date on current events in more than one region? You can show one or more editions of your choice on HTC BlinkFeed.

1. On HTC BlinkFeed, swipe right to open the slideout menu.
2. Tap  > **Add content**.
3. Tap , and then select a locale or region.
4. Select the feed sources to add.

Subscribing to an RSS feed

Don't want to miss out on news and updates from your favorite blog or website? Add custom RSS feeds on HTC BlinkFeed.


1. Open the Internet app.
2. Go to the RSS feed URL of the blog or website you want to subscribe to.
3. Tap  to add it to HTC BlinkFeed.

Customizing the Highlights feed

Go to the Highlights feed to see a mix of top trending articles and status updates from the feed sources you added. You can also set the Highlights feed to only show items from your favorite news sources, categories, and apps.




You cannot add custom topics and RSS to the Highlights feed.

1. On HTC BlinkFeed, swipe right to open the slideout menu.
2. Tap  > **Settings** > **Choose Highlights topics**.
3. Select the feed sources you want to appear in Highlights.

Saving articles for later

Don't have time to read that potentially interesting article? You can bookmark articles to your reading list.

Do one of the following:

- While viewing an article, tap .
- On HTC BlinkFeed, press and hold the tile of the article you want to bookmark. Then tap **Read later**.

To access your reading list on HTC BlinkFeed, swipe right, and then tap **News reading list** in the slideout menu.

Posting to your social networks

You can easily post a status update from HTC BlinkFeed.



You need to sign in to your social networks before you can post a status update from HTC BlinkFeed.

1. On HTC BlinkFeed, swipe right to open the slideout menu.
2. Tap > **Compose**, and then choose a social network.
3. Compose your status update and post it on your social network.

Removing content from HTC BlinkFeed

Whether it's a tile or an entire feed, you can remove content you don't want to see on HTC BlinkFeed.

- To remove a tile, press and hold the tile you want to remove, and then tap **Remove**.
- To remove a feed source, in the slideout menu, tap > **Remove content**, select one or more items, and then tap **Remove**.

To unsubscribe to a localized edition, tap on the Remove content screen. Tap **Remove editions**, select one or more items, and then tap **Remove**.

Camera

Camera basics


Camera screen


Take great photos and videos with the camera, and make them more memorable by applying a variety of filters and scenes.

HTC Desire EYE has a dedicated CAMERA button that you can use to launch the camera and to take your shots.



You can set the CAMERA button to automatically open to selfie mode or the main camera in camera settings.

Open the Camera app and tap  to see all controls on the Viewfinder screen. You can use the controls to switch capture modes, add filters, set the flash, and more.

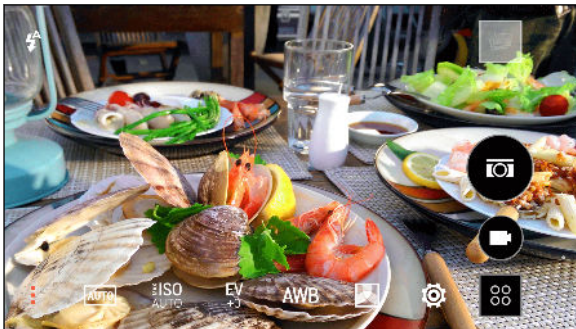

See a collection of camera scenes when taking photos and videos.



Choose an ISO level or set it back to **Auto**. Higher ISO works best in low light conditions.



Adjust the exposure settings. Higher exposure settings capture more light for your photos or videos.



Select a white balance setting that matches your current lighting environment.




Apply photo or video filters.



Modify basic and advanced camera settings.

Choosing a capture mode

HTC Desire EYE gives you a variety of capture modes to use.

On the Viewfinder screen, tap , and then select a capture mode to use.

Zooming

Zooming works on both the main camera and front camera.



- Before taking a photo or video, slide two fingers apart to zoom in or together to zoom out.
- When you're recording video, you can freely zoom in or out while recording.

Applying a filter

Use the available filters to make your photos and videos look like they've been taken through special lenses.



Some camera modes may not support filters.

1. On the Viewfinder screen, tap  to show the camera options.
2. Tap , and then choose one of the available filters.



Turning the camera flash on or off

When using the main or front camera, tap the flash icon to choose a flash mode.


- When using the main camera, you can choose flash on or auto flash mode. The camera will intelligently set the best flash brightness for your photo.
- When using the front camera, you can set the flash to go off when taking selfies.
- When using the main or front camera, you can set the flash to remain on when taking videos.


 
Configuring the volume buttons


In the Camera app, you can set the VOLUME buttons to function as the shutter release or zoom controls.

1. On the Viewfinder screen, tap .
2. Tap  > **Volume button options**.
3. Choose how you want to use the volume buttons when you're in the Camera app.




Closing the Camera app

To give you a full view of the Viewfinder screen, HTC Desire EYE replaces , , and  with small dots.

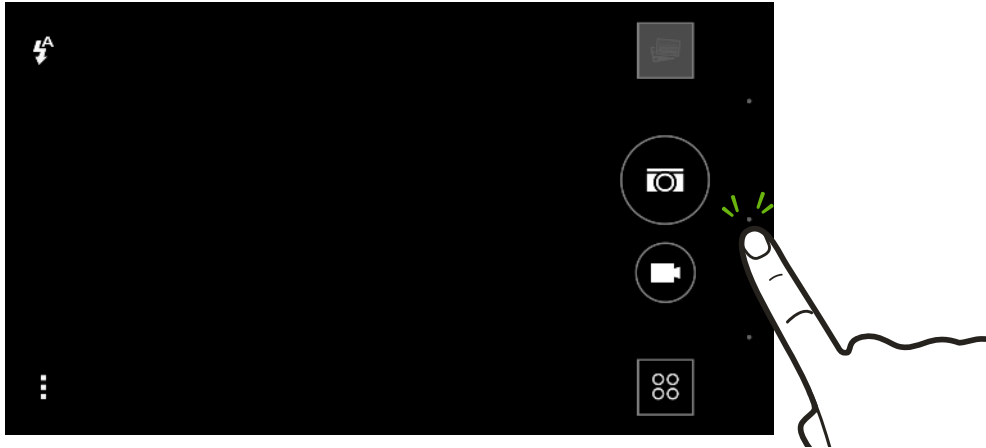Tap a dot to show these buttons again, and then tap  or  to close the Camera app and return to the Home screen or the previous screen.



Taking a photo

1. Open the Camera app.
2. Switch to **Camera** mode.
3. To choose a photo resolution, tap  on the Viewfinder screen, and then tap  > **Resolution**.
4. Point the camera at what you want to capture. The camera adjusts the focus automatically as you move it.
5. When you're ready to take the photo, tap . Or you can use the CAMERA button. Press halfway down to focus, and press all the way to capture the shot.

Tips for capturing better photos

To get better captures with the Camera app, here are some tips on what to do while taking your shots.

Improving focus and sharpness

- HTC Desire EYE has autofocus, which works best on a subject that is not moving too much. To change the focus, on the Viewfinder, tap the one you want to focus on.
- If the subject is moving, on the Viewfinder, press and hold the subject to lock the focus.
- You can manually adjust the sharpness of a photo by editing in Gallery. You can also set the sharpness before taking a photo in the Camera settings.

Generally, it is better to sharpen a blurry image rather than to reduce the sharpness in an image.





Taking well-lit photos

- HTC Desire EYE automatically adjusts the focus and exposure. If the image appears underexposed or that it appears dark on the Viewfinder, tap a part of the image that is in shadow. Conversely, tap a well-lit object in the image if the image seems to be overexposed. Focus on an object with a neutral tone for a balanced exposure. Keep in mind that tapping on another object may shift the focus from your subject.
- If you are using the default settings and the photo still appears too dark, switch to Night scene, but place HTC Desire EYE on a level surface to keep it steady.
- If there are parts of the image that are in shadows and others are in highlights, use HDR to capture multiple shots of different exposures and combine them into one shot. Keep HTC Desire EYE steady or place it on a level surface when using HDR.
- When taking a panoramic photo, consider the whole scene and focus on an object that has a neutral tone to help keep the exposure balanced in the composite image.
- If your subject is lit from the back, use Backlight scene to highlight the foreground and keep some details of the background.

Other tips

- In Camera settings, tap **Grid** to help frame the subject better or improve the composition.
- If taking photos under fluorescent or incandescent bulbs and the subject appears to be off-color, tap **AWB**, and then choose a white balance setting. Check the image on the Viewfinder and select the option that displays the closest color to the natural color of the subject.
- In Camera settings, you can tap **Image adjustments** and adjust the contrast, saturation, and sharpness before taking the photo.
- After capturing the photo, you can continue to edit the contrast, brightness, and other settings in Gallery.

Recording video

1. Open the Camera app.
2. Switch to **Camera** mode.
3. When you're ready to start recording, tap .
4. Change focus to a different subject or area by just tapping it on the Viewfinder screen.
5. Tap the flash icon to turn the flash on or off.
6. Tap  to pause the recording, and then tap  to resume.
7. To stop recording, tap .

 

Taking a photo while recording a video — VideoPic



Choose **Auto** scene to use this feature.

While you're recording video using the main camera, tap  to capture a still shot of your subject.

Setting the video resolution



1. Switch to **Camera** mode.
2. On the Viewfinder screen, tap  to show the camera options.
3. Tap .
4. Tap **Video Quality**, and then choose a video resolution.

Taking continuous camera shots

Do you want to take photos of moving subjects? Whether it's your kid's football game or a car race, you can capture the action.



Choose **Auto** scene to use this feature.

1. Open the Camera app.
2. Switch to **Camera** mode.
3. On the Viewfinder screen, just press and hold . Or simply press and hold the CAMERA button. The camera takes up to 20 consecutive shots of your subject.
4. To keep just one photo, select the photo that you like the most, and then tap **Best shot**.
To save the photos as a batch, press .




Selfies and people shots

Tips for taking selfies and people shots

Do you want yourself, your family, and friends to look best in your shots? Here are some camera options you can adjust or select before taking selfies and people shots.

Portrait scene

Using the Portrait scene helps a little in smoothing the skin in your selfies and people shots.



1. Switch to **Camera** or **Selfie** mode. To find out how to switch between capture modes, see [Choosing a capture mode](#) on page 64.
2. On the Viewfinder screen, tap  to show the camera options.
3. Tap .
4. Tap  to select the Portrait scene.

Live Makeup for selfies

Touch up your skin with Live Makeup before taking your selfie. See [Applying skin touch-ups with Live Makeup](#) on page 69.



Angle of selfies

Do you want the angle of your shots to look exactly the same as how you see yourself on the Viewfinder screen?

1. Switch to **Selfie** mode. To find out how to switch between capture modes, see [Choosing a capture mode](#) on page 64.
2. On the Viewfinder screen, tap  to show the camera options.
3. Tap  > **Camera options**.
4. Select the **Save mirror image** option.

Skin touch-ups for people shots

Beautify the skin of your subjects before taking their shots.

1. Switch to **Camera** mode. To find out how to switch between capture modes, see [Choosing a capture mode](#) on page 64.
2. On the Viewfinder screen, tap  to show the camera options.
3. Make sure you're using the **AUTO** scene setting.
4. Tap .
5. Tap **Make-up level**, and then adjust the skin smoothing level.

Applying skin touch-ups with Live Makeup

Touch up your skin before taking your selfie. Live Makeup smoothens your skin in real time.


1. Switch to **Selfie** or **Photo booth** mode. To find out how to switch between capture modes, see [Choosing a capture mode](#) on page 64.
2. To change the skin smoothing level, drag the slider across the adjustment bar.


 


The adjustment bar is shown on the Viewfinder screen by default. To hide it, tap  > , and then clear the **Live Makeup** option.

Using Auto Selfie

Keep still to take an auto selfie—or just smile! You just need to turn this feature on in the camera settings.

1. Open the Camera app.
2. Switch to **Selfie** mode. To find out how to switch between capture modes, see [Choosing a capture mode](#) on page 64.
3. On the Viewfinder screen, tap  to show the camera options.




4. Tap  > **Camera options**.
5. Select the **Auto Selfie** option, and then press .
6. Pose and frame yourself on the Viewfinder screen.
7. To take your selfie automatically, look at the front camera, and then:
 - Stay still until the white box turns green on the Viewfinder screen.
 - Or smile at the camera. Hold your smile for a few seconds until your shot is taken.

Using Voice Selfie

Voice Selfie lets you easily take photo or video selfies using voice control. You just need to turn this feature on in the camera settings.



This feature may not be available in all languages.


1. Open the Camera app.
2. Switch to **Selfie** mode. To find out how to switch between capture modes, see [Choosing a capture mode](#) on page 64.
3. On the Viewfinder screen, tap  to show the camera options.
4. Tap  > **Camera options**.
5. Select the **Voice Selfie** option, and then press .
6. Pose and frame yourself on the Viewfinder screen.
7. Look at the front camera, and then:
 - Say *Say Cheese* or *Capture* to take a photo selfie.
 - Say *Action* or *Rolling* to record a video selfie.






You can also use voice capture with the main camera. Switch to **Camera** mode, and then turn on **Voice capture** in the camera settings. Voice capture may not be available in all languages.

Taking photos with the self-timer



When you use the self-timer, the Camera app counts down before taking the shot. You can set the countdown time.

1. Open the Camera app.
2. Choose a capture mode you want to use. To find out how to switch between capture modes, see [Choosing a capture mode](#) on page 64.
3. On the Viewfinder screen, tap  to show the camera options.

- Depending on your selected capture mode, do one of the following:
 - Tap  if you see this icon, and then tap the countdown time that you want.
 - Tap  > **Self-timer**, and then drag the slider to set the countdown time.
- To start the timer, tap . Or simply press the CAMERA button. The camera takes the photo after the countdown.

Taking selfies with Photo Booth

Take several selfies and combine them into a single picture.


- Open the Camera app.
- Switch to **Photo booth** mode. To find out how to switch between capture modes, see [Choosing a capture mode](#) on page 64.
- On the Viewfinder screen, tap , and then choose a layout for your selfies.
- To start capturing, tap . Or simply press the CAMERA button.

The Camera app will take four selfies, capturing each shot every 2 seconds. You can change your pose for every shot.

Split Capture and Crop-Me-In

Using Split Capture mode

Use the Split Capture mode to capture both your selfie and the scenery in front of you.

- Open the Camera app.
- Switch to **Split Capture** mode. To find out how to switch between capture modes, see [Choosing a capture mode](#) on page 64.
- Tap  to toggle between the following options:





Take a photo or record a 15-second video of the scene, and then capture your selfie.



Use both the main and front cameras at the same time to either take a photo or record a video.







- Tap  to take a photo or  to record a video.

5. Tap  to retake the shot from either the main or front camera.
6. To save the image, tap .

Using Crop-Me-In mode

Crop your selfie into the scene at the same time you're taking a photo or video of a famous landmark.

1. Open the Camera app.
2. Switch to **Crop-Me-In** mode. To find out how to switch between capture modes, see [Choosing a capture mode](#) on page 64.
3. Drag your selfie to the position that you want.
4. Slide two fingers together or apart to resize your selfie.
5. Tap  to take a photo.

The selfie in a photo taken with Crop-Me-In mode may also be repositioned or resized in Gallery. While viewing the photo in full screen, tap it, and then tap  >  > .



Panoramic shots

Taking a Pan 360 photo

The world isn't flat and your photos shouldn't be either. Take a 360-degree panorama of what's around you.



Some camera features are not available when you're in this mode, such as zooming.


1. Open the Camera app.
2. Switch to **Pan 360** mode. To find out how to switch between capture modes, see [Choosing a capture mode](#) on page 64.
3. Hold HTC Desire EYE at face level so you'll have more room to capture scenes above or below you.

4. When you're ready to take the first shot, center the white box within the Viewfinder markers. The camera automatically captures the frame.
5. Stand in the same spot once you've started capturing, even as you turn around to take more shots.





For best results, remember to:

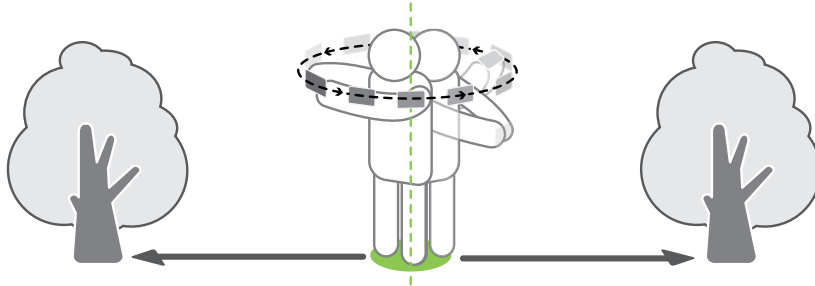- Avoid capturing scenes with moving objects.
- Keep at least five meters distance from the scene.



6. To take succeeding shots, pan HTC Desire EYE as smoothly as you can, and then center another box within the Viewfinder markers. Do this repeatedly until you get your desired frames or when you don't see any more boxes.

To stop capturing anytime, tap .





Photos taken with Pan 360 are indicated by the  icon in Gallery.


Taking a panoramic photo

Get a wider shot of landscapes in one sweep.



Some camera features are not available when you're in this scene, such as zooming.

1. Open the Camera app.
2. Switch to **Camera** mode. To find out how to switch between capture modes, see [Choosing a capture mode](#) on page 64.
3. On the Viewfinder screen, tap  to show the camera options.
4. Tap , and then tap .
5. When you're ready to take the shot, tap . Or simply press the CAMERA button.
6. Pan left or right in either landscape or portrait view. Hold HTC Desire EYE as smoothly as you can to automatically capture frames.

You can also tap  to stop capturing anytime.

The camera stitches the frames into a single photo.





Other camera features

Using HDR

When shooting portraits against a bright background, use HDR, short for High Dynamic Range, to capture your subjects clearly. HDR brings out the details of both the highlights and shadows, even in high contrast lighting.



HDR works best when your subject is steady. The camera takes multiple shots at different exposure levels and combines them into one enhanced photo.


 



1. Open the Camera app.
2. Switch to **Camera** mode. To find out how to switch between capture modes, see [Choosing a capture mode](#) on page 64.
3. On the Viewfinder screen, tap  to show the camera options.
4. Tap , and then tap .
5. To take an HDR photo, tap .

Recording videos in slow motion

Relive high speed action bit by bit and add a touch of suspense to your videos.





Audio is recorded when you're in this scene, but will only be available when video is played back in normal speed.


1. Open the Camera app.
2. Switch to **Camera** mode. To find out how to switch between capture modes, see [Choosing a capture mode](#) on page 64.
3. On the Viewfinder screen, tap  to show the camera options.
4. Tap , and then tap .
5. Tap  to start recording.
6. To stop recording, tap .



Camera settings

Manually adjusting camera settings

Want to have expert command of your camera settings for different environments or lighting conditions? You can manually adjust the values for settings like white balance, exposure, ISO, and more.

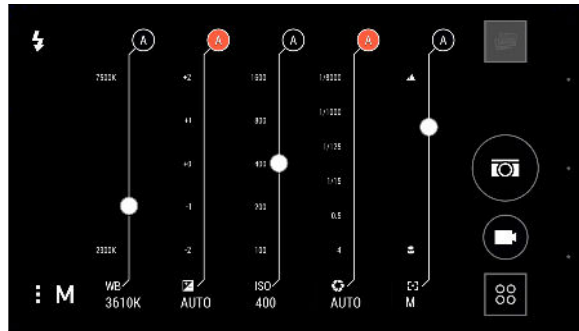1. Open the Camera app.
2. Switch to **Camera** mode. To find out how to switch between capture modes, see [Choosing a capture mode](#) on page 64.
3. On the Viewfinder screen, tap  to show the camera options.
4. Tap , and then tap **M**.
5. Tap a setting, and then drag across its slider to make adjustments.



6. When done, tap . To display the settings again, just tap .
7. When you're ready to take a photo, tap .



You can save your customized settings as a new camera mode.


Saving your settings as a camera mode


Save a scene or custom settings as a new camera mode so you can conveniently use it anytime you need it.

1. Open the Camera app.
2. Switch to the camera mode you want to use.



Some camera modes may not support modifying the camera settings.

3. On the Viewfinder screen, tap  to show the camera options.
4. Modify the settings as desired.

5. When done, tap  > **Save custom camera**.
6. Enter a name, and then tap **Save**.

To select and use the newly created camera mode, tap  on the Viewfinder screen.






Gallery

Viewing photos and videos in Gallery


Reminisce about good times. Use Gallery to view all your photos and videos. View them by time, album, or location. When viewing your photos and videos, the onscreen navigation buttons will be hidden. Tap anywhere on the screen to see Gallery controls and onscreen navigation buttons.

Viewing photos and videos organized by time

Switch to Timeline view when you want to view your photos and videos according to when they were taken.


1. Open the Gallery app.
2. Tap  > **Timeline** to switch to Timeline view.
You'll then see tab icons for switching between different layouts.
3. Tap  to see your photos and videos individually arranged in a feed.
4. Tap  to see your photos and videos in a grid layout.
5. Tap  to see your photos and videos organized by events.
6. Tap  to see your photos and videos organized by year, then tap a month to see the shots you've taken at that time.
7. Tap a photo or video to see it in full screen.

Viewing photos and videos by album

1. Open the Gallery app.
2. Tap  > **Albums** to switch to Albums view.
3. Tap a tile to open an album.
4. Tap a photo or video to see it in full screen.



Viewing your favorite photos

Easily see all your favorite photos in one place. You can add photos to the My favorites album.

- To add a photo, find and view the photo in full screen, tap the photo, and then tap  > **Favorite**.
- To view these favorite photos, open the My favorites album.
- To remove a photo from the My favorites album, press and hold the thumbnail and then tap **Remove**.


Showing or hiding albums

Have too many albums cluttering up Gallery? You can choose to show or hide albums.

1. In Gallery, tap  > **Albums**.
2. Tap  > **Show/hide albums**.
3. Choose which albums you'd like to show or hide.

Renaming an album

If you have created albums to organize photos, you can rename these albums.

1. In Gallery, tap  > **Albums**.
2. Press and hold the album that you want to rename.
3. Tap **Rename**.






Some albums, such as Camera shots and Highlights, cannot be renamed.

Viewing photos by location


Using Map view, you can view photos according to location.



Only photos with geo-tag info appear on the map.


1. Open the Gallery app.
2. Tap  > **Locations** to switch to Locations view.
You'll see tiles of photos taken at specific locations, with numbers that indicate how many photos were taken in each location.
3. Tap  to display Map view.
4. Zoom out or pan across the map until a numerical location indicator  appears.
The number in the location indicator shows how many photos were taken in that area.
5. Tap the location indicator to see the photos taken in that area.




 
Want to know where you took a particular photo? While viewing the photo in full screen, tap anywhere on the screen, and then tap  > **Show on map**. (**Show on map** is available when you've enabled **Geo-tag photos** in Camera.)

Adding location information

Want to specify more than just the city? You can add names of points of interests (POI) to your photos too.



- 1. In Gallery, tap  > **Locations**.
- 2. Tap a tile to open it.
- 3. Swipe to the Places tab.
- 4. Tap **Tap to edit location** > **Add a new place**.
- 5. Tap a point of interest to add a POI from Foursquare™ or tap **New place** to manually enter a new name.
- 6. Tap **Save**.

Changing location information

- 1. In Gallery, tap  > **Locations**.
- 2. Tap a tile to open it.
- 3. Swipe to the Places tab.
- 4. Find the grouping you want to rename, then tap  and try one of the following:

Selecting another POI	<ul style="list-style-type: none">1. Tap Edit location > Tap to edit location.2. Tap a point of interest to add a POI from Foursquare or tap New place to manually enter a new name.3. Tap Save.
Renaming the location	<ul style="list-style-type: none">1. Tap Rename this place. You'll only see Rename this place if the name is stored on HTC Desire EYE.2. Enter a new name.3. Tap Save.

Adding photos or videos to an album

- 1. Open the Gallery app.
- 2. Tap , and then choose how you want to view your photos and videos.
- 3. Open a group of photos and videos, such as an event in Timeline view or an album.
- 4. Tap  > **Add to album**.

5. Select the photos or videos you want to add, and then tap **Next**.
6. Create an album or select an album that you've already created in Gallery. To create a new album to move or copy to, tap **+**.



To add a single photo or video to an album, press and hold the photo or video. Tap **Add to album**, and then select the destination album or create a new album.

Copying or moving photos or videos between albums

1. Open the Gallery app.
2. Tap **≡** > **Albums** to switch to Albums view.
3. Tap a tile to open an album.
4. Tap **⋮** > **Move to** or **Copy to**.
5. Select the photos or videos you want to move or copy and then tap **Next**.
6. Select an album to move or copy the photos or videos to. To create a new album to move or copy to, tap **+**.

Tagging photos and videos


Make your photos and videos easy to find by adding tags, such as short names or keywords.

1. Open the Gallery app.
2. Tap **≡**, and then choose how you want to view your photos and videos.
3. Tap a tile to open a group of photos and videos.
4. Tap **⋮** > **Add tag**.
5. Select items that you'll tag with the same keywords, then tap **Next**.
6. Type in a keyword, and then tap **↵**.
Or, to use an existing tag, just tap it below the text field.
7. Add more keywords when needed.
8. If you need to remove a tag you've added, just tap the tag, and then tap **OK**.
9. Tap **Save**.



To tag a single photo or video, press and hold the photo or video. Tap **Add tag**, and then enter your keywords.

Viewing your tagged photos and videos




1. In Gallery, tap  > **Tags**.

You'll see tiles of your used tags, with numbers that indicate how many photos and videos belong to each tag.




2. Tap a tile to open it and view tagged photos and videos.

Renaming a tag

You can rename a tag that you've already added to your photos and videos.

1. In Gallery, tap  > **Tags**.
2. Find the tile of the tag you want to rename, then tap  > **Rename tag**.
3. Type the new tag name in the text field, then tap .
4. Tap **OK** to save your changes.

Removing tags


1. In Gallery, tap  > **Tags**.
2. Find the tile of the tag you want to modify.
3. To untag photos and videos, tap the tile, and then tap  > **Remove tag**. Select the items, then tap **Remove**.
4. To completely delete a tag, tap  in the tile, then tap **Remove tag**.




Deleting a tag will not delete any of your photos and videos.

Searching for photos and videos

You can search the Gallery using tags and photo locations.



1. Open the Gallery app.
2. Tap .
3. In the search field, type a tag or a location associated with the photo or video you're looking for.

You can also search for photo taken on a specific date. You must use the same date format as that set in **Settings** > **Date & time**, such as 01/13/2015.

4. Tap .
5. Select what you want from the matching results.

Finding matching photos

Looking for photos of a specific person? Use Image match to find photos faster instead of browsing through Gallery.





 
1. Open the Gallery app.
2. Tap , and then choose how you want to view your photos and videos.
3. Tap .
4. Tap **Image match** and find a photo that is visually similar to what you want to find.
5. Tap the photos that are most similar to what you want to find and do one of the following:
 - Tap **Continue** to refine the search.
 - Tap **Finish** to see the results.
6. On the Images matched screen, select all of the images you want to save to a new album, and then tap **Save**.



You can also find matching images while viewing a photo in full screen. Tap  > **Image match**.

Editing your photos

Make your pictures even better. Gallery has an array of editing tools that let you crop, rotate, apply and create photo filters, and much more to your photos.




1. In Gallery, open the photo you want in full screen, tap it, and then tap .
2. Do any of the following:
 - Tap  to apply a special effect to the photo.
 - Tap  to apply a filter to the photo.
 - Tap  to add a decorative frame to the photo.
 - Tap  to draw, rotate, crop, flip, or straighten the photo.
3. Tap **Save**.



Except for when applying rotation, edited photos are saved as copies of the original.

Drawing on a photo

Get more creative with your photos or highlight an interesting part.

1. In Gallery, open the photo you want in full screen, tap it, and then tap .
2. Tap  > **Draw**.
3. Tap  and then choose a pen stroke, color, and thickness.

4. Draw on the photo.
5. Tap **Done** > ✓.

The edited photo is saved as a copy. The original photo remains unedited.

Applying custom filters to photos



Filters can only be applied to photos that are stored locally.

1. In Gallery, open the photo you want in full screen, tap it, and then tap .
2. Tap > . You'll find at the right end of the predefined filters bar.
3. On the Custom Effects screen you can:
 - Make changes to the filter by adjusting the controls on exposure, saturation, white balance, and more.
 - Rearrange filters to modify the effect. Press and hold the filter you want to move. Then drag it to a new position.
 - Remove filters. Press and hold the filter you want to remove. Then drag it to **Remove**.
 - Tap to add more filters.
4. Tap **Save Preset** to name your filter and save it. After saving your filter, you'll see a preview of your photo with the filter applied.
5. Tap ✓ to save the modified photo as a new photo.

Using Face Fusion


Wonder what you would like if you shared the same features as another person? Face Fusion uses a person's photo and a target face to merge the two photos into one.



To use Face Fusion, the faces in each photo have to be 100 x 100 pixels or larger in size. For best results, use facial shots that are without glasses and are not covered by hair, a hat, or any other item. Also, photos of subjects looking towards the camera give the best results.

1. In Gallery, open the photo you want in full screen, tap it, and then tap .
2. Tap > .

3. Tap **+** and then browse to the photo that you want to merge with.
4. Drag the slider to apply Face Fusion to the image.

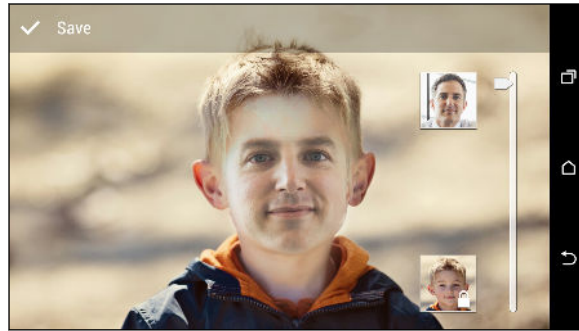




5. When you are satisfied with the result, tap **Save** and choose to save as a photo or video.



To choose another target face, just tap the thumbnail of the target person and browse to a new photo.

Viewing Pan 360 photos






1. Open the Gallery app.
2. Tap **≡**, and then choose how you want to view your photos and videos.
3. Tap a tile to open the thumbnail view.
4. When you see the Pan 360 photo you want, tap it to view in full screen. You can identify Pan 360 photos by the  icon on the thumbnail.
5. Tap  to explore the Pan 360 photo.
6. Try any of the following:
 - Tilt HTC Desire EYE or drag your finger on the screen to pan the photo.
 - Tap the rotation indicator at the top left corner to re-center the photo.
 - Slide two fingers together or apart to zoom the photo.
 - Rotate two fingers to rotate the photo.
 - Tap  to save the current view of the photo.

Creating an animated gif

Create an animated gif that you can quickly upload and share.



You can save a batch of shots that was captured with continuous shooting mode as an animated gif.

1. In Gallery, open the photo you want in full screen, tap it, and then tap .
2. Tap  > . You'll see an animation of the frames.
3. Drag the trim sliders to the part where you want the animated gif to begin and end.
4. Tap **Next**.
5. On the next screen, you can choose the direction you want the animation to play, set the speed of the animation, choose which frames you want to include, and more.
6. Tap  to save, or tap  to save and share the edited GIF.





The edited photo is saved as a copy. The original photo remains unedited.

Creating an action sequence shot

Hop, skip, or jump. Create a sequence shot to stitch a series of actions into one photo.



This feature is available for a batch of shots that was captured with continuous shooting mode.

1. In Gallery, open the photo you want in full screen, tap it, and then tap .
2. Tap  > . You'll see frames that you can combine in one photo.
3. Select the frames that you want to include in the sequence shot.
4. Tap **Done** > .





The edited photo is saved as a copy. The original photo remains unedited.

Editing a group shot

Finding it difficult to choose a group shot with the most smiles and the fewest blinks? Retouch a group shot so everyone looks their best in the photo.



This feature is available for a batch of shots that was captured with continuous shooting mode.

1. In Gallery, open the photo you want in full screen, tap it, and then tap .
2. Tap  > . You'll see circles around any faces detected in the photo.
3. Select one face at a time and drag it sideways with your finger to select the expression you want.
4. Tap **Done** > .






The edited photo is saved as a copy. The original photo remains unedited.

Removing unwanted objects in a photo

Did a pedestrian or passing car ruin your otherwise perfect shot of a famous landmark? Retouch the photo to remove unwanted people or objects.



This feature is available for a batch of shots that was captured with continuous shooting mode.


1. In Gallery, open the photo you want in full screen, tap it, and then tap .
2. Tap  > . You'll see frames around areas in the photo where objects have been automatically removed.
3. To retain an object, tap  on its image on the film strip.
4. Tap **Done** > .


The edited photo is saved as a copy. The original photo remains unedited.


Trimming a video

1. In Gallery, open the video you want to play in full screen.
2. Tap the onscreen controls to pause or resume playback, adjust the volume, and more.



Tap  to share the video on your home network.

3. To trim the video, tap  > **Edit**.
4. Drag the trim sliders to the part where you want the video to begin and end.


5. Tap  to preview your trimmed video.
6. Tap **Save**.

The trimmed video is saved as a copy. The original video remains unedited.

Saving a photo from a video

It's easy to save a still shot from a video.

While you're watching a video in Gallery, tap  to capture a still shot.





You can also pause the playback and drag the slider to the image you want before tapping .

Changing the video playback speed

Want to add a cinematic flair to your video by slowing down a particular scene? You can vary the playback speed of a selected section of a slow motion video.






You can only change the video playback speed of videos captured using the slow motion scene in the Camera app.

1. In Gallery, open the video you want to play in full screen. You can identify slow motion videos by the  icon on the thumbnail.
2. Tap  to switch between normal and slow motion playback.
3. To adjust the playback speed of the video, tap  > **Edit** > **Adjust playback speed**.
4. Frame the sequence you want to slow down by moving the left and right sliders.
5. Drag the slider up or down to choose how fast you want the sequence to play.
6. Tap  to watch the result.
7. Tap **Save**.

The edited video is saved as a copy. The original video remains unedited.

Viewing a Zoe in Gallery

When you view a group of photos and videos such as in an album, Gallery automatically composes a Zoe™. A Zoe is a collection of photos and videos that Gallery has preselected, with added background music and special effects.

1. Open the Gallery app.
2. Tap , and then choose how you want to view your photos and videos.
If you are in Timeline view, you need to go to the Events  or Year  tab.
3. Tap a tile to open a group of photos and videos. You'll then see a preview of the Zoe play automatically.

If you want to edit the Zoe in the Zoe app, tap the Zoe tile in portrait view.

To learn more about the Zoe app, go to the [Zoe Tips & Help](#) page.

Video chat and phone calls

Video chat


While doing a video call using a third-party video chat app, you can use Face Tracking to keep your face in view at all times. You can also use Screen Share to share your phone screen with the person you're calling.


Face Tracking


Want the other party to always have you in view? While doing a video chat using a third-party app, Face Tracking focuses on your face and others around you, and tracks faces that are within the camera's angle of view. Face Tracking can track a maximum of 4 faces.

1. Open your video chat app, and then tap  to open the menu.





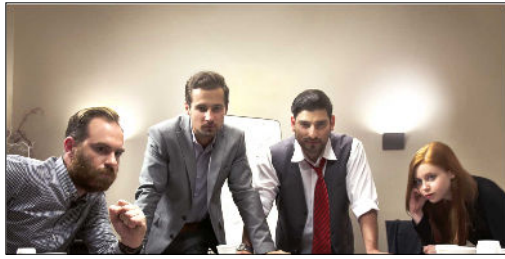



2. Tap  to turn on Face Tracking. As other people around you enter the front camera's field of vision, each person will appear in a window on the other party's video chat screen. Your camera will zoom in or out to keep the faces in focus when you move.



3. Drag the mini-window anywhere you want.
4. Depending on the video chat app, you can single or double-tap the mini-window to switch screens with the called participant.
5. Tap  again to turn off Face Tracking.

Sharing your phone screen

Want to show off some pics or teach your friend how to use a phone feature? Screen Share allows you to show your phone screen to the person you're video chatting with. You need a third-party video chat app to use Screen Share.

1. On the video chat screen, tap  >  to activate Screen Share.
2. On your phone, go to the screen you want to share and then tap . You can go to any screen on your phone and the person you're chatting with will see it.
3. While sharing your screen, you can:
 - Tap  to draw. Trace your finger across the screen to call out important parts.
 - Tap  to pause screen sharing.
 - Tap  to stop screen sharing.



Making a call with Smart dial

You can either dial a number directly, or use Smart dial to quickly place a call. Smart dial searches and calls a stored/synced contact or a number from your call history.

1. Open the Phone app.
2. Enter the phone number or first few letters of the contact's name to see the top matching contact.

3. If there are a number of matches found (for example, 8 matches), tap the number to see all the matches.
4. Tap the contact you want to call.



- To check other phone numbers associated with the contact, tap  beside the contact name.
- If the phone number has an extension, tap  after connecting to the main line and then dial the extension number.


Dialing an extension number

To skip voice prompts when dialing an extension number, do one of the following:

- After dialing the main number, press and hold *. The letter p is added to the number you are dialing. Enter the extension number, and then tap the call button. You will be connected to the mainline and then to the extension number.
- After dialing the main number, press and hold # to add a w. Enter the extension number after the letter w, and then tap the call button. After connecting to the main line, tap **Send** to dial the extension number.

You can save phone numbers with an extension in the People app.

Returning a missed call



You'll see the missed call icon  in the status bar when you miss a call.

1. Slide the Notifications panel open to check who the caller is.
2. To return the call, tap **Call back**.

If you have multiple missed calls, tap the missed calls notification to open the Call History tab.

Speed dial

Use Speed dial to call a phone number with a single tap.

1. Open the Phone app.
2. Tap  > **Speed dial** > . You can also press and hold an unassigned key on the dialpad, and then tap **Yes**.
3. Select a contact from the list.
4. On the Speed dial screen, choose the phone number of the contact to use, and a speed dial key to assign.
5. Tap **Save**.

To use Speed dial, press and hold the speed dial number you want to call.

Calling a number in a message, email, or calendar event

When you receive a text message, email, or calendar event that has a phone number in it, you can just tap the number to place a call.

Making an emergency call

In some regions, you can make emergency calls from HTC Desire EYE even if the nano SIM card has been blocked or if you don't have one installed.



If you don't have a network signal, you won't be able to make an emergency call.

1. Open the Phone app.
2. Dial the emergency number for your locale, and then tap **Call**.



If you've enabled but forgotten your lock password or lock pattern, you can still make emergency calls by tapping **Emergency call** on the screen.

Receiving calls



When you receive a phone call from a contact, the Incoming call screen appears.



HTC Desire EYE will automatically adjust the ringtone volume when you use the polite ringer and pocket mode features.

Answering or rejecting a call

Do one of the following:

- Tap **Answer** or **Decline**.
- If you've set up a lock screen, drag  or  upwards.
- Press the POWER button twice to reject a call.

Muting the ringing sound without rejecting the call

Do one of the following:

- Press the VOLUME DOWN or VOLUME UP button.
- Press the POWER button.
- Place HTC Desire EYE face down on a level surface.






If **Flip to mute** option in **Sound & notification** settings is set to **Mute once**, HTC Desire EYE will still ring when there are subsequent incoming calls.

What can I do during a call?

When a call is in progress, you can turn the speakerphone on, place the call on hold, and more.

Putting a call on hold

To put the call on hold, tap  > **Hold**. The status bar then displays the hold call icon .

To resume the call, tap  > **Unhold**.

Switching between calls


If you're already in a call and you accept another call, you can switch between the two calls.

1. When you receive another call, tap **Answer** to accept the second call and put the first call on hold.
2. To switch between the calls, tap the person you want to talk to on the screen.



Turning the speakerphone on or off during a call



To decrease potential damage to your hearing, do not hold HTC Desire EYE to your ear when the speakerphone is on.


- On the call screen, tap . The speakerphone icon  appears in the status bar.
- To turn the speakerphone off, tap .

Muting the microphone during a call

On the call screen, tap  to toggle between turning the microphone on or off. When the microphone is turned off, the mute icon  appears in the status bar.

Ending a call

Do one of the following to end the call:

- On the call screen, tap **End Call**.
- Slide the Notifications panel open, then tap .

Setting up a conference call

Conference calling with your friends, family, or co-workers is easy. Make or accept a call, and then simply dial each subsequent call to add it to the conference.



Make sure that you have conference calling service activated. Contact your mobile operator for details.

1. Make a call to the first conference call participant.
2. When connected, tap > **Add call**, and then dial the number of the second participant. The first participant is put on hold.
3. When connected to the second participant, tap .
4. To add another participant, tap , and then dial the number of the contact.
5. When connected, tap to add the participant to the conference call. Tap to access options such as ending the call with a participant.
6. To end the conference call, tap **End Call**.

Call History

Use Call History to check missed calls, your dialed numbers, and received calls.

1. Open the Phone app.
2. Swipe to view the Call History tab.
3. Do one of the following:
 - Tap a name or number in the list to call.
 - Press and hold a name or number in the list to display the options menu.
 - Tap to display just a particular type of call such as missed calls or outgoing calls.

Adding a new phone number to your contacts from Call History

1. On the Call History tab, tap next to the new phone number.
2. Choose whether to create a new contact or save the number to an existing contact.

Clearing the Call History list

1. On the Call History tab, tap > **Remove call history**.
2. Select the items you want to delete, or tap > **Select all**.
3. Tap **Delete**.

Blocking a caller

When you block a phone number or a contact, all calls from the phone number or contact will be declined automatically.

On the Call History tab, press and hold the contact or phone number you want to block, and then tap **Block contact**.



You can always remove a caller from your blocked list. On the Call History tab, tap **⋮** > **Blocked contacts**. Press and hold a contact, and then tap **Unblock contacts**.

Switching between silent, vibrate, and normal modes

Do one of the following:

- To change from silent to normal mode, press the VOLUME UP button.
- To change from vibrate to normal mode, press the VOLUME UP button twice.
- Go to Settings, and then tap **Sound & notification** > **Sound profile**.

Home dialing

When you're on a trip abroad, it's easy to dial friends and family from home.

Your home country code is automatically added when you call your contacts while roaming. But when manually entering a phone number to call, you need to enter a plus (+) sign and country code before the number.



Using a roaming service may incur additional charges. Check with your mobile operator for rates before using a roaming service.

Changing the default country code for Home dialing

1. Go to Settings, and then tap **Call**.
2. Tap **Home dialing settings**.
3. Select a country, and then tap **OK**.

 

Turning off Home dialing

If you prefer to manually enter complete phone numbers to call while roaming, you can turn off Home dialing.


1. Go to Settings, and then tap **Call**.
2. Under Other settings, clear the **Home dialing** option.

Messages

Sending a text message (SMS)

1. Open the Messages app.
2. Tap **+**.
3. Enter a contact name or mobile number in the **To** field.
4. Tap the area that says **Add text**, and then enter your message.
5. Tap , or press  to save the message as a draft.







- There is a limit on the number of characters for a single text message (displayed above ). If you exceed the limit, your text message will be delivered as one but will be billed as more than one message.
- Your text message automatically becomes a multimedia message if you enter an email address as the recipient, attach an item, or compose a very long message.

Sending a multimedia message (MMS)



Before attaching and sending a high-resolution video, compress it first so that the file size doesn't exceed the message size limit.



1. Open the Messages app.
2. Tap **+**.
3. Enter a contact name, mobile number, or email address in the **To** field.
4. Tap the area that says **Add text**, and then enter your message.
5. Tap , and then choose an attachment type.
6. Select or browse for the item to attach.
7. After adding an attachment, tap  to see options for replacing, viewing or removing your attachment.
8. Tap , or press  to save the message as a draft.

Sending a group message


Group messaging makes it easy to send a message to multiple contacts all at once. You can choose to send a group SMS or group MMS.



Group MMS may incur extra data fees.

1. Open the Messages app.
2. Tap .
3. Tap , and then select multiple recipients.
4. To send a group SMS, make sure that **Send as individual messages** is selected. Clear this option to send your message as a group MMS.

Group SMS	Your message will be sent to the recipients as a text message and you will be charged by your mobile operator for each message sent. Replies of your recipients are sorted separately.
Group MMS	<p>Similar to a group chat, sending a group MMS lets your recipients join the conversation you've started.</p> <p>HTC Desire EYE also organizes message replies in a single conversation thread. If this is your first time to send a group MMS, you may need to enter your mobile phone number.</p>


5. Tap the area that says **Add text**, then enter your message.
6. Tap .

Resuming a draft message

If you switch to another app or if you receive an incoming call while composing a text message, the message is automatically saved as a draft.

1. Open the Messages app.
2. Tap a draft message, and then edit the message.




To see all draft messages in one place, tap , and then tap **Drafts**.

3. Tap .

Replying to a message



1. Open the Messages app.
2. Tap a contact (or phone number) to display the exchange of messages with that contact.

3. Tap the area that says **Add text**, and then enter your message.
4. Tap .

Replying to a contact's other phone number

When a contact has multiple phone numbers stored on HTC Desire EYE, you can select which phone number to reply to.

Keep in mind that if you don't select another number, your response will be sent to the phone number that your contact used to send the last message.

1. While viewing the exchange of messages with a contact, tap  and select which phone number you want to reply to.
2. Tap the area that says **Add text**, then enter your reply message.
3. Tap .

Saving a text message as a task

Save a text message in your Tasks list so you can remind yourself when to reply.

1. Open the Messages app.
2. Tap a contact (or phone number) to display the exchange of messages with that contact.
3. Tap the message you want to save, and then tap **Save as task**.

Forwarding a message

1. Open the Messages app.
2. Tap a contact (or phone number) to view the exchange of messages with that contact.
3. Tap a message, and then tap **Forward**.


Moving messages to the secure box

You can move private messages to the secure box. You will need to enter a password to read these messages.




- The secure box does not encrypt messages.
- Messages stored on a nano SIM card cannot be moved to the secure box.

1. Open the Messages app.
2. Tap a contact (or phone number) to display the exchange of messages with that contact.

3. Tap  > **Move to secure box**.
4. Select the messages, and then tap **Move**.

 


To move all the messages from a contact, on the Messages screen, press and hold the contact and tap **Move to secure box**.


- To read messages in the secure box, on the Messages screen, tap  > **Secure**. If it is your first time to use the secure box, set a password.
- To remove messages or contacts from the secure box, press and hold the contact (or phone number) and tap **Move to general box**.

Blocking unwanted messages

Declutter your Messages screen by moving spam messages from contacts to the block box. If you have blocked a contact, that contact's text or picture messages will also be in the block box.

- Open the Messages app, press and hold a contact (or phone number) and tap **Block contact**.
- To block multiple contacts, tap  > **Block contacts**, select the contacts, and tap **Block**.


When the contact sends you messages, you will not see them in the Messages screen or receive notifications and calls.

To read messages in the block box, on the Messages screen, tap  > **Block**.





- To remove messages or contacts from the block box, press and hold the contact (or phone number) and tap **Unblock**.
- To completely discard future messages from blocked contacts, clear the **Save block message** option in the Messages settings.

Copying a text message to the nano SIM card

1. Open the Messages app.
2. Tap a contact (or phone number) to display the exchange of messages with that contact.
3. Tap the message, and then tap **Copy to SIM**. The  icon is displayed.

Deleting messages and conversations

Open the Messages app and do any of the following:


Delete a message	Open the conversation thread with a contact, tap the message, and then tap Delete message . To delete multiple messages within a conversation, tap  > Delete messages > Delete by selection , and then select the messages to delete.
Delete a conversation	Press and hold a contact (or phone number), and then tap Delete . To delete multiple conversations, tap  > Delete threads , and then select the conversations to delete.



In the Messages settings, tap **General** > **Delete old messages** to auto delete old messages.

Preventing a message from being deleted

You can lock a message to prevent it from being deleted even if you delete the other messages in the conversation.

1. Open the Messages app.
2. Tap a contact (or phone number) to display the exchange of messages with that contact.
3. Tap the message that you want to lock.
4. Tap **Lock message** on the options menu. A lock icon  is displayed.


Search and web browser

Getting instant information with Google Now

Do you want to check the weather or your morning commute time before you start your day? Google Now™ delivers quick and up-to-date information that matters to you—all without the search.

Depending on your location, time of day, and previous Google searches, Google Now displays information cards that include:

- The day's weather and the weather forecast for upcoming days.
- The traffic conditions on your way to work or your commute back home.
- The directions and travel time to your next appointment.
- The next train or bus arriving at your platform or bus stop.
- Your favorite team's score and stats while you enjoy the game.

 
Open the Google Search app to use Google Now. From the Home screen, tap , and then find and tap **Google**. Or just swipe up from the onscreen navigation buttons.

Setting up Google Now



Before setting up Google Now:

- Make sure that you're signed in to your Google account.
- Turn location services on and make sure that you have an Internet connection. For more information on location services, see [Turning location services on or off](#) on page 151.

1. Open the Google Search app.
2. Tap **Get started**.
3. Read the information screen and then tap **Yes, I'm in**. Google Now information cards will start to appear on the Google search screen.
4. To see all available information cards, swipe up the screen and tap **More**.
5. To keep a card from appearing on the Google search screen, tap  on the card you want to hide, and then tap **No**.

Depending on the information that you've allowed to share, more information cards will appear on the Google search screen as you use HTC Desire EYE to search the Web, create appointments, set reminders, and more.

Changing card settings

You can easily customize the settings of Google Now cards to suit your information needs. For example, you can change the weather units in the Weather card or your transportation mode in the Traffic card.

1. Open the Google Search app.
2. Do any of the following:
 - To change a card setting, such as the weather unit on the Weather card, tap **⋮**, and then tap the arrow buttons when available.
 - To change specific card information such as your work address, sports teams, or stocks you follow, tap **≡** on the search bar, and then tap **Customize**. Choose the information you want to change.

Setting reminders in Google Now

Creating reminders in Google Now is an easy way to keep tab of things to do. You can set time or location-based reminders. When the reminder time is up or when you've arrived at the specified location, Google Now displays the Reminder card in the Google search screen and sounds a notification to alert you.



This feature may not be available in all languages.

1. Open the Google Search app.
2. Tap **≡**, and then tap **Reminders**.
3. Tap **+**.
4. Enter the reminder title, such as the task you want to be reminded of.
5. Select **Time** to set a time-based reminder or **Place** to set a location-based reminder.
6. Set the reminder time or location details.
7. Tap **✓**.


When the reminder time is due or when you've arrived at the location, the Reminder card will appear in the Google search screen. You can then dismiss or snooze the reminder.

Turning off Google Now

1. Open the Google Search app.
2. Tap **≡**, and then tap **Settings > Now cards**.
3. Tap the **On/Off** switch next to **Show cards**, and then tap **Turn off**.

Searching HTC Desire EYE and the Web

You can search for information on HTC Desire EYE and on the Web. In the Google Search app, start your search by entering a keyword or by using Google Voice Search™.


To open Google Search, from the Home screen, tap , and then find and tap **Google**. Or just swipe up from the onscreen navigation buttons.



Some apps, such as People or Mail, have their own search function, which you can use to search only within those apps.

Performing searches on the Web and HTC Desire EYE

1. Open the Google Search app.

If you've already set up a Google account on HTC Desire EYE, you will be given the option to sign in to Google Now. To sign in to Google Now at a later time, tap . See [Getting instant information with Google Now](#) on page 101.



2. In the search box, enter what you want to search for. As you type, matching items on HTC Desire EYE and suggestions from Google web search are shown.
3. If what you're searching for is in the list of suggestions, tap the item to search for it or open it in its compatible app.




You can also filter web search results by tapping any of the categories on the filter bar at the bottom of the screen.


Searching the Web with your voice

Use Google Voice Search to find information on the Web by speaking to HTC Desire EYE.

1. Open the Google Search app.
2. Tap , and then say what you want to search for. After speaking, matching items from Google web search are shown.
3. If what you're searching for is in the list, tap the item to open it in its compatible app. Otherwise, tap  to search again.

Setting search options

1. Open the Google Search app.
2. Tap , and then tap **Settings**.
3. Tap an option you want to set.




To get help or provide feedback, tap , and then tap **Help & feedback**.

Browsing the Web



1. Open the Internet app.
2. Tap the URL box on top of the screen.



If the webpage is in fullscreen mode, flick the screen down to show the URL box and other options.

3. Enter the webpage address or your search keywords.
4. On the webpage, you can:
 - Tap a link to open it, or press and hold a link to see more options.
 - Tap an email address to send a message to the email address, save it to People, and more.
 - Press and hold an image to save, copy, or set it as your wallpaper.
5. To return to the previous webpage you've viewed, tap , and then tap  or .



Maximizing your browsing space

- To hide the status bar when browsing, tap  > **Settings** > **General**, and then select **Fullscreen**.
- While browsing a webpage, tap  > **Desktop View** to display the full desktop version of the webpage.


Using browser tabs

Open multiple browser tabs and quickly switch from one webpage to another.

Open the Internet app.

- To add a browser tab, tap  > **New tab**. Repeat the same to open new browser tabs.
- To switch among browser tabs, tap  and swipe to the webpage you want to view. Tap the browser tab to display the webpage in full screen.




- To close a browser tab, tap , and then tap **X**.

Saving web content for later

Save webpages to read later, even without an Internet connection. You can also add some video clips on webpages to the Watch list so you can quickly find and watch them whenever you like.




HTC Desire EYE saves webpage text and images only. You will need Internet connection to open linked pages and play video clips.

1. While viewing a webpage, tap  > **+**.
2. Tap **Reading list** or **Watch list**.




When the webpage you're adding to the Watch list has one or more video clips, you'll be asked to choose which videos you want to add.

To view a saved webpage or video clip, tap  > **Saved**. Swipe to the Reading list or Watch list, and then tap a webpage or video you want to view.



Setting browser options

 
Customize the web browser to suit your browsing style. Set display, privacy, and security options when using the web browser.

From the browser screen, tap  > **Settings**.


Bookmarking a webpage

Add your favorite webpages as bookmarks so you can access them quickly.

1. While viewing a webpage, tap  >  > **Bookmarks**.
2. On the Bookmark this page screen, you can edit the bookmark name or save the bookmark in a new category folder.
3. Tap **Done**.

To view and open a bookmark, tap  > **Bookmarks**. Navigate to the bookmark you want to open, and then tap it.




You can also add a bookmark directly to the Home screen. While viewing a webpage, tap  >  > **Home screen**.

Using your browsing history

HTC Desire EYE keeps a record of webpages you've visited.



If you don't want HTC Desire EYE to keep your browsing history, browse using an incognito tab. See [Private browsing](#) on page 107.

1. While viewing a webpage, tap  > **History**.
2. Swipe to the History or Most visited tab.
3. Navigate to the webpage that you want to view, and then tap it.

Clearing your browsing history

1. While viewing a webpage, tap  > **Settings** > **Privacy & security** > **Clear history**.
2. Tap **OK**.

All webpage entries in the History and Most visited tabs are deleted.




If you want to delete a single webpage entry, go to the History or Most visited tab, press and hold the webpage entry, and then tap **Remove from history** or **Remove from most visited**.



Only the browsing history stored by the Internet app is deleted. Browsing history stored by other browsers on HTC Desire EYE will remain unaffected.

Private browsing

You can use incognito tabs to browse the Web with more privacy. Browser cookies are deleted and not shared when you close all incognito tabs. Pages you view in incognito also won't appear in your browser history (except for files you've downloaded).

From the browser screen, tap  > **New incognito tab**.

Entertainment

HTC Music

Listening to music

Enjoy your favorite songs on HTC Desire EYE using the Music app.



When you open the Music app for the first time, you'll be asked if you would like to automatically download related content, such as album covers and artist photos, to HTC Desire EYE.

1. Open the Music app.
2. Swipe to the different tabs to browse by category.
3. Tap a song to play.
4. Tap the onscreen icons to control music playback, repeat songs, and more.



	Press and drag your finger across the progress bar to jump to any part of the song.
	Turn shuffle on or off. (Shuffle is off when button is gray.)
	Cycle through the repeat modes: repeat all songs, repeat current song, and don't repeat.
	Play your music on a DLNA® compliant TV or audio system, HTC Media Link HD, or stereo Bluetooth device.
	Minimize the Now playing screen to continue browsing your music collection.



When you're listening to music and the screen display turns off, press POWER to turn the screen back on and control the music playback directly on the Lock screen.

HTC BoomSound profile

With the HTC BoomSound™ profile turned on, you'll still enjoy enhanced audio quality even when you plug in a headset. Listen to stronger bass, clearer vocals, and finer details in songs and videos, especially when played in Music and Gallery apps.

To turn the HTC BoomSound profile on or off, go to **Settings**, and then tap the BoomSound **On/Off** switch.

Music playlists

Personalize your music experience by creating music playlists. Make a playlist containing just your favorite songs or create one to match your mood for the day. You can make as many playlists as you like.

1. Open the Music app.
2. Swipe to the Playlists tab.
3. Tap **+**, and then enter a playlist name.
4. To add songs, tap **+** beside the title text box, browse your music collection, and then tap a song to add.

Repeat this step to add more songs.

5. You can also:

Rearrange songs	Drag ≡ to move the song to its new position.
Delete songs	Select the songs you want to remove from the playlist.
Change playlist name	Type the new name of the playlist in the title text box.

6. Tap **Save**.

You'll find newly created playlists on the Music app's Playlists tab.

To edit or delete a playlist you've created, from the Playlists tab, tap a playlist to open it, and then tap **⋮** > **Edit playlist** or **Delete**.

Adding a song to the queue

While playing a song, you can also browse other tracks stored on HTC Desire EYE. Add a song or an album to the queue so it plays when the current playlist has finished playing.


1. While a song is playing, browse for other tracks.
2. Do any of the following:
 - Browse for the album or playlist that you want, press and hold it, and then tap **Add to queue**.
 - Browse for an artist or song, and then tap **⋮** > **Add to queue**.


The songs you've added appear on the Queue tab.

Updating album covers and artist photos




To save on data usage, you might want to connect to a Wi-Fi network when updating your album covers and artist photos. In Music settings, select **Wi-Fi only**.

1. Open the Music app.
2. Swipe to the Artists or Albums tab.
3. Tap  > **Update artist photos** or **Update album art**.

If you want HTC Desire EYE to automatically check and update your music collection, tap  on the Music app's main screen, and then tap **Settings**. Select **Album art** and **Artist photos**.

Setting a song as a ringtone



Pick a song from your Music library and set it as your ringtone or as ringtone for a favorite contact.

1. Open the Music app.
2. Play the song that you want to set as a ringtone.
3. Tap  > **Set as ringtone**.
4. Tap **Phone ringtone** or **Contact ringtone**.

If you select **Contact ringtone**, choose the contacts you want to associate the ringtone with.

Trimming an MP3 ringtone

Use the Music app's ringtone trimmer if you want to set only a part of the song as ringtone.

1. Play the song that you want to set as a ringtone.
2. Tap  > **Set as ringtone** > **Trim the ringtone**.
3. Drag the trim sliders  to the part where you want the ringtone to begin and end.
For a more precise trimming, tap the left or right arrow buttons. Time markers indicate where you are on the song.
4. When you're done trimming, tap **Set as**.
5. Choose whether to set your trimmed song as your **Phone ringtone** or **Contact ringtone**.



You can see your new ringtone in the phone settings. Go to **Settings** > **Sound & notification** > **Ringtone**.

Viewing song lyrics

Love a song so much that you want to sing along? HTC Desire EYE gives your music an extra kick with song lyrics and cool music visualizations.



To save on data usage, connect to a Wi-Fi network when downloading lyrics. In Music settings, select **Wi-Fi only**.

1. Open the Music app.
2. Browse to the song you want to play and tap it.
3. Swipe to the Visualizer tab to view the lyrics. Song lyrics appear onscreen if content has been successfully downloaded.



Want a different visual for your music? Tap > **Scene** and select a scene. If you want the scene to change for every song, select **Random**.

4. Tap the screen to display the lyrics in full screen.
5. To jump to another part of the song, tap the screen to make the progress bar appear. Press and drag your finger across the progress bar, or press and hold or .



Not all languages are supported.

Finding music videos on YouTube

It's easy to find music videos of the song you're listening to on YouTube.

On the Now playing screen, tap > **Search** > **YouTube**.

YouTube

Watching videos on YouTube

Check out the latest video sensations using the YouTube app.

1. Open the YouTube app.
2. Browse or search for a video.

3. When you find the video that you like, tap it.



Want to watch the video at a later time instead? Tap **:** next to the video title, and then tap **Add to > Watch later**. You can access the video again from your account profile's Watch Later list.

4. While watching a video, you can:

- Turn HTC Desire EYE sideways to watch the video in full screen.
- Tap the video screen to pause or to resume playback, or drag the slider to jump to a different part of the video.
- Scroll down the video information panel to see related videos and comments from other viewers.
- Browse other videos by minimizing the video screen. Tap **✓** or drag the video screen down to minimize. To close the video thumbnail, swipe it left or right.

Minimize the video screen, and then tap **≡** to open the slideout menu. You can view your account profile and manage your subscriptions and video lists.

Creating video playlists

Organize your favorite videos into playlists and watch them in the YouTube app.



Make sure that you're signed in to your Google account.

1. Open the YouTube app.
2. Browse or search for a video.
3. Tap **:** next to the video title, and then tap **Add to > New playlist**.
4. Enter the playlist name, and then tap **OK**.

If you don't want to share the video playlist, select **Private** before you tap **OK**.

5. To add another video to your playlist, browse or search for the video, and then tap **:** next to the video title.
6. Tap **Add to**, and then tap the playlist name.

To access and watch your video playlists, minimize the video screen and then tap **≡** to open the slideout menu. Tap the playlist you want.

FM Radio

Listening to FM Radio

Listen to your favorite radio stations using the FM Radio app.



You need to connect a headset first to the audio jack of HTC Desire EYE to use FM Radio. FM Radio uses the stereo headset as the FM radio antenna.

1. Open the FM Radio app.

2. Tap ►.

The first time you open FM Radio, it scans for local FM stations that you can listen to.

3. While you're listening to an FM station, you can:

- Tap ►► or ◀◀ to go to the next or previous station.
- Drag the slider to tune in to a frequency on the FM band. To fine tune the radio frequency, tap ► or ◀.
- Tap ♥ to mark a radio station as a favorite. To see your other favorites and preset stations, tap <.

4. To turn off FM Radio, tap ■.

Wireless media

HTC Connect

Looking for a new wireless home entertainment system? Find one that has the HTC Connect™ logo.



Experience smooth connectivity and ease-of-use when sharing content wirelessly from HTC phones to HTC Connect certified consumer electronic devices or accessories.

To see a list of these devices or accessories, go to htc-connect.com/certified-devices.html.


You'll also be able to remotely control media playback, adjust the volume, and more.

Sharing your media to HTC Connect enabled devices




Refer to the documentation that came with the HTC Connect enabled device on how to set it up.

1. Open and play any music or other media content that you want to share from HTC Desire EYE.
2. Swipe up with three fingers on the screen.

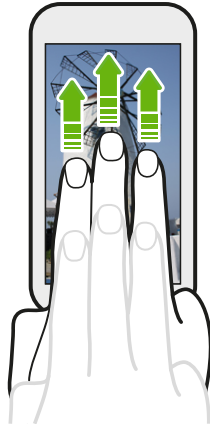

3. Choose the device you want to connect to.

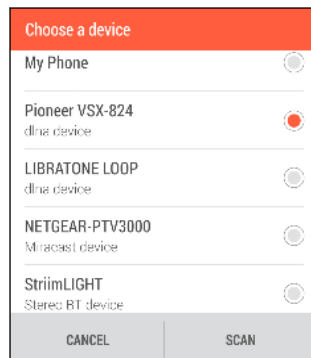

4. Once connected, use your phone to control the volume, pause or resume playback, and more.
5. To stop wireless media sharing and disconnect from the device, swipe down with three fingers on the screen.



For more information, see www.htc-connect.com.

Connecting to your home entertainment system

Want to make your HTC Desire EYE experience bigger and louder? Wirelessly share your videos, music, and even streaming media to a compatible big-screen TV or wireless speaker.

On HTC phones that have HTC Sense 5.5 or later, you can share media to any of the following types of devices by just swiping up with three fingers:

- DLNA — see [HTC Connect](#) on page 113 or [Sharing your media to DLNA devices](#) on page 115
- Miracast™ — see [HTC Connect](#) on page 113
- Bluetooth — see [HTC Connect](#) on page 113
- HTC Media Link HD — see [About HTC Media Link HD](#) on page 115



Some devices may need to be paired before you can share to them.

Sharing your media to DLNA devices



If you'll be using a DLNA compliant audio system or wireless speaker, refer to its documentation on how to connect it to your home network.

1. Connect your DLNA device to your home network via Wi-Fi or an Ethernet cable.
2. Connect HTC Desire EYE to your home network via Wi-Fi.
3. Open any music app on your phone.
4. Swipe up with three fingers on the screen.
5. From the list of available devices, choose where you want to play the music.
6. Once connected to the device, tap the onscreen controls to control playback, adjust the volume, and more.



For more information about DLNA, visit www.dlna.org.

About HTC Media Link HD

Plug in HTC Media Link HD to any TV with an HDMI port. Then swipe up with three-fingers on HTC Desire EYE to connect and display content wirelessly to your TV.



HTC Media Link HD is sold separately.

Multitask with dual-screen display

HTC Media Link HD gives you dual-screen display when you're:

- Viewing a video in Gallery
- Playing music in the HTC Music app

While you're playing media on the big screen, you can multitask and do other things such as take calls, browse the Web, or send email on HTC Desire EYE.

Turns your TV into a digital photo frame

Use the TV screen saver feature to store up to 30 photos from HTC Desire EYE on HTC Media Link HD, and display them as a slideshow on your TV.

To find out more about setting up HTC Media Link HD and using it with HTC Desire EYE, refer to the HTC Media Link HD user guide.

Storage and files

Phone storage

Types of storage

Want to know what types of storage you can use for your apps, data, and files?

HTC Desire EYE has these storage types:

Phone storage	<p>This storage combines both the internal storage, where apps, email, data, and text messages are stored, and the file storage, where photos, videos, and music files are kept.</p> <p>If you are running out of phone storage, see Making more storage space on page 118 for some tips on how to free up space.</p>
Storage card	<p>Use a storage card for storing more files. You can also set some apps to store data or files directly to the card.</p>
USB storage	<p>When you plug in an external USB storage device (such as a USB flash drive or an SD card reader), you can view photos and videos stored on the device right from Gallery and play songs stored on the device in Music. You can also open PDFs and edit Office documents.</p> <p>You need a special cable to connect HTC Desire EYE and a USB storage device. HTC Desire EYE supports USB storage devices (except portable hard drives) up to 64 GB.</p>



- Moving apps to the storage card doesn't back up the apps. If you do a factory reset, your phone loses the apps. You'll need to reinstall them.
- When you remove the storage card and insert it in another phone, the apps on the storage card won't be installed automatically to the other phone. You'll need to reinstall them.

Copying files to or from HTC Desire EYE

You can copy your music, photos, and other files to HTC Desire EYE.



Save and close your files before copying them from your computer to HTC Desire EYE, or vice versa.

1. Connect HTC Desire EYE to the computer using the supplied USB cable. You'll see options for viewing or importing files on the computer screen.
2. Choose to view files.
3. Copy the files from your computer to HTC Desire EYE, or vice versa.
4. After copying the files, disconnect HTC Desire EYE from the computer.

Making more storage space

As you use HTC Desire EYE, you'll accumulate data and fill its storage capacity over time. Here are some tips on how to increase storage space.

Run the storage wizard

Free up space in the storage by uninstalling apps and deleting files you no longer want to keep. In Settings, tap **Storage > Make more space**.

Manage photos and videos

- After taking continuous camera shots, keep only the best shot. Discard the rest, if you don't need them.
- After editing a photo or trimming a video, the original file is kept. Delete original files or move them elsewhere, such as to your computer.
- If you're only sending videos through MMS, use a lower resolution. Hi-res video takes up more space. In Camera settings, tap **Video Quality** to change the resolution.

Back up data and files

Keep only the most recent data in your apps and files that you often need to use. You can back up your other data and files. For some tips, see [Ways of backing up files, data, and settings](#) on page 123.

Disable some apps

See [Disabling an app](#) on page 176.

Move some apps to the storage card

Some third-party apps can be moved from the phone storage to the storage card. Go to **Settings > Apps > On SD card** to see which apps can be moved. To move, tap an app, and then tap **Move**.



- Moving apps to the storage card doesn't back up the apps. If you do a factory reset, your phone loses the apps. You'll need to reinstall them.
- When you remove the storage card and insert it in another phone, the apps on the storage card won't be installed automatically to the other phone. You'll need to reinstall them.

File Manager

About File Manager

Use the File Manager app to browse and organize your files and folders on your phone storage and storage card.

You can also browse for files and folders on your external USB storage device when you have it connected to your phone. For details, see [Types of storage](#) on page 117.

Switching between storage types

1. Open the File Manager app.
2. Swipe left or right to switch to a file storage where you want to browse or organize your files.

Searching for files

1. In File Manager, tap .
2. In the search box, enter a few characters of the filename. Matching filenames from the root and subfolders are then displayed.
3. Tap a file to open it.

Sorting your files

1. In File Manager, tap > **Sort**.
2. Choose how you want to sort your files and folders.

Copying or moving files

1. In File Manager, browse for the file or folder.
2. Select items to copy or move.
3. Tap **Copy** or **Move to**.
4. Press , and then browse for the folder where you want to copy or move the files.
Or tap > **Create folder** to create a new folder.
5. Tap **Paste**.

Deleting files or folders

1. In File Manager, browse for the file or folder.
2. Select items to delete.
3. Tap **Delete**.

Google Drive

Using Google Drive on HTC Desire EYE

Store your photos, documents, and other files on Google Drive to access them on HTC Desire EYE, your computer, and your other mobile devices.

On HTC Desire EYE, just use your Google Account to sign in to your Google Drive storage. You can then:

- Use Gallery to upload your captured photos to Google Drive.
- Share a link to your Google Drive files by email.
- View and edit Office documents that are stored in Google Drive. After creating new Office documents, you can also save them to Google Drive.
- View PDFs that are stored in Google Drive. You can also export Office documents as PDFs to Google Drive.
- Check your available Google Drive storage space in Settings.
- Back up HTC Desire EYE to Google Drive, so you can easily restore your backup to another HTC phone next time.
- Use the Google Drive app to manage your online storage.




Uploading files requires you have the Drive app installed on HTC Desire EYE. If this app is not preloaded, you can download and install it from Google Play.

Activating your free Google Drive storage

Use up to 115GB of free Google Drive storage. In addition to the default storage that you get from Google Drive, HTC Desire EYE features an additional 100GB of online storage free for two years. Sign in to your Google Account on HTC Desire EYE—and not from your computer or other non-HTC phones—to claim this offer.

1. Open the Drive app.
2. If this is your first time to open the Drive app, walk through the product tour until you see the additional storage offer.

If you've opened this app before and currently don't see the screen for redeeming the offer, tap  > **Settings** > **Product Tour** to walk through the product tour.

3. On the screen that shows the additional storage offer, tap **Redeem**.

Or to claim the offer at a later time, tap **Offer Details** and check up to when you can redeem the offer.



- If the Drive app is not preloaded on your phone, download it from Google Play.
- Additional terms and requirements may apply, including a subscription fee, after your two-year trial expires. For details, refer to the terms and conditions on the Google Drive support site at support.google.com/drive/?p=drive_offers_htc.
- The Drive app is owned by Google and is not provided by or associated with HTC Corporation.

Checking your Google Drive storage space


Check your available storage space right in the Google Drive app.

1. Open the Drive app.
2. Tap . You'll see your storage space on the slideout menu.

From time to time, check back on how much online storage space you still have before you upload more content.

Uploading your photos and videos to Google Drive

Use Gallery to upload your photos and videos to Google Drive.

1. On the Gallery app's main screen, swipe to the Timeline, Albums, or Locations tab.
2. Tap an album or event that contains the photos and videos you want to upload.
3. Tap .
4. From the selection menu, tap **Drive**.
5. Select the photos and videos you want to upload, and then tap **Next**.
6. Choose or create a folder in Google Drive.
7. Tap **Save** to upload.

Sync, backup, and reset

Online sync

Adding your social networks, email accounts, and more

You can sync contacts, calendars, and other information from your social networks, email accounts, and online services on HTC Desire EYE. Depending on the account type, signing in to your online accounts lets you sync updates between HTC Desire EYE and the Web.

1. Go to Settings, and then tap **Accounts & sync**.
2. Tap **+**.
3. Tap the account type you want to add.
4. Follow the onscreen instructions to enter your account information.



- In **Settings > Accounts & sync**, tap the Auto sync **On/Off** switch to turn automatic sync of all your accounts.
- You can add several Google Accounts.

Syncing your accounts

1. Go to Settings, and then tap **Accounts & sync**.
2. Tap the Auto sync **On/Off** switch to turn automatic sync of all your accounts on or off.
3. To manually sync individual accounts, tap an account type, and then do one of the following:
 - Tap **⋮** next to the account you want to sync, and then tap **Sync now**.
 - Tap **⋮ > Sync now** on the Account settings screen.



On the Account settings screen, you can also change the sync settings for an account.

Removing an account

Remove accounts from HTC Desire EYE if you no longer use them. Removing an account does not remove accounts and information from the online service itself.

1. Go to Settings, and then tap **Accounts & sync**.
2. Tap an account type.

3. Tap **⋮** next to the account you want to remove.
Or if you're on the Account settings screen, tap **⋮**.
4. Tap **Remove**.



Some personal data may be retained by the third-party app after you have removed the account from HTC Desire EYE.

Backup

Ways of backing up files, data, and settings

Worried that you might lose important stuff on HTC Desire EYE? Back up HTC Desire EYE before you erase the storage, do a factory reset, or upgrade to a new phone.

HTC Backup

Use the built-in HTC Backup to back up your accounts, settings, contacts stored on your phone, text messages, and more to the cloud so that it will be easier to restore them on HTC Desire EYE (after a factory reset) or newer phone.

HTC Sync Manager

Use HTC Sync Manager to import music, photos, and videos from HTC Desire EYE to your computer. You can also sync locally stored contacts, calendar events, bookmarks, and playlists between HTC Desire EYE and your computer.

Likewise, HTC Sync Manager is a good alternative if you don't want to back up your accounts, settings, and other personal content to the cloud. You can use it to create backups of HTC Desire EYE on your computer.

Other backup options

If you want, you can separately back up your data or files.

Some apps allow you to back up data to the phone storage or storage card so you can easily restore them after a factory reset. Just make sure not to erase the phone storage or storage card when you do a factory reset.



- Moving apps to the storage card doesn't back up the apps. If you do a factory reset, your phone loses the apps. You'll need to reinstall them.
- When you remove the storage card and insert it in another phone, the apps on the storage card won't be installed automatically to the other phone. You'll need to reinstall them.

Messages	Back up your text messages to the phone storage or storage card, or save them as an email attachment.
Contacts	<ul style="list-style-type: none"> ▪ Save contacts and other personal data to your online accounts so you can just sync them when switching to another phone. ▪ If you have locally stored contacts in the People app, export them to the phone storage or storage card.
Files	Manually copy and paste files by connecting HTC Desire EYE to your computer as a disk drive.
Other data	<ul style="list-style-type: none"> ▪ If you added new words to your personal dictionary in the onscreen keyboard, back up the dictionary to the storage card or save it as an email attachment. ▪ Check the other apps to see if they support exporting data to the storage.

Using HTC Backup

Save the time and frustration of re-creating your personalized HTC Desire EYE experience when you do a factory reset or buy another phone. On HTC Desire EYE, use HTC Backup to do a daily backup to the cloud so you can easily restore your content and settings next time.

HTC Backup uses your Google Drive or Dropbox storage to keep your content and settings. It can back up and restore the following:

Personalization settings	These include your feed sources in HTC BlinkFeed, widgets, wallpaper, Home screen layout, and ringtones.
Accounts and passwords	HTC Backup stores the login credentials for many popular email and social network accounts, such as Exchange ActiveSync, Outlook.com, and POP/IMAP.
Apps and settings	These include your contacts stored on HTC Desire EYE, text messages, call history, web bookmarks, personal dictionary, Wi-Fi networks, free apps you've installed, grid size and sort order on the Apps screen, and more.

Backing up HTC Desire EYE to Google Drive

Turn on HTC Backup to do a daily backup of your phone over Wi-Fi. Turn it on by selecting **Back up phone daily** while doing the on-device setup. If you didn't do so, use the HTC Backup app.



Depending on the amount of content, doing a manual backup through data connection may incur additional data costs and take a long time. Using a Wi-Fi connection is recommended.

1. Open the HTC Backup app.
2. Tap **Turn on automatic backup**.
3. Make sure **Back up phone daily** is selected, and then tap **Next**.
4. Sign in with your Google Account, HTC Account, or Facebook account.
5. On the Cloud storage screen, tap the **Google Drive** option, and then tap **OK**.

6. If prompted, sign in to your Google Account to access your Google Drive.
7. To do a daily backup, make sure the **Automatic backup** switch is on. You can also tap **Back up now** to manually back up your phone anytime.

You'll see the most recent backup date and time under Backup history.

Restoring your backup to HTC Desire EYE from Google Drive

If you backed up your phone to your online storage before, you can restore your backup to HTC Desire EYE, or to a new HTC phone.



- Depending on the amount of content, restoring your backup to your phone through your data connection may incur additional data costs and take a long time. Using a Wi-Fi connection is recommended.
- To restore paid apps, you need to download and install them from Google Play.

1. When you turn on a new HTC phone for the first time or after a factory reset, select **Restore from HTC Backup** on the Transfer or restore screen.
2. Make sure to sign in using the same account that you used to back up your phone before. Your backup history will then be displayed.
3. Select a backup, and then tap **Next**.
4. If you used your HTC Account or Facebook account to backup your phone, sign in to your Google Account to access your Google Drive.
5. Follow the onscreen instructions to restore your backup and to continue setting up your phone.
6. Slide open the Notifications panel to check if there's any notification to finish setting up your phone.

Free apps from Google Play will be restored in the background, and you can track the progress via a notification in the status bar.

The Apps and Home screen shortcuts will be reorganized as in your backup after all of your apps have been installed. You may continue using your phone while apps are being restored.




You can also open the HTC Backup app, and then tap **Restore from backup**. Just make sure that you've already signed in to the same account that you used to back up your phone before.

Restoring a backup will overwrite the current data and settings on HTC Desire EYE.

Switching from your previous online storage to Google Drive


After you've restored a saved backup from your Dropbox storage to HTC Desire EYE, remember to change your backup storage and use Google Drive from now on.

1. Open the HTC Backup app.
2. Tap **Change backup settings**.
3. Tap  > **Select storage service**.
4. Select **Google Drive**, and then tap **OK**.
5. Sign in to your Google Account, if you haven't done so.

Backing up your data locally

If you want to separately back up your content such as contacts and text messages on HTC Desire EYE, here are some tips on how to export or import your data.


Backing up your contacts

1. Open the People app.
2. On the People tab, tap  > **Manage contacts**.
3. Tap **Import/Export contacts** > **Export to phone storage** or **Export to SD card**.
4. Select an account or type of contacts to export.
5. To help protect your data, tap **Yes**, and then set a password for this backup. Be sure to remember this password. You'll need to enter it again when importing contacts.

If you don't need a password, tap **No**.

6. Tap **OK**.

Restoring contacts

1. On the People tab, tap  > **Manage contacts**.
2. Tap **Import/Export contacts** > **Import from phone storage** or **Import from SD card**.
3. If you have more than one account set up, tap the type for the imported contacts.
4. If you have multiple backups available, select the backup you want to import, and then tap **OK**.
5. Enter the password you've set for this backup, and then tap **OK**.

Backing up your text messages

Keep important text messages by backing them up to the phone storage. You can easily restore backed up text messages after you've deleted them from your message list.



Text messages in the secure box and blocked messages will not be backed up. To include such messages to your backup, move them first to the general message box.

1. Open the Messages app.
2. Tap > **Back up/Restore SMS** > **Back up** > **Back up SMS**.
3. To help protect your data, set a password for your backup. Be sure to remember this password. You'll need to enter it again when restoring messages.
If you don't need a password, select **Do not password protect this backup**.
4. Enter a name for your backup file, and then tap **OK**.

Backing up text messages by email



You need to set up your email account in the Mail app.

1. Open the Messages app.
2. Tap > **Back up/Restore SMS**.
3. Tap **Back up** > **Back up SMS via mail**.
4. To help protect your data, set a password for your backup. Be sure to remember this password. You'll need to enter it again when restoring messages.
If you don't need a password, select **Do not password protect this backup**.
5. Enter your email address.
6. Compose your email message, and then send it.


Restoring text messages

1. Open the Messages app.
2. Tap > **Back up/Restore SMS** > **Restore**.
3. Choose how you want to restore the messages, and tap **Next**.
4. Tap the backup to import.
5. Enter the password you've set for this backup. If you didn't set a password, select **This backup file is not password protected**.
6. Tap **OK**.


To restore text messages that were backed up via email, open the email message with the backup file attachment from the Mail app. Tap the attachment to download it first, and then tap it again to open the backup file to import. Enter the password you've set for this backup or select **This backup file is not password protected**.

Backing up your personal dictionary


You can back up new words you've added to the predictive text dictionary.

1. Go to Settings, and then tap **Language & keyboard**.
2. Tap **HTC Sense Input**.
3. Tap **Personal dictionary** >  > **Back up to storage card** or **Back up to email**.
4. When prompted, tap **OK**.

Importing your personal dictionary

- Go to **Settings > Language & keyboard > HTC Sense Input**. Tap **Personal dictionary** >  > **Restore from storage card**.
- To import your personal dictionary backed up via email, open the email message with the backup file attachment from the Mail app. Tap the attachment to download it first, and then tap it again to open the backup file to import.

Backing up or restoring tasks

1. Go to the list that contains the tasks you want to back up.
2. Tap  > **Import/Export**.
3. Tap **Export to SD card** to back up your tasks, or tap **Import from SD card** to restore tasks on HTC Desire EYE.

HTC Sync Manager

About HTC Sync Manager

HTC Sync Manager supports a computer running a Windows or Mac operating system.

Here's what you can do with HTC Sync Manager.

View and manage media on your computer and phone

- Browse and manage music, photos, and videos that are on your computer and your phone.
- Import iTunes and Windows Media® Player playlists from your computer to HTC Sync Manager.
- Play music, videos, and playlists using the built-in player.

Transfer content

- Transfer iPhone photos, text messages, contacts, and more to your HTC phone. You can also find and install the same apps that you were using on your iPhone.
- Import all music, photos, and videos from your HTC phone to your computer.
- Copy selected music, photos, or videos from your computer to your phone.
- Import documents from your computer to your phone.

Back up and restore

Back up your HTC phone to your computer so you can easily restore your backup to the same phone or to another HTC phone.

Sync playlists and data

Sync music playlists and data such as contacts and calendar between your phone and your computer.

Installing HTC Sync Manager on your computer



- You can install HTC Sync Manager on Windows XP or later versions. To install it on a Mac computer, you need Mac OS 10.6 or later versions.
- If you have problem in installing HTC Sync Manager, close all your running programs and reinstall. If the problem persists, temporarily disable your anti-virus program and try installing again.

1. Download the HTC Sync Manager installer from the HTC support site: htc.com/hsm/.
2. Launch the installer and follow the onscreen instructions.
3. Connect your phone to your computer using the supplied USB cable. HTC Sync Manager opens.



If you disabled your anti-virus program, make sure to turn it back on after installing HTC Sync Manager.

Transferring iPhone content and apps to your HTC phone


With HTC Sync Manager, easily transfer iPhone content such as contacts, messages, wallpaper, camera photos, and more to your HTC phone. If you're using an HTC phone that has HTC Sense 6, HTC Sync Manager also enables your phone to find and install the same apps that you were using on your iPhone.



You need to use iTunes 9.0 or later to back up your iPhone content first to your computer.

1. Connect your iPhone and your HTC phone to your computer.
2. In HTC Sync Manager, click **Home > Transfer & Backup**.
3. Click the **Get Started** button.
4. If you haven't used iTunes to back up your iPhone content to your computer, please do so before proceeding.
5. Select your iPhone backup file, and then click **OK**.
6. Select the types of content you want to transfer to your HTC phone.

You can choose whether to replace the content on your HTC phone with the iPhone content.

7. Click **Start**. Wait for HTC Sync Manager to finish transferring content.
8. When done, slide open the Notifications panel on your HTC phone, and then tap . Choose which apps you were using on iPhone you want to find in Google Play and download to your HTC phone.

Getting help

To find out more about using HTC Sync Manager, download the user guide PDF from the HTC support site (htc.com/hsm/). Or open the Help that comes with the software.



On Windows, click  in HTC Sync Manager, and then click **Help**.

Reset

Restarting HTC Desire EYE (Soft reset)

If HTC Desire EYE is running slower than normal, is unresponsive, or has an app that is not performing properly, try rebooting and see if that helps solve the problem.

1. If the display is off, press the POWER button to turn it back on.
2. Press and hold the POWER button, and then tap **Restart**.
3. When asked to confirm, tap **Restart**.

HTC Desire EYE not responding?

If HTC Desire EYE does not respond when you touch the screen or press the buttons, you can still restart it.

Press and hold the POWER and VOLUME UP buttons for at least 10 seconds. HTC Desire EYE then restarts.

Resetting HTC Desire EYE (Hard reset)

If HTC Desire EYE has a persistent problem that cannot be solved, you can perform a factory reset (also called a hard reset or master reset). A factory reset reverts the phone back to its initial state — the state before you turned on the phone for the first time.



Factory reset will remove all data on your phone storage, including apps you've downloaded and installed, your accounts, your files, as well as system and app data and settings. Be sure to back up any data and files you want to keep before you do a factory reset.



A factory reset may not permanently erase all data from your phone, including personal information.

Performing a factory reset from settings

1. Go to Settings, and then tap **Backup & reset**.

2. Tap **Reset phone**.

To also delete media and other data from your storage card, select **Erase SD card**.


3. Tap **OK**.

People

Your contacts list

The People app lists all contacts you've stored on HTC Desire EYE and from online accounts you're logged in to. Use the People app to easily manage communications with people that matter to you.

1. Open the People app.

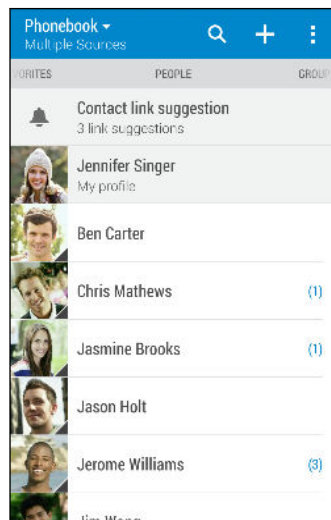

2. On your contacts list, you can:
 - View your profile and edit your contact information.
 - Create, edit, find, or send contacts.
 - Tap a contact photo to find ways to quickly connect with the contact.
 - See when a contact has sent you new messages.



To sort your contacts by their first or last name, tap **☰** > **Settings** > **Sort contacts by**.



Filtering your contacts list

When your contacts list gets long, you can choose which contact accounts to show.


1. On the People tab, tap **▼**.
2. Choose the accounts that contain the contacts you want to display.
3. Press **↶**.

Finding people

Search for contacts stored on HTC Desire EYE, your company directory if you have an Exchange ActiveSync account, or social networks you've signed into.


1. Open the People app.
2. On the People tab, you can:
 - Find people in your contacts list. Tap , and then enter the first few letters of the contact name in the Search people box.
 - Find people on your company directory. Tap , enter the first few letters of the contact name in the Search people box, and then tap **Search contacts in your Company Directory**.



Aside from searching for a contact by name, you can search using a contact's email address or company name. On the People tab, tap  > **Settings** > **Search contacts by**, and then choose a search criteria.



Setting up your profile

Store your personal contact information to easily send it to other people.

1. Open the People app.
2. Tap **My profile**.
3. Tap **Edit my contact card**.
4. Enter or edit your name and contact details.
5. Tap  or the current photo to change your contact photo.
6. Tap **Save**.

Aside from your contact details, swipe to the Updates tab to see updates you've posted on your social networks.

Adding a new contact

1. On the People tab, tap .
2. Tap the **Name** field, and then enter the contact name. Tap  to separately enter the contact's given, middle, or family name and name suffix, such as Jr.
3. Select the Contact type. This determines which account the contact will sync with.
4. Enter the contact information in the fields provided.
5. Tap **Save**.

When you tap the added contact in your contacts list, you'll see the contact information and your exchange of messages and calls. Depending on the contact type, you may also see the person's social network updates or events.

How do I add an extension number to a contact number?

While creating a new contact or editing a contact's details in People, you can add an extension number to their number so you can skip the voice prompts when calling.

1. After entering the number of the main line, do one of the following:
 - Tap **P(,)** to insert a pause before the phone dials the extension number. To insert a longer pause, enter **P(,)** several times.
 - Tap **W(,)** to be prompted to confirm the extension number.
2. Enter the extension number.

Editing a contact's information




Social network contacts cannot be edited.

1. On the People tab, press and hold the contact, and then tap **Edit contact**.
2. Enter the new information.
3. Tap **Save**.

Getting in touch with a contact


1. Open the People app.
2. Tap a contact's photo (not the name), and then choose how you want to get in touch with that contact.

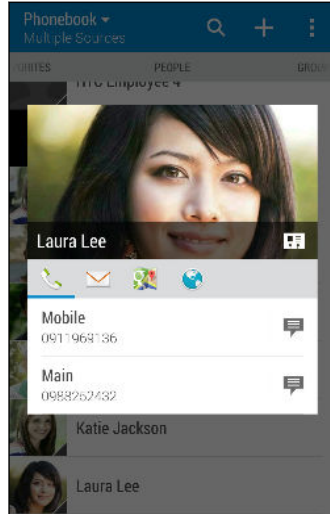



For more ways of getting in touch with your contact, tap an icon below the contact photo.

Importing or copying contacts

Importing contacts from your nano SIM card

1. Open the People app.
2. On the People tab, tap  > **Manage contacts**.
3. Tap **Import/Export contacts** > **Import from SIM card**.
4. If prompted, select which account you'd like to import your contacts to.
5. Select the contacts you want to import.
6. Tap **Save**.

Importing a contact from an Exchange ActiveSync account

1. On the People tab, tap  and enter the contact's name or email address in the search box.
2. Tap **Search contacts in your Company Directory**.
3. Tap the name of the contact you want copied to HTC Desire EYE.
4. Tap  to import the contact.

Copying contacts from one account to another



Contacts from your social network accounts may not be copied.

1. On the People tab, tap > **Manage contacts**.
2. Tap **Copy contacts**, and then choose a contact type or online account to copy from.
3. Select a contact type or account you want to save to.

Merging contact information

Avoid duplicate entries by merging contact information from different sources, such as your social network accounts, into one contact.

Accepting contact link suggestions

When HTC Desire EYE finds contacts that can be merged, you'll see a link notification when you open the People app.

1. Open the People app.
2. On the People tab, tap the Contact link suggestion notification when available. You'll see a list of suggested contacts to merge.
3. Tap next to the contact you want to merge. Otherwise, tap to dismiss the link suggestion.



If you don't want to receive contact link suggestions, on the People tab, tap > **Settings**. Clear the **Suggest contact link** option.

Manually merging contact information

1. On the People tab, tap the name of the contact (not the icon or photo) you want to link.
2. Tap > **Link**.
3. You can:
 - Under **Suggest links**, link the contact to an account.
 - Under **Add contact**, tap one of the options to link to another contact.

Breaking the link

1. On the People tab, tap the name of the contact (not the icon or photo) whose link you want to break.
2. Tap > **Link**.
3. Under the **Linked contacts** section, tap beside an account to break the link.


Sending contact information

1. Open the People app.
2. On the People tab, do one of the following:

To send	Do this
Someone's contact information	Press and hold the name of the contact (not the icon or photo), and then tap Send contact as vCard .
Your contact information	Press and hold My profile , and then tap Send my profile .

3. Choose how you want to send the vCard.
4. Select the type of information you want to send.
5. Tap **Send**.

Sending multiple contact cards



1. On the People tab, tap  > **Send contacts**.
2. Select the contacts whose contact information you want to share
3. Tap **Send**.
4. Choose how you want to send the contact cards.

Contact groups

Organize your friends, family, and colleagues into groups so you can quickly send a message or email to everyone in the group. We've also set up the Frequent group to automatically add the contacts you dial or get calls from the most.

HTC Desire EYE also syncs with groups you've created in your Google Account.

Creating a group

1. Open the People app.
2. On the Groups tab, tap .
3. Enter a name for the group, and then tap  > **Add contact to group**.
4. Select the contacts you want to add, and then tap **Save**.
5. When your group is complete, tap **Save**.


Sending a message or email to a group




You will be charged for each text message sent. For example, if you send a message to a group of five people, you will be charged for five messages.

1. On the Groups tab, tap the group you want to send a message or email to.
2. Go to the Group action tab.
3. Choose if you want to send a group message or group email.

Editing a group

1. On the Groups tab, press and hold the group, and then tap **Edit group**.
2. You can:
 - Change the group name. You can only change the name for groups that you have created.
 - Add more contacts to the group. Tap  > **Add contact to group**.
 - Select the contacts you want to remove from the group.
3. Tap **Save**.

Removing contact groups


1. On the Groups tab, tap  > **Edit groups**.
2. Select the contact groups you want to remove.
3. Tap **Save**.

Private contacts




If you don't want to show a contact's name and photo on the lock screen when you have an incoming call, add the contact to your private contacts list.

Adding a contact to the private contacts list

1. Open the People app.
2. On the People tab, press and hold the contact, and then tap **Add to private contacts**.

To view your private contacts list, on the People tab, tap  > **Manage contacts** > **Private contacts**.

Organizing your private contacts



1. On the People tab, tap  > **Manage contacts** > **Private contacts**.
2. To add contacts to the private contacts list, tap , select the contacts you want to add, and then tap **Save**.
3. To remove private contacts from the list, tap  > **Remove private contact**, select the contacts you want to remove, and then tap **Remove**.


Email


Mail

Checking your mail

The Mail app is where you read, send, and organize email messages from one or more email accounts that you've set up on HTC Desire EYE.

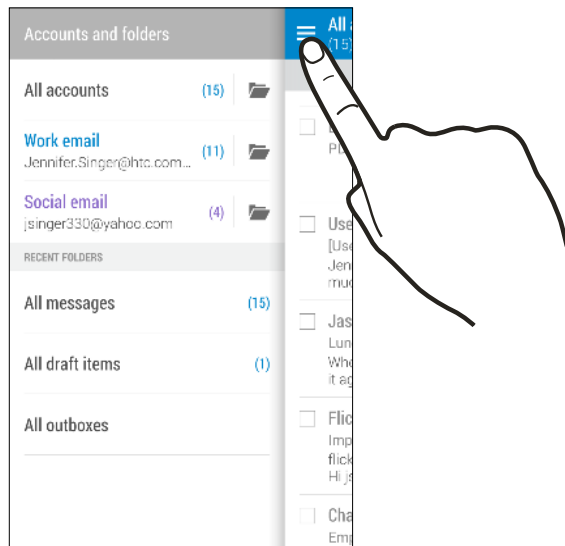

1. Open the Mail app. The inbox of one of your email accounts appears.
2. Do any of the following:
 - Tap an email message to read.
 - To display email messages in another mail folder, tap  > **Folder**, and then tap the folder you want to view.
 - To switch between email accounts or view email messages from all your accounts, tap .



- To change an email account's settings, select the account first and then tap  > **Settings**.

Organizing your inbox

Do you have a big pile of email messages in your inbox? Organize your email messages into tabs and quickly find the messages you want.

1. Switch to the email account that you want to use.
2. In the inbox, tap  > **Edit tabs**.
3. Select the tabs you want to add to the inbox.
4. To arrange the tabs, drag , and then move the tab to its new location.

5. Tap **Done**.
6. Swipe to the added tab to check your email messages.

Sending an email message

1. Open the Mail app.
2. Switch to the email account that you want to use.
3. Tap **+**.
4. Fill in one or more recipients.



Want to loop in more recipients in a carbon copy (Cc) or blind carbon copy (Bcc) of the email message? Tap **⋮** > **Show Cc/Bcc**.

5. Enter the subject, and then compose your message.
6. Do any of the following:
 - Add an attachment. Tap **📎** and then choose what you want to attach.
 - Set the priority for an important message. Tap **⋮** > **Set priority**.
7. Tap **✉**.



To save the email as draft and send it later, tap **⋮** > **Save**. Or press **⌘**.

Resuming a draft email message

1. In an email account inbox, tap **⋮** > **Folder** > **Drafts**.
2. Tap the message.
3. When you finish editing the message, tap **✉**.

Reading and replying to an email message

1. Open the Mail app.
2. Switch to the email account you want to use.
3. In the email account inbox, tap the email message or conversation you want to read.



If you want to read a particular message inside an email conversation, tap **▼** to expand the conversation, and then tap the email message.

4. Tap **Reply** or **Reply All**.




Tap **⋮** for more actions for the email.

Quickly replying to an email message

You can quickly respond to a new email message from the Home screen or lock screen.

1. When you receive a new email message notification, slide the Notifications panel down.
2. On the email preview, tap **Reply all**.

If you have several notifications and you don't see the email options, expand the email preview by sliding two fingers apart on the notification.

3. Compose your reply message and tap .

Saving an image in an email message



- Depending on your mail size limit settings, you may need to tap **Display images** to see images that are embedded in an email.
- Inline images may not display correctly when using certain mail accounts.

While viewing an email message, press and hold an embedded image, and then tap **Save image**. You'll find the saved image in the **All downloads** album in Gallery.

You can also copy the image to the clipboard or set it as your wallpaper.

Saving an email message in the Tasks app

Save an email message in your Tasks list so you can remind yourself when to reply.

1. In an email account inbox, press and hold the email message, and then tap **Save as task**.
2. Enter the task details, and then tap **Save**.

Managing email messages

The Mail app provides easy ways to sort, move, or delete your email messages.

Sorting email messages


Customize how you sort your email messages.

In an email account inbox, tap  > **Sort**, and select from the sorting options.

Moving email messages to another folder

1. Switch to the email account you want to use.
2. Select the email messages you want to move.




To select all, select one email message first, and then tap  > **Select all**.

3. Tap **Move to**, and then select a folder.

Deleting email messages



1. Switch to the email account you want to use.
2. Select the email messages you want to delete.



To select all, select one email message first, and then tap  > **Select all**.

3. Tap **Delete**.

Searching email messages

1. Open the Mail app.
2. Tap .
3. If you want to refine or filter your search, tap , check the search options, and then tap **OK**. For example, you can focus the search on a part of an email or filter email messages that have attachments or tagged as high priority.
4. In the search box, enter the words you want to search for.
5. Tap a result to open the email message.

Searching for emails from a contact

Do you remember the sender, but can't find a particular email from him or her?

1. Switch to the email account you want to use.
2. Press and hold an email message from a contact.
3. Tap **Show all mail from sender**. A list of email messages from that contact appears.

Working with Exchange ActiveSync email

Enjoy the powerful email features of Microsoft Exchange ActiveSync right on HTC Desire EYE. Flag important email messages, set your out of the office reply, or send invites to your next team meeting while you're on the go.


Flagging an email

1. Switch to your Exchange ActiveSync account.
2. While viewing the inbox, tap the flag icon that appears beside an email message or conversation.




To flag an email message inside a conversation, tap  to expand the conversation, and then tap the flag icon of the email message.

Setting your Out of the office status

1. Switch to your Exchange ActiveSync account.
2. Tap  > **Out of the office**.

3. Tap your current office status, and then select **Out of the office**.
4. Set the dates and times.
5. Enter the auto-reply message.
6. If you want a different auto-reply message for recipients outside your organization, tap the **Send replies to external senders** option, and then enter the auto-reply message in the box.
7. Tap **Save**.

Sending a meeting request


1. Switch to your Exchange ActiveSync account.
2. Tap  > **New meeting invitation**.
3. Enter the meeting details.
4. Tap **Save**. Or tap **Send** if you've invited people to the meeting.

Adding an email account

Set up additional email accounts such as another Microsoft Exchange ActiveSync account or an account from a Web-based email service or email provider.



If you're adding a Microsoft Exchange ActiveSync or a POP3/IMAP email account, ask your network administrator or email service provider for additional email settings that you may need.

1. Open the Mail app.
2. Tap  > **Add account**.
3. Select an email account type from the list of email providers. Otherwise, tap **Other (POP3/IMAP)**.
4. Enter the email address and password for your email account, and then tap **Next**.



Some email accounts allow you to set the sync schedule. By default, HTC Desire EYE uses Smart Sync to save battery power. See [What is Smart Sync?](#) on page 144.

5. Enter a name for your email account, and then tap **Finish setup**.

What is Smart Sync?

Smart Sync automatically extends the sync time the longer the Mail app is inactive. Set your email account to Smart Sync when you don't need to check new email messages frequently. Smart Sync helps save battery power.

If you want to receive email messages as they arrive, select another **Peak time sync** and **Off-peak sync** schedule in the email account's **Sync, Send & Receive** settings.

Gmail

Viewing your Gmail Inbox


All your received email messages are delivered to your Inbox.

1. Open the Gmail app.



The first time you use Google, you need to create or sign in to your Google Account. You can also sign in with a non-Gmail address.

2. Do any of the following from your Inbox.
 - Tap an email message preview to read, forward, or reply to the message.
 - Tap to open the slideout menu and change the inbox category such as **Social**, switch to another Gmail™ account, filter your inbox by email labels, or find help.
 - Tap the sender image or letter tile to select one or more messages or conversations. You can then tap the onscreen buttons at the top bar to archive, delete, or mark the selected messages or conversations.

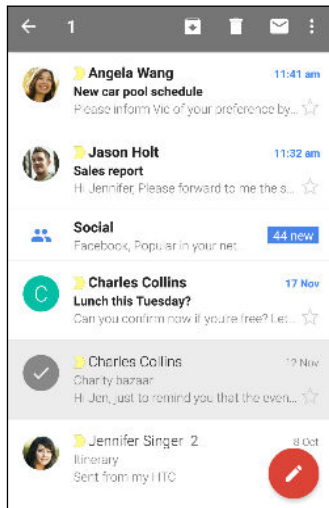

Sending an email message in Gmail

1. In the inbox of the email account you want to use, tap .
2. Fill in one or more recipients.
3. Enter the email subject, and then compose your message.
4. If you want to attach a photo, video or file, tap .
5. Tap to send.

Replying to or forwarding email messages in Gmail

1. In the Gmail inbox, tap the email message or conversation.
2. To reply to the sender, tap . Or, tap and choose whether to **Reply all** or **Forward**.

3. Do one of the following:

- If you're replying to the sender or you selected **Reply all**, enter your reply message.
- If you selected **Forward**, specify the message recipients.



Tap **Respond inline** if you want to interleave your new message with the received email. But this removes any attachments or formatting in the original email message.

4. Tap ➤ to send.

Calendar

Viewing the Calendar

Use the Calendar app to view your events, meetings, and appointments. If you've signed into your online accounts, related events will also appear in Calendar.

1. Open the Calendar app.
2. Tap ▼, and then choose a calendar view.



If you see the current date **01** icon, tap it to return to the current date.

Month view

In month view, you will see markers on days that have events. Upcoming events for the day are also shown at the bottom of the screen.

- Swipe left or right across the screen to view succeeding or previous months.
- Tap a day to view the events for that day.
- Press and hold a day to see more options.

Day and agenda views

Day view shows your day's schedule and weather forecast for the next few days, while agenda view gives a quick glance of all your day's events.

- Swipe left or right across the screen to view succeeding or previous days.
- Tap an event to view its details.
- If the event is a contact's birthday or anniversary, tap it to send a greeting.



Need to see the event time in another time zone? In Day view, tap **⋮** > **Select 2nd time zone** > **Choose location**, and then enter the city name.

Week view

Week view displays a chart of the events of one week.

- Swipe left or right across the screen to view succeeding or previous weeks.
- Tap an event (shown as colored blocks) to view its details.

Scheduling or editing an event


You can create or edit events on HTC Desire EYE, and also sync events with your Exchange ActiveSync calendar. You can also create, modify, and sync events with your Google calendar.




Editing events is not supported for all accounts.

1. Open the Calendar app.
2. On any Calendar view, do one of the following:

Create an event Tap **+**. Tap **▼**, and then select the calendar you will add the event to.

Edit an event View an event, and then tap .

3. Enter and set the event details.
4. To invite contacts from your Exchange ActiveSync account, tap . You can also invite contacts from your Google account.
5. Tap **Save**.


If you've invited people to the event, tap **Send** or **Send update**.

Checking your schedule for an event

Avoid juggling multiple meetings at the same time. In Calendar, you can check your appointments to see if a new event would conflict with your schedule.

1. When creating or editing an event, tap **Check calendar**.
2. Press and hold the event box, and then drag it to an available time slot.
3. Drag the top and bottom nodes to adjust the event's time duration. You'll see a message if there are conflicts with other scheduled events.
4. Tap **Done** to return to the event screen, and then save your event.

Choosing which calendars to show

1. In any calendar view, tap  > **Accounts (All calendars)** or **Accounts (Multi-calendar)**.
2. Select or clear an account you wish to show or hide.


If you have multiple calendars under an online account, tap **•••** to select the items to include.



- Calendars are synced on HTC Desire EYE, even if they are hidden.
- You can also show or hide tasks that you've created on HTC Desire EYE.

Sharing an event

You can share a calendar event as a vCalendar using Bluetooth or by sending it as a file attachment with your email or message.

1. Do one of the following:
 - While viewing an event, tap  > **Share via**.
 - In day, agenda or week view, press and hold an event and then tap **Share via**.
2. Choose how you want to send the event.




You can also forward accepted meeting invitations from your Exchange ActiveSync calendar. While viewing an event, tap  > **Forward**. Compose your email message, and then send it.

Accepting or declining a meeting invitation


Switch to Invites view to see meeting invitations which you have not yet accepted or declined.



You must set up an Exchange ActiveSync account to receive meeting invitations in Calendar.


1. Open the Calendar app.
2. Tap  > **Invites**, and then tap a meeting invitation.
3. Accept, decline, or tentatively accept the invitation, or propose a new time.



Tap  to choose from more options, such as moving the invitation to a folder.


If you need to cancel an accepted meeting invitation or propose a new time, view the event details in Calendar, and then tap **Response**.

 
Dismissing or snoozing event reminders

If you have set at least one reminder for an event, the upcoming event icon  will appear in the notifications area of the status bar to remind you.

1. Slide the Notifications panel open.
2. If the notification shows that there are multiple reminders, tap it to see all the reminders. You can then choose to snooze or dismiss them.
3. If you see a single event notification, spread your two fingers on the notification to expand it. You can then:
 - Tap **Snooze** or **Dismiss**. Or drag the notification left or right to dismiss it.
 - Tap **Send mail** to send a quick response to the meeting attendees.



To edit the preset quick responses or add your own, open Calendar, and then tap  > **Settings** > **Quick response**.

If you don't want to dismiss or snooze the calendar reminders, press  from the Notifications panel to keep them pending in the notifications area of the status bar.

Travel and maps

Location settings

Turning location services on or off

In order to find your location on HTC Desire EYE, you need to enable location sources.

1. Go to Settings, and then tap **Location**.
2. Tap the **On/Off** switch to turn location services on and off.
3. Under Location sources, select the location mode you want. For example, for a better estimate of your location, choose **High accuracy**. To save battery power, choose **Battery saving**.

Turning off a location source (for example GPS) means no applications on HTC Desire EYE will collect your location data through that location source. However, third party applications may collect — and HTC Desire EYE may continue to provide — location data through other sources, including through Wi-Fi and signal triangulation.

Google Maps

About Google Maps

Google Maps™ lets you track your current location, view real-time traffic situations, and receive detailed directions to your destination.




It also provides a search tool where you can locate places of interest or an address on a map, or view locations at street level.



 


- To find your location with Google Maps, you need to enable location sources.
- The Google Maps app does not cover every country or city.

Getting around maps

When you open Google Maps, you can easily find your location on the map or check out nearby places by panning and zooming in and out on the map.

1. Open the Maps app.
2. Tap  to show your current location. The blue marker  or  shows your current location on the map.

3. Tap  to turn Compass mode on. In Compass mode, the map orients itself depending on the direction you're facing. To exit Compass mode, tap .
4. If you want to see more information overlaid on the map, tap , and then tap a map view such as **Traffic** or **Public transit** to toggle the view on and off.


Navigating the map


You can navigate the map using finger gestures.

- Slide your finger in any direction to pan.
- Double-tap the map or slide two fingers apart over an area to zoom in.
To zoom in while holding the phone with one hand, double-tap with your thumb and hold the second tap, and then drag your thumb down.
- Double-tap the map with two fingers or slide two fingers together over an area to zoom out.
To zoom out while holding the phone with one hand, double-tap with your thumb and hold the second tap, and then drag your thumb up.
- Press and hold an area with two fingers and then drag your fingers in a circular motion to rotate the map.
- Press and hold an area with two fingers and then swipe up to see an angled view of the map. Swipe down to return to overhead view.

Searching for a location

Use Google Maps to search for a location, such as an address or a type of business or establishment (for example, museums).

1. Open the Maps app.
2. Tap the search box and then enter the place you want to search for.
3. Tap the **Enter** key on the keyboard or tap a suggested search item. If there is only one search result, it will be marked with a place marker .

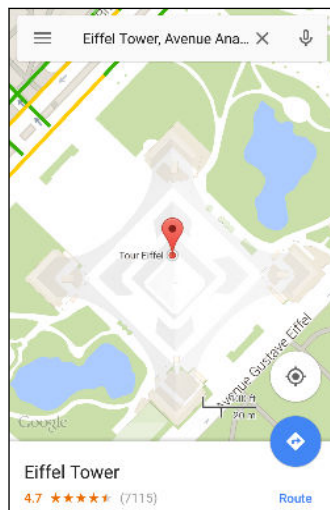


4. If there are multiple search results, they will be indicated by red dots or smart map icons. Swipe up from the bottom to see all of the search results.

5. If available, tap **Filter** to narrow the search results.
6. Tap a card from the search results to check the address, get directions, see the location in Street View (if available), and more.
7. To check the next or previous location on the search, swipe the info sheet left or right.

 
To clear the map and search for another location, swipe the info sheet down (if it's expanded), and then tap **X**.

Getting directions

Get detailed directions to your destination. Google Maps provides travel directions by car, public transit, bike, or foot.

1. Open the Maps app.
2. Tap .
3. Choose how you want to get to your destination.
4. Use your current location as starting point, or tap **Your location** to enter your starting point or select a location from your search history.
5. Tap **Choose destination**, and then enter or select your destination.



If you're taking public transit, tap  to set the date and time of travel, or tap **Options** to set your route preferences.

6. Tap a route or transit option to view the directions on the map. You'll also see the travel duration on the info sheet at the bottom of the screen.
7. Tap the info sheet to view the directions in a list.

When you're finished viewing or following the directions, tap **X** to reset the map. Your destination is automatically saved in the Google Maps history.

HTC Car

On the road with HTC Car


Now when you drive, you can easily use HTC Desire EYE to reach your destination, keep you entertained, and help you stay in touch with the people that matter to you. Access music, phone calls, maps, and more with HTC Car.

1. HTC Car instantly launches when you mount HTC Desire EYE in HTC Car Kit.
2. Swipe up or down to see what you can do in HTC Car.



When using HTC Car, return to the main screen from any other screen by pressing .

When you remove HTC Desire EYE from HTC Car Kit, HTC Car will automatically exit.

You can also manually close HTC Car by pressing  from the main screen.

Using voice commands in HTC Car

Use your voice to control HTC Car.



This feature may not be available in all languages.

1. In HTC Car, tap the screen with three fingers to activate voice command mode.
2. Do one of the following:


Call someone	Say "Call [person's name in phonebook]"
Play music	Say "Play [song title, album, artist name, or genre]"
Find something on the map	Say "Navigate". When you hear HTC Car ask you where you want to go, say the address or name of a point of interest.



You can also activate voice command mode by:


- Tapping **Speak** on the main screen in HTC Car.
- Pressing the answer button on supported Bluetooth headsets.

Finding places in HTC Car


1. In HTC Car, tap **Navigation**.
2. To search for a place, tap  and enter a location in the search box.
3. To look up a previously searched for place, tap **Previous**.
4. To get directions for an upcoming event in Calendar, tap **Appointments** and then tap an upcoming appointment.

Exploring what's around you

Feeling adventurous? With just a few taps, you can find interesting places around you quickly.

1. In HTC Car, tap **Navigation**.
2. Tap a category, for example **Restaurant** or **Parking** to see what's available near you.
3. Tap  to enter your own search keywords.

Playing music in HTC Car

1. In HTC Car, tap **Music**.
2. Swipe left or right to browse by category.
3. Tap  to search your collection.
4. Tap an album, song, or playlist to listen to it.

Making phone calls in HTC Car

- Tap **Dialer** to open the dialpad.
- Tap **People** and then browse a category or search by entering a name.
- Tap **Speak** and say "Call" and the person's name. For example, say "Call Jennifer Singer".

Handling incoming calls in HTC Car

When you receive an incoming call, you can easily answer or decline.

- If you hear a voice prompt, say "yes" or "no" to answer or decline a call.
- Tap **Answer** or **Decline**.

Customizing HTC Car

- To change the default behavior of HTC Car, tap **Settings**.
- To add more apps to HTC Car, tap **+** and select an app.



Other apps

Using Scribble

Want to make a page for your digital scrapbook? Use the Scribble app to get artistic and combine photos, text, and illustrations in a note.





With several templates to choose from, you can even create lists or track your budget. Have a greeting card ready and link it to your friend's birthday in Calendar to send in a few taps.

Composing a note


1. Open the Scribble app.
2. Choose a template when you're prompted. Or, tap **+**.
3. In the box that says **Title text here**, type in your note title.
4. Use the editing tools to enter text, draw figures, record audio, and more.
5. Insert images such as photos and illustrations. To find out how, see [Inserting images and illustrations in a note](#) on page 157.
6. Press and hold an image to move, resize, or delete it. You can also use two fingers to rotate an image.
7. Tap  for other options, such as changing the template, linking the note to an event, and more.
8. Press  to save the note.


Inserting images and illustrations in a note



While composing a note, you can:

- Tap  to take a photo, or tap  > **Insert picture** to select an image from Gallery.
- Tap  to draw, or tap  to write text. You can change the pen characteristics.



 - Tap  to insert a sticker.

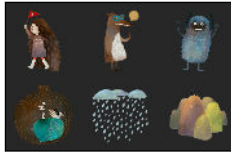



- To insert a web page thumbnail, tap  > **Web content**. On the Internet app, go to the web page, and then tap  > **Share** > **Scribble**.

Creating a photo blog note

Think photos can best convey your story? Group photos into a note, and make it more entertaining by including photo collages, stickers, and more.



If inserting a collage, first group the photos in the same event or album in Gallery.

1. Open the Scribble app.
2. Tap  and choose the photo blog template.
3. Tap  to take a photo or select photos in Gallery to group them in a collage.



4. When inserting a collage, press and hold it, and then select a layout. You can also:
 - Press and hold, and then drag around a photo within the frame to put the subject in the center of the frame.
 - Press and hold, and then drag a photo over another to re-arrange them.
 - Slide two fingers apart to zoom in on a photo, or slide two fingers together to zoom out.
 - Tap another layout to change the current layout.
5. Tap the area above the date, and then use the editing tools to insert text and illustrations.

6. To add another page, tap **+**. You'll see an onscreen message if you reached the maximum number of pages.
7. Press **↶** to save the note.

Grouping notes into a notebook

- To group notes into a new notebook, tap **≡** > **Group**.
- To group notes into an existing notebook, tap **≡** > **Move to**.
- To create a new notebook, swipe to the Notebooks tab, and then tap **+**.

Publishing and sharing a note

Upload and share your creative work on the Web and get your own Scribble home page.

1. With a note opened, tap **🔗**.
2. Tap **Share article**.
3. Type a description or tag your note.
4. Make sure that **Share your post** is selected.
5. Under Share to, tap where you also want to share the link that will be created. You'll be prompted to complete the action in the apps you selected.
6. Tap **Done**.

To view notes you've shared, swipe to the Share tab on the Scribble main screen.

Using the Clock

Get more from the Clock app than just the regular date and time. Use HTC Desire EYE as a world clock to see the date and time in cities across the globe. You can also set alarms or track your time using the stopwatch or timer.

Setting the date and time manually

1. Open the Clock app.
2. On the World Clock tab, tap **≡** > **Local time settings**.
3. Clear **Automatic date & time** and **Automatic time zone**, and then set the time zone, date, and time as required.



To display military time, choose the **Use 24-hour format** option.

Setting an alarm

You can set up one or more alarms.

1. Open the Clock app.
2. On the Alarms tab, select the check box of an alarm and then tap that alarm.
3. Under Set alarm, use the scroll wheels to set the alarm time.
4. If you want the alarm for multiple days, tap **Repeat**.
5. Tap **Done**.



- To turn off an alarm, clear the check box of that alarm.
- If you need to set more than three alarms, tap **+**.

Checking Weather


Use the Weather app and widget to check the current weather and weather forecasts for the next few days. In addition to your current location, you can view weather forecasts for other cities around the globe.

1. Open the Weather app. You'll see the weather for different cities, including where you are.
2. Tap a city to view weather information.
3. Swipe to the Hourly and Forecast tabs to view the forecast in your selected location.
4. To check the weather in other cities, tap ▼, and then select the city you want.
5. To add more cities, tap **+** and then enter the location.
6. To change the temperature scale, update schedule, and more, tap **⋮** > **Settings**.

Your settings in the Weather app also control the weather information that is shown in the Clock and Calendar.


Recording voice clips


Use Voice Recorder to capture information during lectures, interviews, or even to create your own audio log.

1. Open the Voice Recorder app.
2. Hold the microphone near the sound source.
3. Tap  to start recording a voice clip.



Voice Recorder can run in the background while you do other things on HTC Desire EYE, except when you open other apps that also use audio functions.

4. Tap  to stop recording.

To play back the voice clip, tap .



To see your recorded voice clips, tap . Press and hold a voice clip to see options for sharing, setting it as a ringtone, and more.

Keeping track of your tasks

Use the Tasks app to organize and track to do and task lists. Create tasks on your phone or sync them with your Microsoft Exchange ActiveSync account. You can also sync tasks with your Google account.

You can even choose to see your tasks in the Calendar app .

Creating a task

1. Open the Tasks app.
2. To select the task account where you want to create the task, tap .
3. Tap , and then enter the task details.



Tasks created under My tasks can be linked to a contact (tap) or to a location (tap).

4. Tap **Save**.

Managing tasks

1. Go to the list that contains the task.
2. In the list of tasks, you can:
 - Tap the check box next to the task to mark a task complete.
 - Press and hold a task to delete, postpone, or move it to another list.
 - Tap to view completed tasks, sort them, and more.

Managing task lists

1. In the Tasks app, tap > **Manage lists**.
2. From here, you can:
 - Tap a list to show all tasks under that list.
 - Tap and choose an account to create a list.



You can't create lists for Microsoft Exchange ActiveSync accounts.

- Tap to rename or delete a list.



Some lists can't be deleted.

Kid Mode

Worried that your kids might wander off to inappropriate web sites or mess with your important work files while using HTC Desire EYE? Use Kid Mode™ to let your children enjoy fun and age-appropriate games and more, while helping to protect your important data from accidental deletion. To learn more about Kid Mode, visit www.zoodles.com.



This feature may not be available on all phones.

Creating a child profile

1. Open **Parent Dashboard** from the All Apps screen. The first time you use Kid Mode, you need to create or sign in to your account.
2. Tap the default name at the top of the screen, and then tap **Add Child**.
3. Fill out the information on the screen and then tap **Save**.

Switching to Kid Mode


1. Open the Kid Mode app.
2. If prompted, follow the instructions on the screen to set a child lock.
3. On the Zoodles™ main screen, tap the profile that you created for your child.
4. Tap the icons to access games and apps, play recorded storybook readings, and more.

Setting child-accessible apps in Kid Mode


When in Kid Mode, you can choose which apps on HTC Desire EYE your child will have access to.

1. Open **Parent Dashboard** from the All Apps screen. You can also go to Parent Dashboard from **Settings > Security > Kid Mode**.
2. Confirm your action by entering the required information.
3. Under Basic Features, tap **Apps**. You'll see a list of apps installed on HTC Desire EYE.
4. Tap the check option beside the app that you want your child to be able to use in Zoodles.



Want to receive or block incoming calls while in Kid Mode? Tap  > **Device Options**, and then select or clear the **Allow Incoming Calls** option.

Closing Kid Mode

On the Zoodles main screen, tap  and then confirm your action by entering the required information.

Internet connections

Turning the data connection on or off

Turning your data connection off saves battery life and money on data charges.



You need a 4G/LTE plan to use your operator's 4G/LTE network for voice calls and data services. Check with your operator for details.

1. With two fingers, swipe down from the status bar to open Quick Settings.
2. Tap the **Mobile data** tile to turn the data connection on and off.



If you don't have the data connection turned on and you're also not connected to a Wi-Fi network, you won't receive automatic updates to your email, social network accounts, and other synced information.

Managing your data usage

If you're on a limited data allowance, it's important to keep track of the activities and apps that usually send and receive data, such as browsing the web, syncing online accounts, and sending email or sharing status updates.

Here are some other examples:

- Streaming web videos and music
- Playing online games
- Downloading apps, maps, and files
- Refreshing apps to update info and feeds
- Uploading and backing up your files to your online storage account
- Using HTC Desire EYE as a Wi-Fi hotspot
- Sharing your mobile data connection by USB tethering

To help you save on data usage, connect to a Wi-Fi network whenever possible and set your online accounts and emails to sync less frequently.

Turning data roaming on or off

Connect to your mobile operator's partner networks and access data services when you're out of your mobile operator's coverage area.



Using data services while roaming may be costly. Check with your mobile operator for data roaming rates before you use data roaming.

1. Open the Settings app.
2. Tap **Mobile data**.
3. Select or clear the **Data roaming** option.

Keeping track of your data usage

Monitor your data usage to help prevent going over your monthly data allowance.



Data usage measured by HTC Desire EYE may differ from, and be less than, your actual data usage.

1. Go to Settings, and then under Wireless & networks, tap **More**.
2. Tap **Data usage**.
3. On the Mobile tab, select **Limit mobile data usage** and tap **OK** to automatically disable your data connection when you reach the set limit.
4. Drag the upper LIMIT line to set your monthly data limit.
5. Select **Alert me about data usage**, and then drag the lower ALERT line to set an alert before you reach your monthly data limit.
6. Tap **Reset data usage**, and then set the day of the month when your usage cycle resets. This date is usually the start of your monthly billing cycle.
7. Drag the vertical line markers to see how much data you've used during a particular time interval.



If you're connecting HTC Desire EYE to another portable Wi-Fi hotspot, tap **⋮** > **Mobile hotspots** to restrict background data from downloading that may incur extra data fees.

Viewing the data usage of apps

1. Go to Settings, and then under Wireless & networks, tap **More**.
2. Tap **Data usage**.
3. On the Mobile tab, drag the vertical line markers to see how much data you've used during a particular time interval.
4. Scroll down the screen to see a list of apps and their data usage info.
5. Tap an app to see more details.

Wi-Fi connection

To use Wi-Fi, you need access to a wireless access point or “hotspot”.



The availability and strength of a Wi-Fi signal varies depending on objects the Wi-Fi signal has to pass through (such as buildings or a wall between rooms).


Turning Wi-Fi on

1. With two fingers, swipe down from the status bar to open Quick Settings.
2. Tap the **Wi-Fi** tile to turn Wi-Fi on.
3. Tap **⋮** to see a list of detected wireless networks.



- To manually scan for Wi-Fi networks, tap **⋮** > **Scan**.
- If the wireless network that you want is not listed, tap **⋮** > **Add network** to manually add it.

Connecting to a Wi-Fi network

1. Turn Wi-Fi on, and check the list of detected Wi-Fi networks.
See [Turning Wi-Fi on](#) on page 164.
2. Tap a Wi-Fi network you want to connect to.
3. If you selected a secured network, enter the network key or password.
4. Tap **Connect**. You'll see the Wi-Fi icon  in the status bar when connected.

Preventing notifications from unsecured Wi-Fi networks

You can prevent getting notified about unsecured Wi-Fi networks.


1. Turn Wi-Fi on, and check the list of detected Wi-Fi networks.
See [Turning Wi-Fi on](#) on page 164.
2. Press and hold an unsecured Wi-Fi network you want to stop being notified about, and tap **Block network notification**.
3. To unblock an unsecured Wi-Fi network, press and hold the network name and tap **Unblock network notification**.

Connecting to a Wi-Fi network via WPS

If you're using a Wi-Fi router with Wi-Fi Protected Setup (WPS), you can connect HTC Desire EYE easily.

1. Turn Wi-Fi on, and check the list of detected Wi-Fi networks.

See [Turning Wi-Fi on](#) on page 164.

2. Tap  > **WPS Push**, and then press the WPS button on your Wi-Fi router.





To use the Wi-Fi Protected Setup (WPS) PIN method, tap  > **WPS Pin Entry**.

Logging into a public Wi-Fi network automatically (WISPr)

You can set HTC Desire EYE to automatically log into a public Wi-Fi network that you regularly use. This saves you the trouble of going through the Wi-Fi provider's web authentication every time you connect to their Wi-Fi network. Just add your login credentials to the WISPr (Wireless Internet Service Provider roaming) settings.



The access point of the Wi-Fi network needs to support the WISPr web portal. Consult the Wi-Fi provider for details.

1. With two fingers, swipe down from the status bar to open Quick Settings.
2. If Wi-Fi connection is off, tap the **Wi-Fi** tile to turn it on.
3. Tap **...**.
4. Tap  > **Advanced**.
5. Under WISPr settings, select **Auto login** and then tap **WISPr account settings** > **Add a new account**.
6. Enter the service provider name, your login name (the full domain name), and password.
7. Tap  > **Save**.
8. Connect to the public Wi-Fi network.



- If you have access to several public Wi-Fi networks, you can add up to five sets of login credentials to the WISPr accounts list.
- In the WISPr accounts list, press and hold an account to remove or edit it.

Connecting to VPN

Add virtual private networks (VPNs) so you can connect and access resources inside a local network, such as your corporate network.

Before you can connect to your organization's local network, you may be asked to:


- Install security certificates
- Enter your login credentials
- Download and install a required VPN app on HTC Desire EYE

Contact your network administrator for details. Also, HTC Desire EYE must first establish a Wi-Fi or data connection before you can start a VPN connection.


Adding a VPN connection



You must first set a lock screen PIN or password before you can use credential storage and set up the VPN.

1. Go to Settings, and then under Wireless & networks, tap **More**.
2. Tap **VPN** >  > **Add VPN profile**.
3. Enter the VPN settings and set them up according to the security details your network administrator gave you.
4. Tap **Save**.

Connecting to a VPN

1. Go to Settings, and then under Wireless & networks, tap **More**.
2. Tap **VPN**.
3. Tap the VPN that you want to connect to.
4. Enter your log in credentials, and then tap **Connect**. When you're connected, the VPN connected icon  appears in the notification area of the status bar.

You can then open the web browser to access resources such as your corporate network intranet.

Disconnecting from a VPN

1. Slide the Notifications panel open.
2. Tap the VPN notification, and then tap **Disconnect**.

Using HTC Desire EYE as a Wi-Fi hotspot

Share your data connection with other devices by turning HTC Desire EYE into a Wi-Fi hotspot.



- Make sure the data connection is turned on.
- You must have an approved data plan associated with your account from your mobile service provider to use this service. Devices connected to your Wi-Fi hotspot use data from your subscribed data plan.

1. Open the Settings app.
2. Under Wireless & Networks, tap **More**.
3. Tap **Mobile network sharing > Portable Wi-Fi hotspot**.

The first time you turn on the Wi-Fi hotspot, you'll need to set it up.

4. Enter a hotspot name or use the default.
5. Enter a password or use the default.

The password is the key other people need to enter on their device so they can connect and use HTC Desire EYE as a wireless router.

6. To help make your Wi-Fi hotspot more secure, tap > **Advanced**.

Choose from the available settings, and then press .

7. Tap the Portable Wi-Fi Hotspot **On/Off** switch to turn it on.

HTC Desire EYE is ready to be used as a Wi-Fi hotspot when you see on the status bar.



To help minimize security risks, use the default security settings and set a strong and unique password.

Sharing your phone's Internet connection by USB tethering

No Internet connection available for your computer? No problem. Use the data connection of HTC Desire EYE to connect to the Internet.



- To make sure that the USB drivers for HTC Desire EYE are up-to-date, install the latest version of HTC Sync Manager on your computer.
- Make sure you have a USB tethering service enabled by your mobile operator.
- You may need to have USB tethering added to your data plan, and it may incur additional cost. Contact your mobile service provider for details.
- Make sure that mobile data is turned on.

1. Open the Settings app.
2. Under Wireless & Networks, tap **More**.
3. Tap **Mobile network sharing > USB network setting > USB tethering**.
4. Connect HTC Desire EYE to your computer using the provided USB cable.

Wireless sharing

Bluetooth

Turning Bluetooth on or off

1. With two fingers, swipe down from the status bar to open Quick Settings.
2. Tap the **Bluetooth** tile to turn Bluetooth on or off.
3. Tap **⋮** to see a list of available devices.



Turn off Bluetooth when not in use to save battery power, or in places where using a wireless device is prohibited, such as on board an aircraft and in hospitals.


Connecting a Bluetooth headset

You can listen to music over a Bluetooth A2DP stereo headset, or have hands-free conversations using a compatible Bluetooth headset.



Before you connect your headset, make it discoverable so HTC Desire EYE can find it. Refer to your headset manual for details.

1. Turn Bluetooth on and check the list of available devices.
See [Turning Bluetooth on or off](#) on page 169.
2. If you don't see your headset listed, tap **Scan for devices** to refresh the list.
3. Tap the name of your headset in the Available Devices section. HTC Desire EYE pairs with the headset and the headset connection status is displayed in the Paired Devices section.
4. If prompted to enter a passcode, try 0000 or 1234, or consult the headset documentation to find the passcode.

When the Bluetooth headset is connected, you'll see  in the status bar.

Reconnecting a Bluetooth headset


Normally, you can easily reconnect your headset by switching on Bluetooth on HTC Desire EYE, and then turning on the headset.

However, you might have to connect manually if your headset has been used with another Bluetooth device.

1. Turn Bluetooth on and check the list of paired devices.
See [Turning Bluetooth on or off](#) on page 169.
2. Tap the headset's name in the Paired Devices section.
3. If prompted to enter a passcode, try 0000 or 1234, or consult the headset documentation to find the passcode.

If you still cannot reconnect to the headset, follow the instructions in [Unpairing from a Bluetooth device](#) on page 170, and then follow the steps under [Connecting a Bluetooth headset](#) on page 169.

Unpairing from a Bluetooth device

1. Turn Bluetooth on and check the list of paired devices.
See [Turning Bluetooth on or off](#) on page 169.
2. In the Paired devices section, tap  next to the device to unpair.
3. Tap **Unpair**.

Receiving files using Bluetooth

 
HTC Desire EYE lets you receive various files with Bluetooth, including photos, music tracks, contact info, calendar events, and documents such as PDFs.



Refer to the device's documentation for instructions on sending information over Bluetooth.

1. Turn Bluetooth on.
See [Turning Bluetooth on or off](#) on page 169.
2. On the sending device, send one or more files to HTC Desire EYE.
3. If asked, accept the pairing request on HTC Desire EYE and on the sending device. You may also be prompted to enter the same passcode or confirm the auto-generated passcode on both devices.

You'll then get a Bluetooth authorization request.
4. Tap **Pair**.
5. When HTC Desire EYE receives a file transfer request notification, slide the Notifications panel down, tap the incoming file notification, and then tap **Accept**.

6. When a file is transferred, a notification is displayed. Slide the Notifications panel down, and then tap the relevant notification to view the file.
7. You can also tap  > **Show received files** to view files received via Bluetooth.

NFC


Using NFC

With built-in NFC (near field communication) on HTC Desire EYE, you can share content to another NFC-capable mobile device in an instant.



NFC may not be available in some phones.

Beam webpages, photos, contact information, and more by holding HTC Desire EYE and the other device back to back.

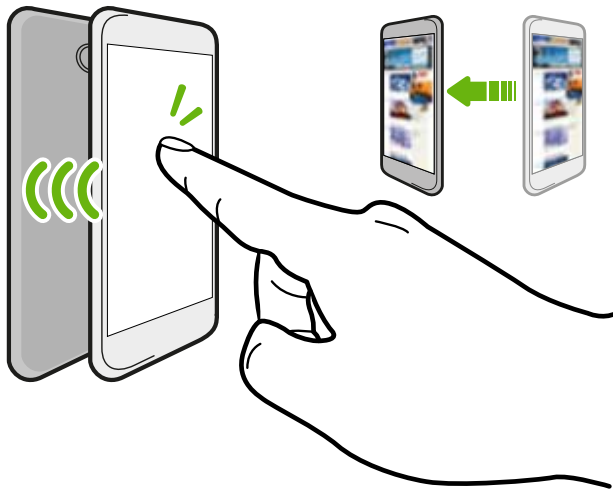

You can also use NFC for contactless payment. Availability of NFC payment depends on when your mobile operator launches this service. Contact your mobile operator for details.

Turning NFC on or off


1. Go to Settings, and then under Wireless & networks, tap **More**.
2. Tap the **NFC On/Off** switch to turn it on and off.

Beaming content



Make sure that both devices are unlocked and have NFC turned on. If the other device has an Android Beam option, make sure it is also turned on.

1. While viewing the content that you want to share, in the share options, tap **Android Beam**.
2. Hold HTC Desire EYE and the other phone back to back.

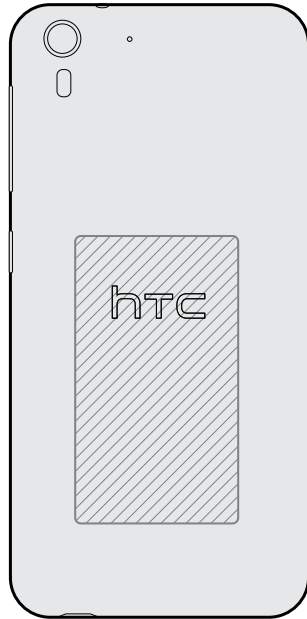

Make sure that the NFC area (shaded part) of HTC Desire EYE and the other phone's NFC area are close to one another. Experiment by slightly moving the phones until a connection is made.

3. Tap the screen.

The shared content appears on the other screen. For some items that you've shared (such as contact information), additional instructions on how to save the item will appear on the receiving device.

Settings and security

Airplane mode

When you enable Airplane (Flight) mode, all wireless radios on HTC Desire EYE are turned off, including the call function, data services, Bluetooth, and Wi-Fi.


When you disable Airplane mode, the call function is turned back on and the previous state of Bluetooth and Wi-Fi is restored.



- You can manually turn Bluetooth and Wi-Fi back on after enabling Airplane mode.
- If USB tethering is turned on, enabling Airplane mode turns it off. You need to manually turn USB tethering on after you disable Airplane mode.

Do any of the following to turn Airplane mode on or off:

- Press and hold **POWER**, and then tap **Airplane mode**.
- With two fingers, swipe down from the status bar to open the Quick Settings panel. Tap the **Airplane mode** tile to turn airplane mode on or off.

When enabled, the Airplane mode icon  is displayed in the status bar.

Scheduling when to turn data connection off

To help conserve power and data usage, you can set a time period when the data connection will automatically turn off during low peak times. This takes effect after the screen has been off for 15 minutes and there's no network activity (no downloads, streaming, or data usage).

1. Go to Settings, and then tap **Power**.
2. Tap **Sleep mode**.
3. To manually change the settings, clear **Learn sleep time automatically** if it's selected.
4. Under Sleep time, choose the start and end time when data connection is disabled.
5. Tap the Sleep mode **On/Off** switch to turn it on.

The data connection resumes when you switch the screen back on.

Automatic screen rotation



Automatic rotation is not supported in all applications.

1. Go to Settings, and then tap **Display & gestures** or **Display, gestures & buttons**.
2. Select or clear the **Auto-rotate screen** option to turn it on or off.

Setting when to turn off the screen

After a period of inactivity, the screen turns off to conserve battery power. You can set the idle time before the screen turns off.

1. Go to Settings, and then tap **Display & gestures** or **Display, gestures & buttons**.
2. Tap **Screen timeout**, and then tap the time before the screen turns off.

Screen brightness

1. Go to Settings, and then tap **Display & gestures** or **Display, gestures & buttons**.
2. Tap **Brightness level**.
3. With the **Automatic brightness** option selected, drag the slider to set the maximum brightness level. This sets a limit on how bright the screen will be when **Automatic brightness** is selected.
4. To set the brightness manually, clear the **Automatic brightness** option, and then drag the brightness slider to the left to decrease or to the right to increase the screen brightness.

Touch sounds and vibration

Some people like the sound or vibration feedback they get when touching the screen, and some don't. You can turn on or off various types of touch sounds and vibration on HTC Desire EYE.

- Touch tones when tapping the phone dial pad
- Touch sounds when tapping onscreen items
- Screen lock sounds
- Pull-to-refresh sounds
- Vibration when pressing hardware buttons
- Touch sound and vibration when tapping the HTC Sense keyboard

Turning touch sounds and vibration on and off

1. Go to Settings, and then tap **Sound & notification**.
2. Under System, select the option you want to turn on or off.

Turning off keyboard sounds and vibration

1. Go to Settings, and then tap **Language & keyboard**.
2. Tap **HTC Sense Input**.
3. Tap **Sound feedback** and then select **None** to turn off keyboard sounds.
4. Clear the **Vibration feedback** option to turn off keyboard vibration.

Changing the display language

Changing the language adjusts the keyboard layout, date and time formatting, and more.

1. Go to Settings, and then tap **Language & keyboard**.
2. Tap **Language**, and then choose the language you want to use.

Installing a digital certificate

Use client and Certificate Authority (CA) digital certificates to enable HTC Desire EYE to access VPN or secured Wi-Fi networks, and also to provide authentication to online secure servers. You can get a certificate from your system administrator or download it from sites that require authentication.





- You must set a lock screen PIN or password before installing a digital certificate.
- Some apps such as your browser or email client let you install certificates directly in the app. See the app's help for details.



1. Save the certificate file in the root folder on HTC Desire EYE.
2. Go to Settings, and then tap **Security**.
3. Tap **Install from storage**.
4. Browse to the certificate and select it.
5. Enter a name for the certificate and select how it will be used.
6. Tap **OK**.

Pinning the current screen

For added security when showing your phone to someone else, use the screen pinning option to lock the display on the current app.

1. Go to Settings, and then tap **Security**.
2. Under Advanced, tap **Screen pinning**, and then tap the **On/Off** switch to turn it on.
3. On the Apps screen, open the app that you want.
4. Press , and then tap  on the app thumbnail.
5. When prompted, tap **Start**.

If you're using a lock screen, select the **Ask for unlock pattern before unpinning** option for added security.

6. To unpin the screen, press and hold  and  at the same.

Disabling an app

Apps, even if not used often, may be running in the background and downloading data. If an app cannot be uninstalled, you can disable it.

1. Go to Settings, and then tap **Apps**.
2. Swipe to the All tab.
3. Tap the app, and then tap **Disable**.

Assigning a PIN to a nano SIM card

You can help to protect the nano SIM card by assigning a Personal Identification Number (PIN).



Make sure you have the default PIN provided by your mobile operator before continuing.

1. Go to Settings, and then tap **Security**.
2. Tap **Set up SIM card lock**.
3. Choose to lock the card, enter the default PIN of the card, and then tap **OK**.
4. To change the card PIN, tap **Change SIM PIN**.

Restoring a nano SIM card that has been locked out

If you enter the wrong PIN more times than the maximum number of attempts allowed, the card will become “PUK-locked.”

You need a Pin Unlock Key (PUK) code to restore access to HTC Desire EYE. Contact your mobile operator for this code.

1. On the Phone dialer screen, enter the PUK code, and then tap **Next**.
2. Enter the new PIN you want to use, and then tap **Next**.
3. Enter the new PIN again, and then tap **OK**.

Setting a screen lock

Help protect your personal information and help prevent others from using HTC Desire EYE without your permission.

Choose to set a screen lock pattern, numeric PIN, or other means of securing your phone. You'll be asked to unlock the screen every time HTC Desire EYE is turned on or when it's idle for a certain period of time.

1. Go to Settings, and then tap **Security**.
2. Tap **Screen lock**.
3. Select a screen lock option and set up the screen lock.
4. Tap **Lock phone after**, then specify the idle time before the screen is locked.



You can also clear **Make pattern visible** or **Make passwords visible** if you don't want your screen lock to display as you enter it onscreen.

Setting up Smart Lock

Set up your phone to detect your face or another trusted device before you can unlock the screen.

1. Go to Settings, and then tap **Security**.
2. Tap **Screen lock**, and then select and set up a screen lock.
This will be your backup screen lock method.
3. On the Security screen, tap **Smart Lock**.
4. Confirm your screen lock.
5. Choose what you want your phone to detect before it unlocks.
6. Follow the onscreen instructions.
7. Tap **Lock phone after**, and then specify the idle time before the screen is locked.

To help make Smart Lock more reliable and more secure, you can train HTC Desire EYE to recognize your face in different situations, such as when you're wearing glasses or sporting a beard.

Tap **Smart Lock**, confirm your screen lock, then tap **Trusted face** > **Improve face matching**. Follow the onscreen instructions.

Hiding sensitive info from the lock screen

For apps that you consider personal, you can choose to show its notifications but hide the preview content from the lock screen.



- You must first set a screen lock on your phone.
- Preview content of a notification may still show in the Notifications panel.

1. Go to Settings, and then tap **Sound & notification**.
2. Tap **When device is locked** > **Show all notifications content**.
3. Tap **App notifications**, and then tap an app from the list.
4. Tap the Sensitive **On/Off** switch to turn it on.
5. Press ↶ to return to the Sound & notification screen, and then tap **When device is locked**.
6. Tap **Hide sensitive notification content**.

Hiding the caller from the lock screen

You can prevent the names and photos of incoming callers from appearing on the lock or security screens.



The caller must be in your private contacts list.

1. Go to Settings, and then tap **Security**.
2. Under Lock screen, select **Incoming phone calls**.

Trademarks and copyrights

©2015 HTC Corporation. All Rights Reserved.

HTC, the HTC logo, HTC Desire, HTC Eye, HTC BlinkFeed, HTC BoomSound, HTC Connect, HTC Dot View, HTC Sense, Motion Launch, VideoPic, and Zoe are trademarks or service marks of HTC Corporation.

Google, Android, Android Beam, Google Chrome, Google Drive, Google Maps, Google Now, Google Play, Google Voice Search, Google Wallet, and YouTube are trademarks of Google Inc.

Microsoft, Windows, ActiveSync, PowerPoint, Outlook.com, and Windows Media are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.

Wi-Fi® and Miracast are registered trademarks of the Wireless Fidelity Alliance, Inc.

LTE is a trademark of European Telecommunications Standards Institute (ETSI).

DLNA is a trademark or registered trademark of Digital Living Network Alliance. All rights reserved. Unauthorized use is strictly prohibited.

Dropbox is a trademark of Dropbox, Inc.

iCloud, iPhone, iTunes, and Mac OS are trademarks of Apple Inc. registered in the U.S. and other countries.

Polaris Office is a trademark of Infraware, Inc.

microSD is a trademark of SD-3C LLC.

Foursquare is a trademark of Foursquare Labs, Inc.

Facebook is a trademark of Facebook, Inc.

All other trademarks and service marks mentioned herein, including company names, product names, service names and logos, are the property of their respective owners and their use herein does not indicate an affiliation with, association with, or endorsement of or by HTC Corporation. Not all marks listed necessarily appear in this User Guide.

The HTC Sync Manager software can be used with materials that you own or are lawfully authorized to use and/or duplicate. Unauthorized use and/or duplication of copyrighted material may be a violation of copyright law in the United States and/or other countries/regions. Violation of U.S. and international copyright laws may subject you to significant civil and/or criminal penalties. HTC Corporation shall not be held responsible for any damages or losses (direct or indirect) that you may incur as a result of using this software.

Screen images contained herein are simulated. HTC shall not be liable for technical or editorial errors or omissions contained herein, nor for incidental or consequential damages resulting from furnishing this material. The information is provided “as is” without warranty of any kind and is subject to change without notice. HTC also reserves the right to revise the content of this document at any time without prior notice.

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording or storing in a retrieval system, or translated into any language in any form without prior written permission of HTC.

Index

A

Accounts

- syncing 122

Airplane mode 173

Alarms

- setting 159

Android Beam

- See NFC

Apps

- arranging 57
- grouping into a folder 57, 58
- hiding or unhiding 58
- icons on Home screen 54
- installing 26
- installing from Google Play 25
- installing from the web 26
- on Home screen 54
- restoring 26
- uninstalling 26
- updating 24

Auto Selfie 69

B

Backup

- about 123
- HTC Backup 124
- HTC Sync Manager 128
- options 123
- restoring backed up apps 26

Battery

- charging 16
- checking usage 46
- saving battery power 47

BlinkFeed

- See HTC BlinkFeed

Bluetooth

- connecting a Bluetooth headset 169
- receiving information 170

Browser

- bookmarks 106
- history 106, 107

- incognito tab 107
- Reading list or Watch list 105
- tabs 105
- using 104
- viewing desktop version 104

Burst mode 68

C

Calendar 147–150

- creating an event 148
- dual time zone 147
- meeting conflicts 148
- meeting invitations 149
- reminders 150
- sending quick response 150
- views 147

Call history 94

Camera

- basics 64, 66, 67
- capture modes 64
- continuous shooting 68
- Crop-Me-In 72
- filters 65
- flash 65
- HDR 74
- manual settings 75
- Pan 360 72
- Photo Booth 71
- Portrait scene 68
- recording a video 67
- selfie 68–70
- slow motion 74
- Split Capture 71
- standby 64
- sweep panorama 73
- taking a photo 66
- taking photo while recording 67
- using volume buttons as controls 65
- video resolution 68
- zooming 65

Capture modes

- modifying and saving 75
- switching to 64

Capture screen 37

Car

- about 153
- handling calls 155
- HTC Car Kit 153
- navigation 154
- playing music 154
- voice commands 154

Change phone language 175

Clock 158, 159

- alarm 159
- setting date and time 158

Conference call 94

Contacts

- adding 133
- copying contacts 20, 135
- importing contacts 20, 135
- transferring contacts 20, 135

Continuous shooting 68

Copy

- files 118

Copying

- text 42

Crop-Me-In 72

D

Data connection

- data roaming 163
- sharing 168
- turning on or off 162
- usage 162

Data transfer

- from Android phone 19
- from iPhone and other phones 20
- transferring contacts 20

Display

- changing the time before the screen turns off 174
- screen brightness 174
- screen rotation 174
- Sleep mode 30

DLNA 115

Driving

- See Car

E

Email

- See Mail

Exchange ActiveSync

- flagging an email 143
- meeting request 144
- Out of office 143
- sending a meeting request 144

expanded storage 117

F

Face Fusion 83

Face Tracking 89

Face unlock 177

Factory reset 130

Files

- copying 118

Finger gestures 32

Firmware

- See Software update

FM Radio 113

- using 113

Folder

- grouping apps 57
- grouping bookmarks 106
- removing items 57, 58

FOTA

- See Software update

G

Gallery

- creating animated gif 85
- creating sequence shots 85
- custom effects 83
- editing group shots 86
- editing photos 82
- Face Fusion 83
- removing objects in photo 86
- Video Highlights
- See Zoe
- video trimming 86
- viewing photos and videos 77
- viewing photos and videos by event 77
- viewing photos by location 78
- watching videos 86

Geotag 77

Gestures

- motion gestures 31
- touch gestures 32

Gmail 145

Google Drive

- about 120
- storage space 121
- uploading photos and videos 121

Google Maps 151

Google Now 101, 102

- setting up 101
- turning off 102

Google Play

- installing apps 25
- refund 26

Google Voice Search 103

GPS (Global Positioning System)

See Location settings

Group messaging 97

H

Hands free 169

Hard reset

See Factory reset

HDMI 115

HDR 74

Headphones

See Bluetooth

Home screen

- adding or removing widget panel 55
- apps 54
- arranging widget panels 55
- changing your main Home screen 56
- feeds 60
- folder 57
- launch bar 53
- rearranging widgets and icons 55
- removing widgets and icons 55
- shortcuts 54
- wallpaper 53
- widget panel 21
- widgets 53

Hotspot

See Wireless router

HTC Backup 124

HTC BlinkFeed

- about 60
- adding regional editions 62

- adding RSS feeds 62

- deleting items 63

- posting to social networks 63

- saving articles for later 62

- selecting feeds 61

- setting up custom topics 61

- showing social network and app feeds 61

- turning on or off 60

HTC Car

See Car

HTC Clock 158, 159

- setting an alarm 159

HTC Media Link HD 115

HTC Sense version 23

HTC Sync Manager 128

I

Idle screen

See Lock screen

Incognito mode

See Browser, incognito tab

Internet

- browsing 104

Internet connection

- VPN 165
- Wi-Fi 164
- wireless router 167

K

Keyboard

- dictionary 45
- entering text 43
- entering text by speaking 46
- HTC Sense keyboard 43
- layout 43
- multi-language keyboard 44
- predictive text 44
- shortcuts 45
- speech recognition 46

Kid mode

- about 161
- choosing apps 161
- closing 161

L

Language

- system language 175

Live Makeup 69

Location settings 151

Lock screen

- answering a call 92
- dismissing an alarm 30
- opening an app 36
- rejecting a call 92
- unlocking 30

Low battery 47

Low storage 118

M

Mail

- attachments 141
- carbon copy, blind copy (cc, bcc) 141
- deleting 143
- draft 141
- replying 141
- searching 143
- sending 141
- sorting 142

Mail folders

- moving email messages 142

Making calls

- calling 90

Maps

- Google Maps 151

Master reset

- See Factory reset

Meeting request 144

Messages

- block box 99
- deleting a conversation 100
- draft message 96, 97
- forwarding 98
- group SMS 97
- locking 100
- replying 97
- saving as task 98
- secure box 98
- sending 96

microSD card 13

MMS

- See Multimedia message

Morph

- See Face Fusion

Motion Launch 38

Multimedia message

- attachment 96
- group MMS 97
- sending 96

Music

- adding a song to a queue 109
- album covers 110
- artist photos 110
- BoomSound profile 109
- listening 108
- lyrics 111
- playing music from the Lock screen 108
- playlist 109
- setting a song as ringtone 110
- transferring from iPhone 129

N

Navigation

- See Car

NFC (Near Field Communication) 171

Notifications

- panel 41

O

Online accounts

- adding accounts 122
- removing accounts 122
- syncing manually 122
- what can you sync with 122

Online storage

- Google Drive 120

P

Pair a Bluetooth headset 169

Pan 360 72

People

- adding a new contact 133
- contact groups 137
- contact link suggestions 136
- copying contacts 20, 135, 136
- editing contacts 134
- filtering your contacts 132
- groups 137

- importing contacts 20, 135
- merging contact information 136
- personal profile 133
- sending contact information 137
- transferring contacts 20, 135

Phone calls

- blocking a call 95
- call history 94
- calling 90
- conference call 94
- emergency call 92
- extension number 91
- Face Tracking 89
- missed calls 91
- Motion Launch 39
- muting the microphone 93
- putting a call on hold 93
- receiving calls 92
- Screen Share 90
- Smart Dial 90
- speakerphone 93
- speed dial 91

Phone information 23

Phone settings

See Settings

Phone updates 23

Photo Booth 71

Photos

- custom effects 83
- location 78
- transferring from computer 21
- transferring from iPhone 129
- viewing photos and videos 77
- viewing photos and videos by event 77
- viewing photos by location 78

Power

- charging the battery 16
- checking battery usage 46
- saving power 47
- sleep mode 30

Print screen

See Capture screen

PUK (PIN Unblock Key) 177

Q

Quick call 39

Quick settings 22

R

Radio

See FM Radio

Reading list 105

Recent apps 37

Recording your voice 159

Reset 130

Ringtone

- editing 110
- setting song as ringtone 110

Router

See Wireless router

S

Screen 30, 37, 174

- adjusting brightness 174
- capture 37
- changing the time before the screen turns off 174
- idle screen 30
- rotation 174
- Sleep mode settings 174

Screen lock 177

Screen Share 90

Screen shot

See Capture screen

Scribble

- about 156
- composing a note 156
- grouping notes 158
- inserting images 157
- photo blog template 157
- templates 156

SD card 13

Search

- searching phone and Web 103
- voice search 103

Security

- protecting phone with screen lock 177
- security certificates 165

self-timer 70

selfie

- Auto Selfie 69
- Live Makeup 69
- self-timer 70
- Voice Selfie 70

Settings

- About 23
- display language 175
- Storage 117

Setup

- contacts from old phone 20
- initial setup 18
- photos, music, videos from old phone 21

Sharing

- events 149
- text 42
- TV 114

sharing phone screen 90

Shortcuts 36

Sleep mode 30

Slideshow

- highlight video 88

Slow motion video 74

Smart network sharing 168

SMS

See Messages

Soft reset 130

Software update 23

Sound

- ringtone, notifications, and alarm 52
- switching profiles 95

Speakerphone 93

Speed dial 91

Split Capture 71

Storage 117

Sweep panorama 73

Sync

- HTC Sync Manager 128

T

Tasks 160

- about 160
- creating a task 160
- managing 160
- managing lists 160

Tethering

See USB Tethering

Text message 96

U

Upgrade

See Software update

Upload

- Google Drive 121

USB Tethering 168

V

Video chat

- Face Tracking 89
- Screen Share 90

Video Highlights

See Zoe

VideoPic 67

Videos

- editing 86
- playback speed 87
- recording 67
- taking photo while recording 67
- transferring from computer 21
- watching 86

Voice input 46

Voice Recorder 159

Voice search 103

Voice Selfie 70

VPN 165, 166

- adding a connection 166
- connecting 166
- disconnecting 166

W

Waking up phone

- through Motion Launch 38
- through power button 30

Wallpaper

- changing 53

Watch list 105

Weather

- checking weather 159

Wi-Fi 164, 165

- connecting via WPS 165
- turning on 164

Widgets

- adding 53
- changing settings 54
- rearranging 55
- removing 55, 56
- resizing 54

Wireless display 114

Wireless router 167

Word prediction 44
- bilingual prediction 44

Y

YouTube 111
- finding videos of songs 111
- watching 111

Z

Zoe 88